

REMOVAL


1. REMOVE UPPER FRONT FENDER APRON SEAL
2. REMOVE UPPER RADIATOR SUPPORT SEAL
3. REMOVE FRONT BUMPER COVER

(See page BO-4)



4. REMOVE HEADLIGHT

- (a) Remove the 3 bolts.
- (b) Disconnect the connectors, then remove the headlight as shown in the illustration.
- (c) Employ the same manner described above to the other side.

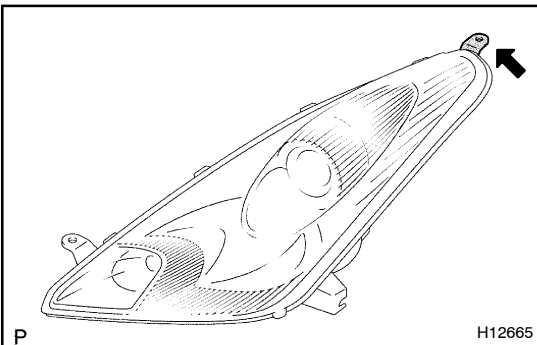

HINT:

At the time of installation, please refer to the following item.
If the shown part of the headlight is damaged, the headlight can be reinstalled to the body by installing a bracket to it.