


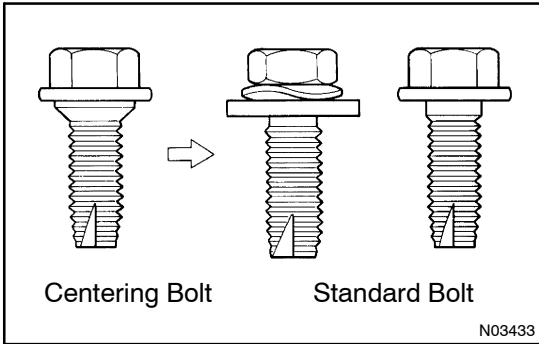


HOOD ADJUSTMENT

B0253-01

HINT:


Since the centering bolt is used as the hood hinge and lock set bolt, the hood cannot be adjusted with it on. Substitute the standard bolt for the centering bolt.

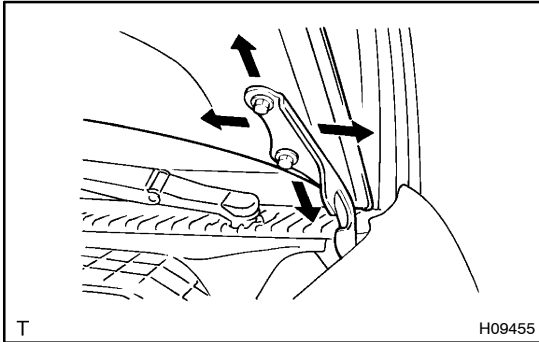

1. ADJUST HOOD IN FORWARD/REARWARD AND LEFT/LIGHT DIRECTIONS


- Adjust the hood by loosening the hood side hinge bolts.
- Tighten the loosened bolts again.

Torque: 13 N·m (130 kgf·cm, 9 ft·lbf)

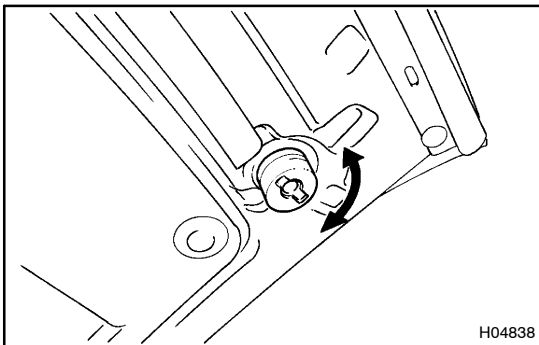

2. ADJUST FRONT EDGE OF HOOD IN VERTICAL DIRECTION

Adjust the hood by turning the cushions.

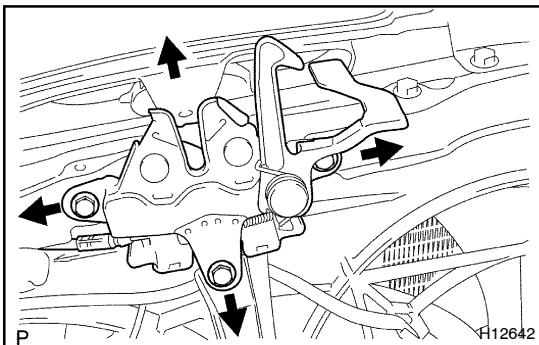

3. ADJUST HOOD LOCK

- Remove the upper front fender opron seal.
- Remove the upper radiator support seal.
- Remove the radiator reservoir.
- Adjust the hood lock by loosening the bolts.
- Tighten the loosened bolts again.

Torque: 6.9 N·m (70 kgf·cm, 61 in·lbf)

- Reinstall the removed parts.