


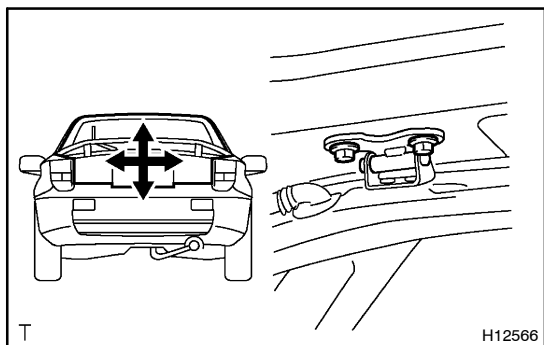


ADJUSTMENT

1. ADJUST DOOR IN LEFT/RIGHT AND VERTICAL DIRECTIONS

Loosen the door side hinge bolts to adjust.


Torque: 11 N·m (115 kgf·cm, 8 ft·lbf)

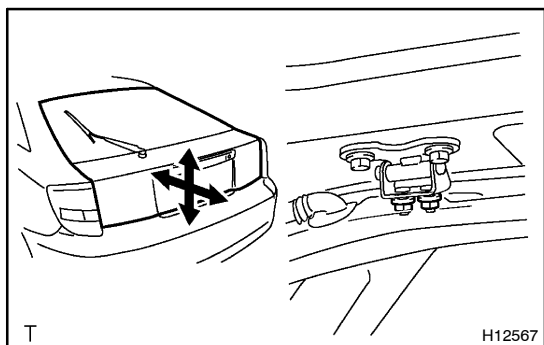

2. ADJUST DOOR IN FORWARD/REARWARD AND VERTICAL DIRECTIONS


Loosen the body side hinge bolts and nuts to adjust.

Torque: 19 N·m (196 kgf·cm, 14 ft·lbf)

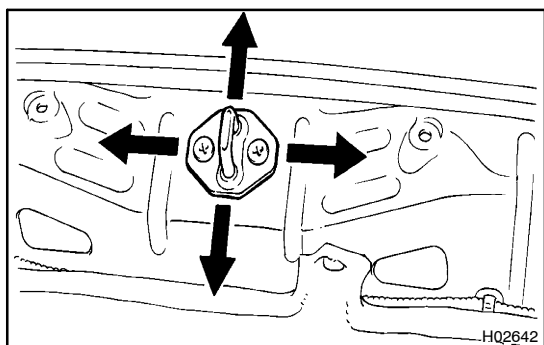

3. ADJUST DOOR LOCK STRIKER

- Check that the door fit and door linkages are adjusted correctly.
 - Remove the luggage compartment mat.
 - Remove the 2 hooks and rear deck trim cover.
 - Loosen the striker mounting screws.
- Torque: 11 N·m (115 kgf·cm, 8 ft·lbf)**
- Using a plastic hammer, tap the striker to adjust.
 - Reinstall the rear deck trim cover and 2 hooks.

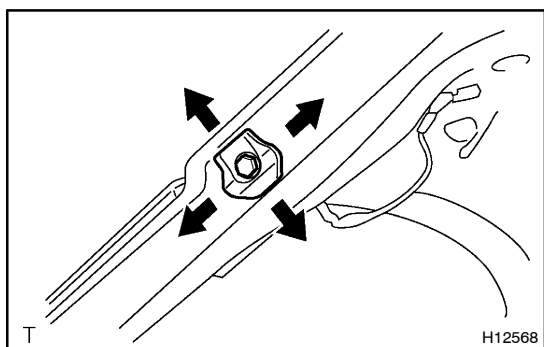

4. ADJUST LOWER STOPPER

Loosen the stopper mounting bolts to adjust.