


## REMOVAL

### 1. REMOVE WIPER ARMS

Remove the 2 wiper arm head caps, 2 nuts and 2 wiper arms.

### 2. REMOVE HOOD TO COWL TOP SEAL

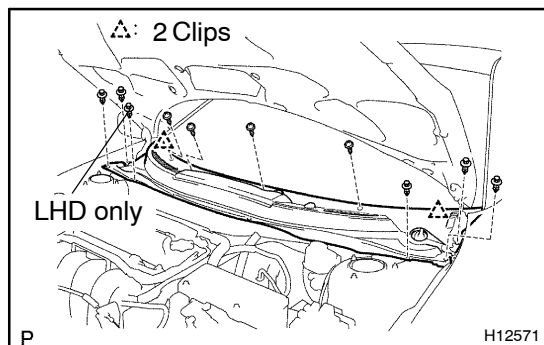

### 3. REMOVE COWL TOP VENTILATOR LOUVER

#### (a) LHD:

Remove the 4 screws and 6 clips.

#### (b) RHD:


Remove the 4 screws and 5 clips.

#### (c) Using a screwdriver, remove the cowl top ventilator louver, then disconnect the washer hoses.

#### HINT:

Tape the screwdriver tip before use.


#### (d) Remove the 2 washer nozzles from the cowl top ventilator louver.

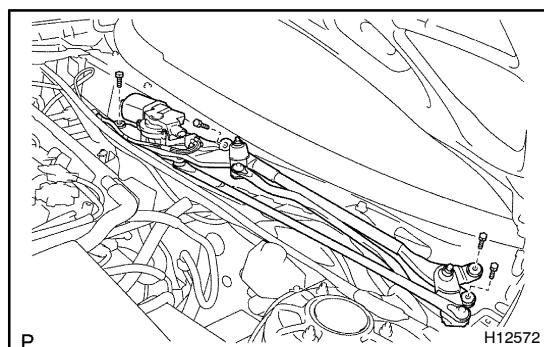

### 4. REMOVE WIPER MOTOR AND LINK ASSEMBLY

#### (a) Disconnect the connector.

#### (b) Remove the 4 bolts and wiper motor and link assembly.

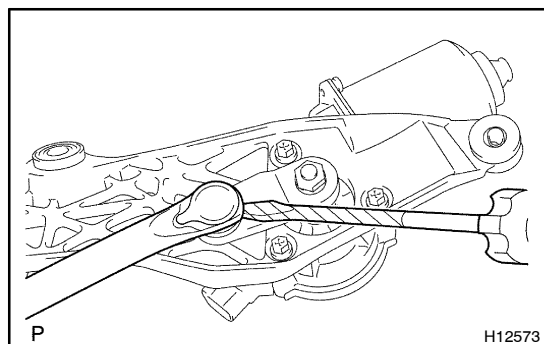


### 5. REMOVE WIPER MOTOR

#### (a) Using a screwdriver, disconnect the wiper link from the motor.

#### HINT:

Tape the screwdriver tip before use.

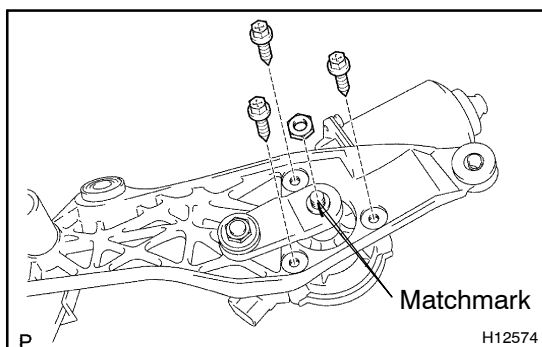

- (b) Remove the nut.
- (c) Place the matchmarks on the wiper link and motor.
- (d) Remove the 3 screws and wiper motor from the wiper link.