



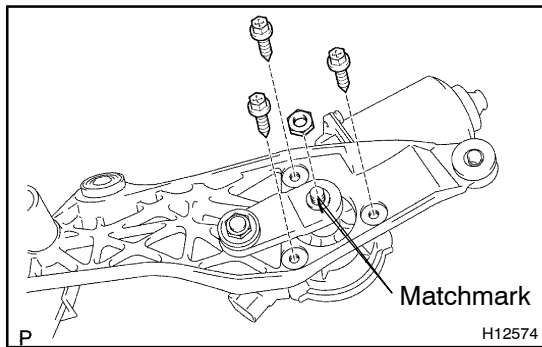

## INSTALLATION


### 1. INSTALL WIPER MOTOR

- Install the wiper motor with the 3 screws to the wiper link.  
**Torque: 5.4 N·m (55 kgf·cm, 48 in·lbf)**
- Align the matchmarks on the wiper link and wiper motor, then install the nut.
- Connect the wiper link to the wiper motor.

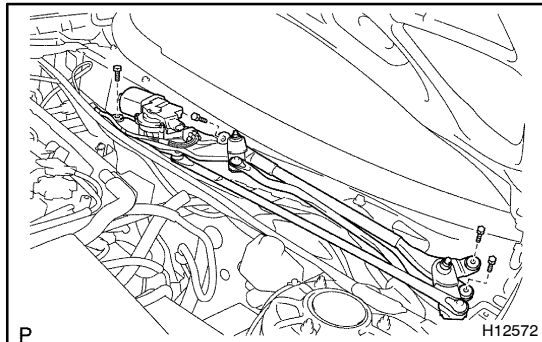

### 2. INSTALL WIPER MOTOR AND LINK ASSEMBLY

- Install the wiper motor and link assembly with the 4 screws.  
**Torque: 5.4 N·m (55 kgf·cm, 48 in·lbf)**
- Connect the connector.

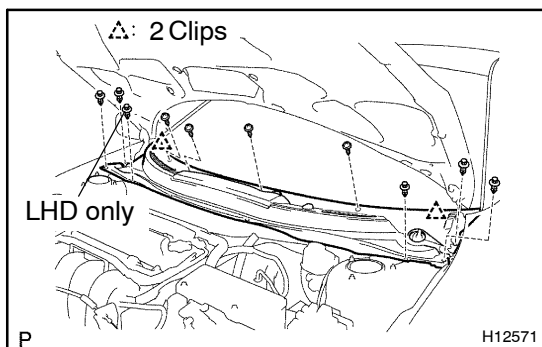

### 3. INSTALL COWL TOP VENTILATOR LOUVER

- Install the 2 washer nozzle to the cowl top ventilator louver.
- LHD:  
Connect the washer hose, then install the cowl top ventilator louver with the 4 screws and 6 clips.
- RHD:  
Connect the washer hose, then install the cowl top ventilator louver with the 4 screws and 5 clips.


#### HINT:

Check that the 2 clips on the back side of the cowl top ventilator louver are surely fixed to the body.

### 4. INSTALL HOOD TO COWL TOP SEAL

### 5. INSTALL WIPER ARMS

- Operate the wipers once and turn the wiper switch OFF.
- Install the wiper arms and tighten the nuts by hand.

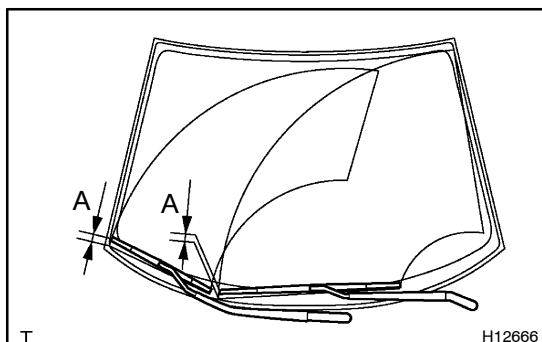

- Adjust the installation positions of the wiper arms to the positions as shown in the illustration.  
**A: 30 ± 7.5 mm (1.18 ± 0.295 in.)**
- Torque the nuts.  
**Torque: 32 N·m (323 kgf·cm, 23 ft·lbf)**
- Install the 2 wiper and head caps.