


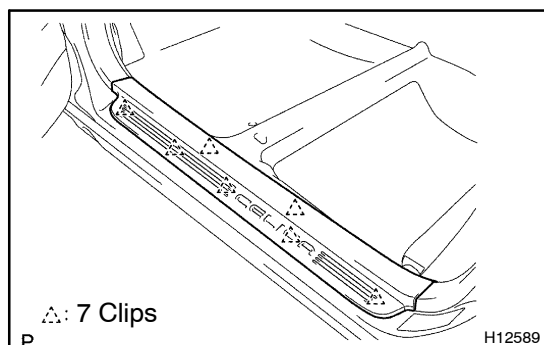

REMOVAL

1. REMOVE DOOR SCUFF PLATE

Using a screwdriver, remove the door scuff plate.

HINT:

Tape the screwdriver tip before use.


2. REMOVE PACKAGE TRAY TRIM

3. REMOVE REAR SEAT (See page BO-103)

4. REMOVE LUGGAGE COMPARTMENT MAT

5. w/ Deck floor box:

REMOVE LH AND RH DECK FLOOR BOX

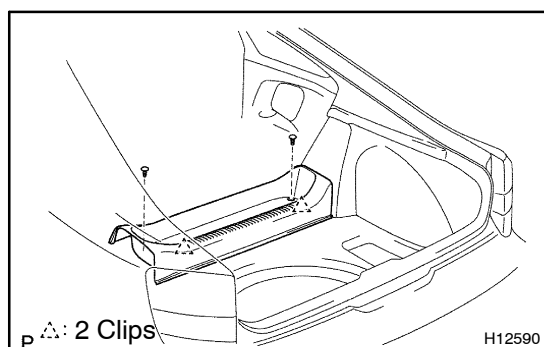


6. REMOVE LUGGAGE COMPARTMENT TRAY

(a) Using a clip remover, remove the 2 clips.

(b) Using a screwdriver, remove the luggage compartment tray.

HINT:

Tape the screwdriver tip before use.

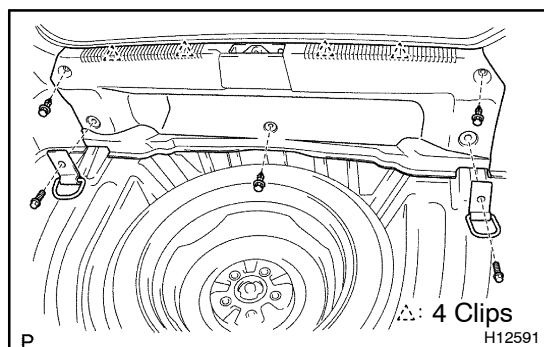

7. REMOVE REAR DECK TRIM COVER


(a) Remove the 2 bolts and 2 hooks.

(b) Remove the 3 clips.

(c) Using a screwdriver, remove the rear deck trim cover.

HINT:

Tape the screwdriver tip before use.

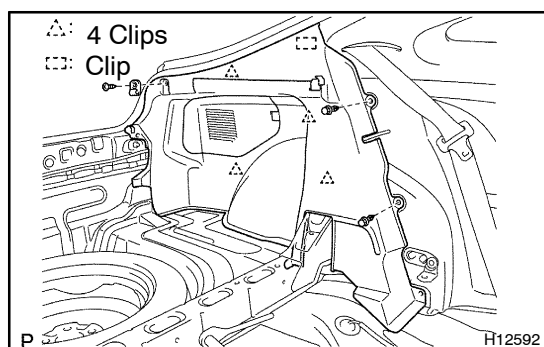

8. REMOVE DECK TRIM SIDE PANEL

(a) Remove the screw and No. 1 luggage compartment trim hook.

(b) RH side:

Using a screwdriver, remove the rear room light, then disconnect the connector.

HINT:

Tape the screwdriver tip before use.

(c) Remove the 2 clips.

(d) Using a screwdriver, remove the deck trim side panel.


HINT:

Tape the screwdriver tip before use.

9. REMOVE REAR SEATBACK HINGE

10. REMOVE REAR SEATBACK LOCK STRIKER

11. REMOVE REAR SEAT OUTER BELT FLOOR ANCHOR

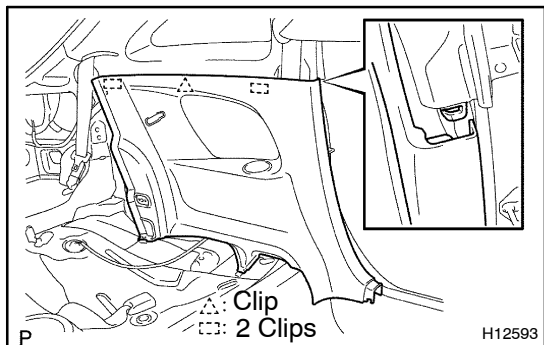

12. REMOVE QUARTER TRIM PANEL


Using a screwdriver, remove the quarter trim panel.

HINT:

Tape the screwdriver tip before use.

13. REMOVE FRONT SEAT OUTER BELT SHOULDER ANCHOR

Torque: 42 N·m (430 kgf·cm, 31ft·lbf)

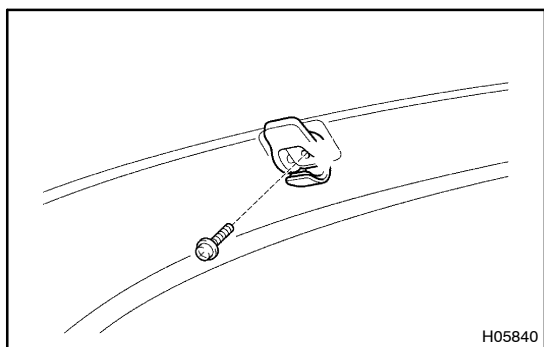


14. REMOVE ROOF SIDE INNER GARNISH

(a) Using a screwdriver, open the cap of coat hook.

HINT:

Tape the screwdriver tip before use.


(b) Remove the screw and coat hook.

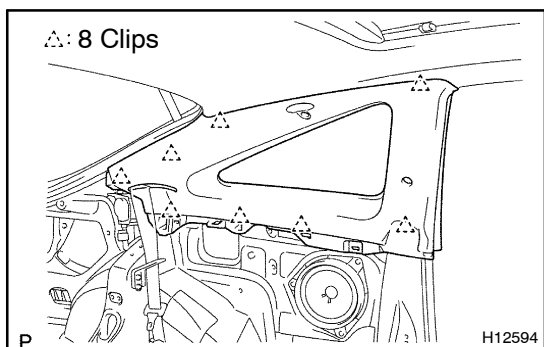


(c) Using a screwdriver, remove the roof side inner garnish.

HINT:

Tape the screwdriver tip before use.

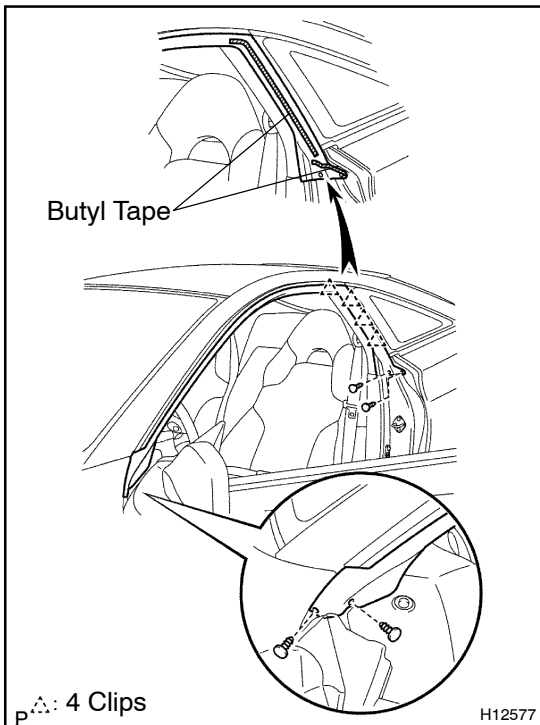**15. REMOVE ROOF SIDE RAIL WEATHERSTRIP**

- (a) Using a clip remover, remove the 4 clips.
- (b) Remove the roof side rail weatherstrip.

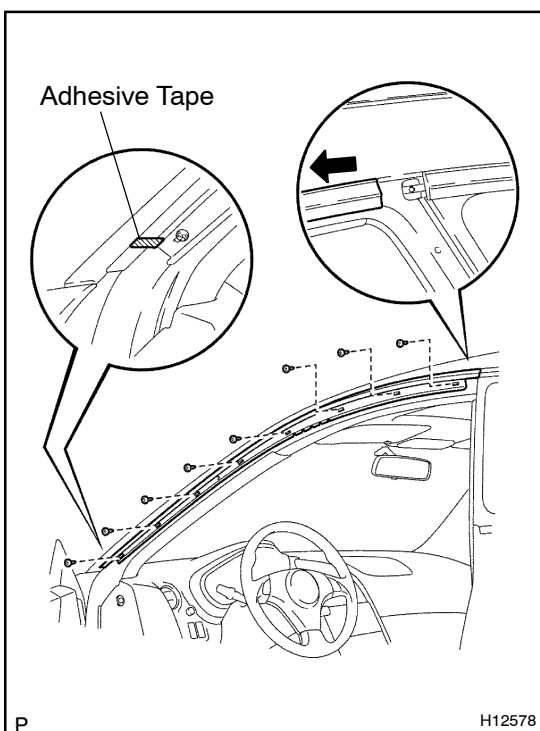**16. REMOVE ROOF DRIP SIDE MOULDING**

Remove the 8 screws and roof drip side moulding.



17. REMOVE QUARTER WINDOW GLASS

- (a) Using a knife, cut off the moulding as shown in the below illustration.

NOTICE:

Do not damage the body with the knife.

- (b) Remove the remaining moulding.

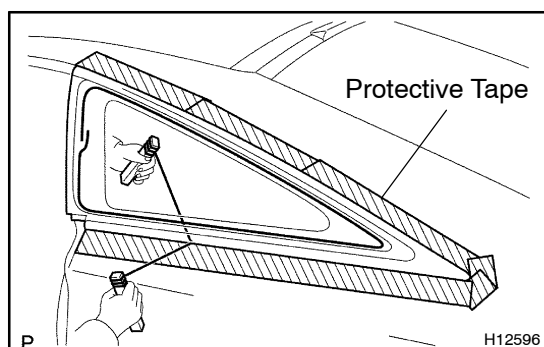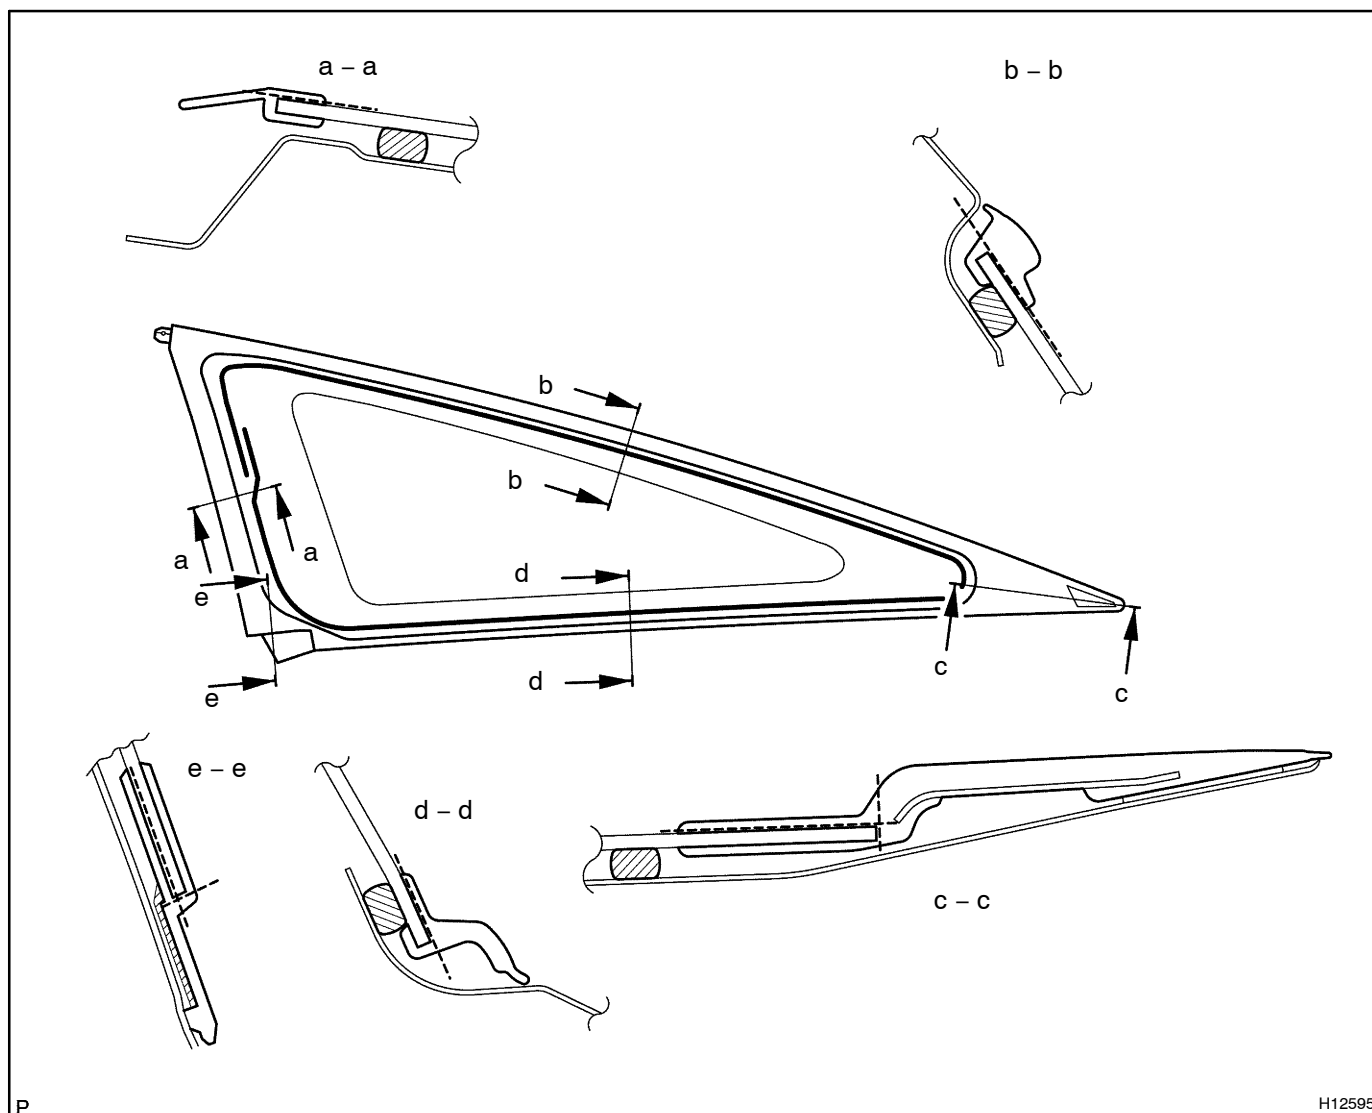

- (c) Insert a piano wire between body and glass and let it pass through.


- (d) Tie both wire ends to wooden blocks or similar objects.

HINT:

Apply protective tape to the outer surface to keep the surface from being scratched.

NOTICE:


When separating the glass, take care not to damage the paint and exterior.

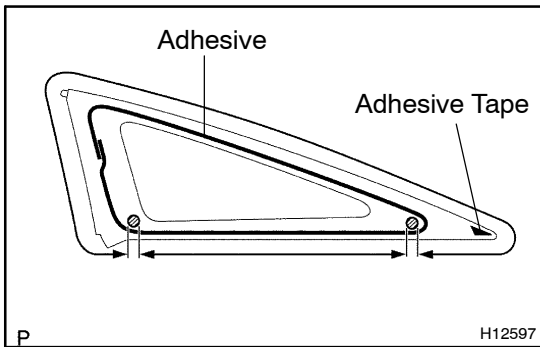

(e) Cut the adhesive by pulling the piano wire around it.

HINT:

Cut the adhesive areas as shown in the illustration, leaving the adhesive where the clips are.

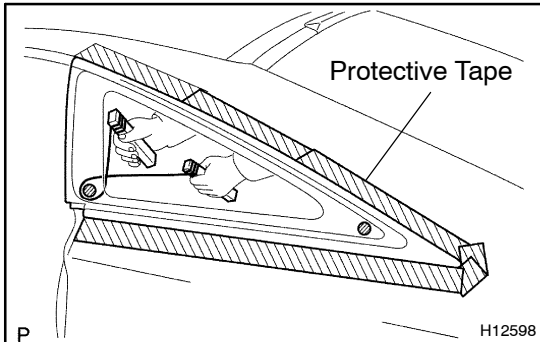

(f) Push the piano wire through as shown in the illustration, cut off the adhered part to the clips.

(g) Remove the glass.

NOTICE:

Leave the adhesive on the body as much as possible when cutting off the glass.