

REMOVAL

1. **REMOVE ROOF HEADLINING**
(See page BO-89)
2. **REMOVE SLIDING ROOF GLASS**
 - (a) Remove the 4 screws.
 - (b) Pull the glass upward to remove it.
3. **REMOVE DRIVE GEAR**

NOTICE:

Remove the drive gear with the sliding roof fully closed.

- (a) Remove the 2 screws and room light bracket.
- (b) Disconnect the connector.
- (c) Remove the 2 bolts and drive gear.
Torque: 5.4 N·m (55 kgf·cm, 48 ft·lbf)
4. **REMOVE SLIDING ROOF HOUSING**
 - (a) Disconnect the 4 drain hoses from the housing.
 - (b) Remove the 12 bolts and 6 brackets.
Torque: 5.4 N·m (55 kgf·cm, 48 ft·lbf)
 - (c) Remove the 4 nuts, then remove the housing.
Torque: 5.4 N·m (55 kgf·cm, 48 ft·lbf)

