


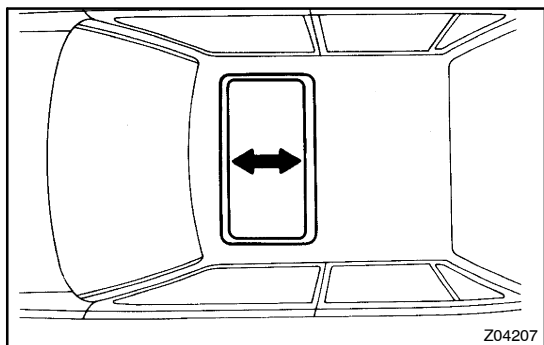

ADJUSTMENT

1. ADJUST SLIDING ROOF GLASS FORWARD OR REARWARD


- (a) Loosen the sliding roof glass installation bolts.
- (b) Adjust the slide roof glass forward or rearward.

2. ADJUST SLIDING ROOF GLASS IN CLEARANCE (Difference in left and right clearance)

- (a) When the front or rear alignment is not correct, remove the drive gear and sliding roof glass, then adjust the drive cables.

NOTICE:

Remove the drive gear with the sliding roof fully closed.

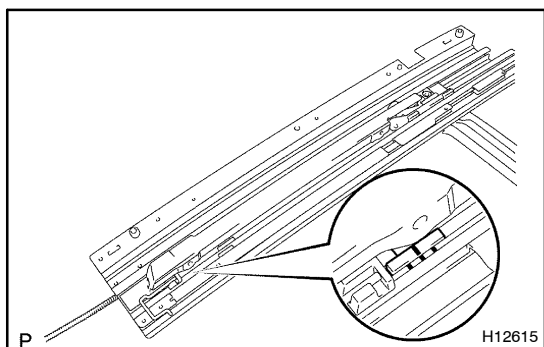

- (b) Adjust by sliding the cables forward or rearward to align the 2 marks as shown in the illustration.
- (c) Install the drive gear and sliding roof glass.