

INSTALLATION

Installation is in the reverse order of removal ([See page BO-89](#)).

HINT:

After installing the sliding roof, sliding roof need to be re-initialized.

Refer to [BE-100](#).