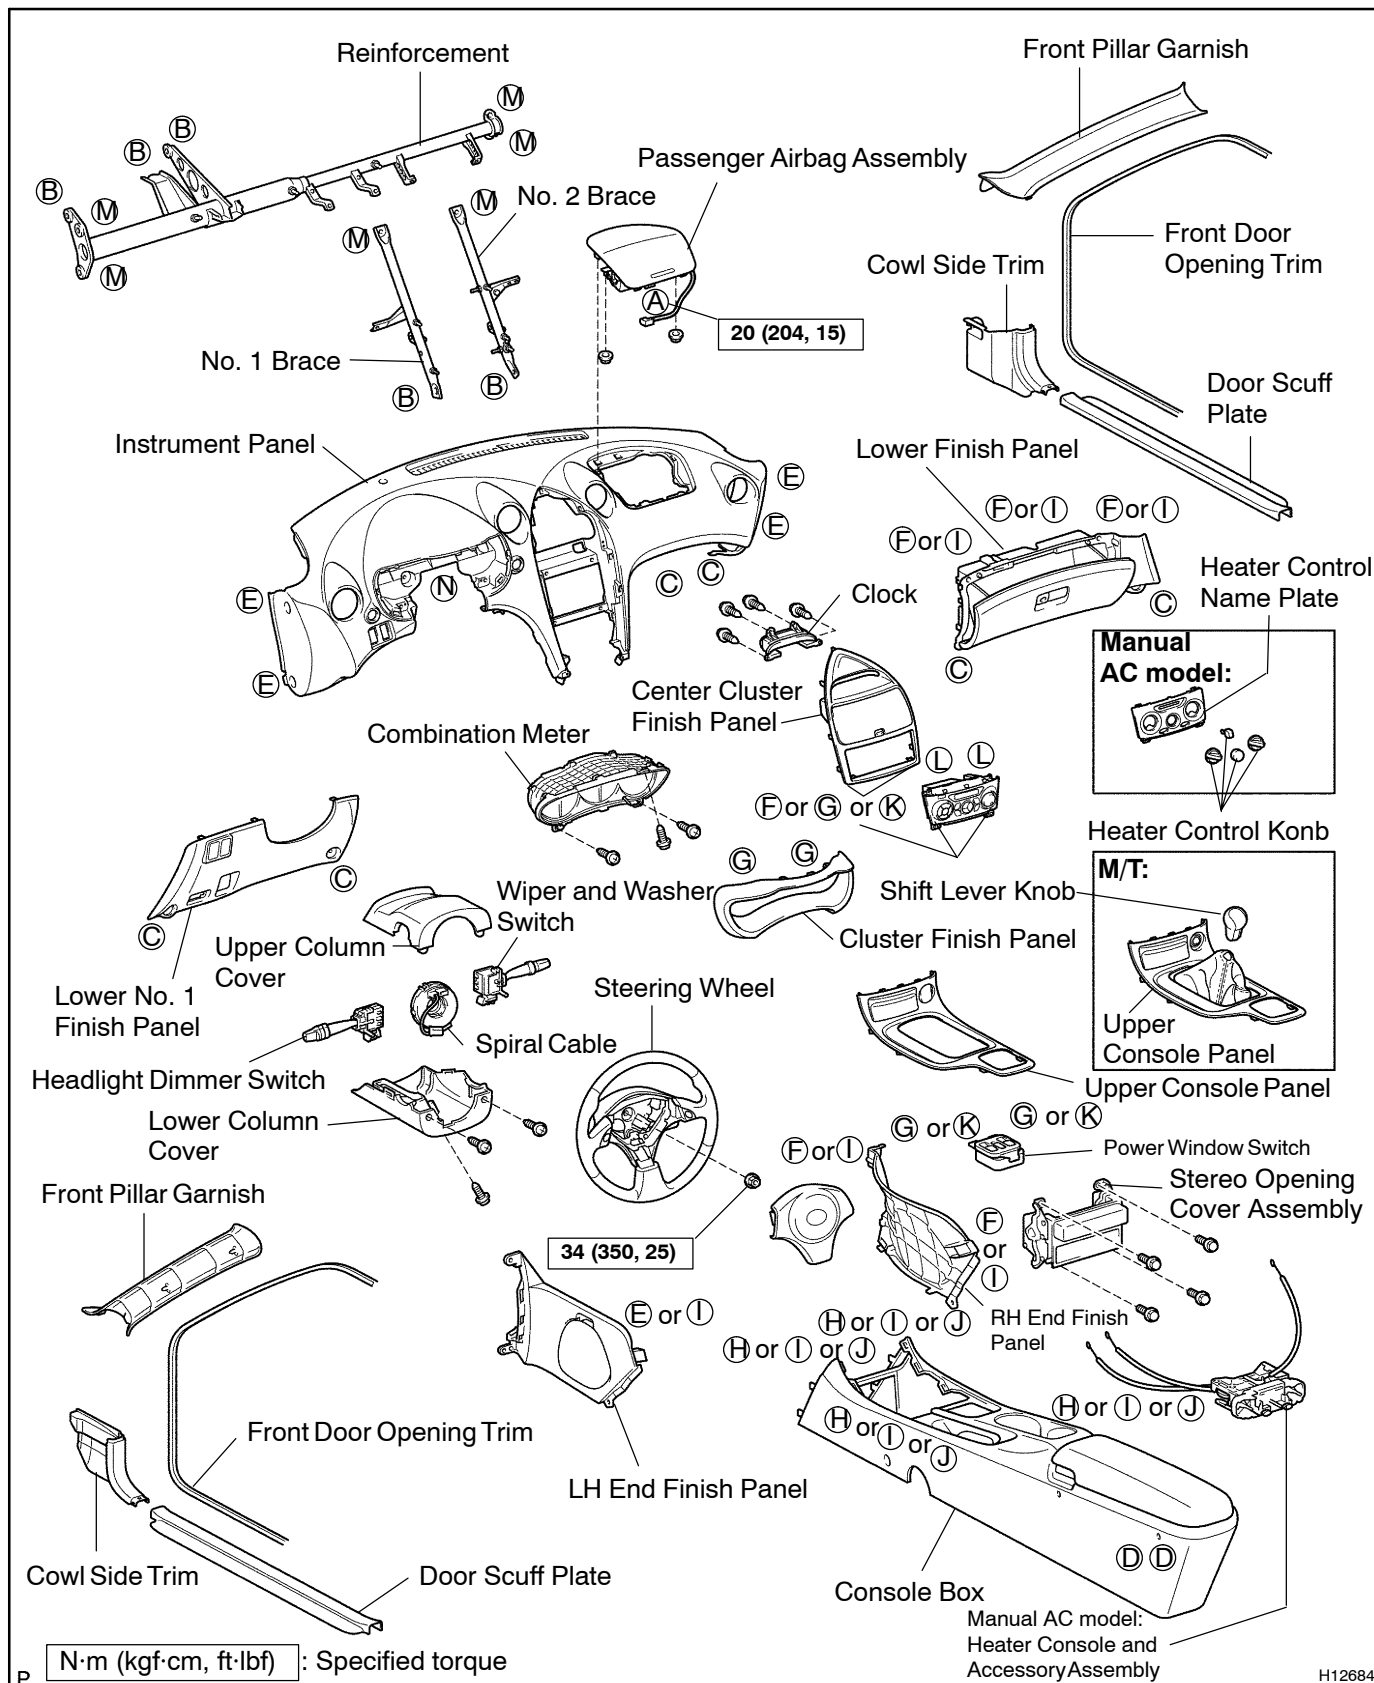
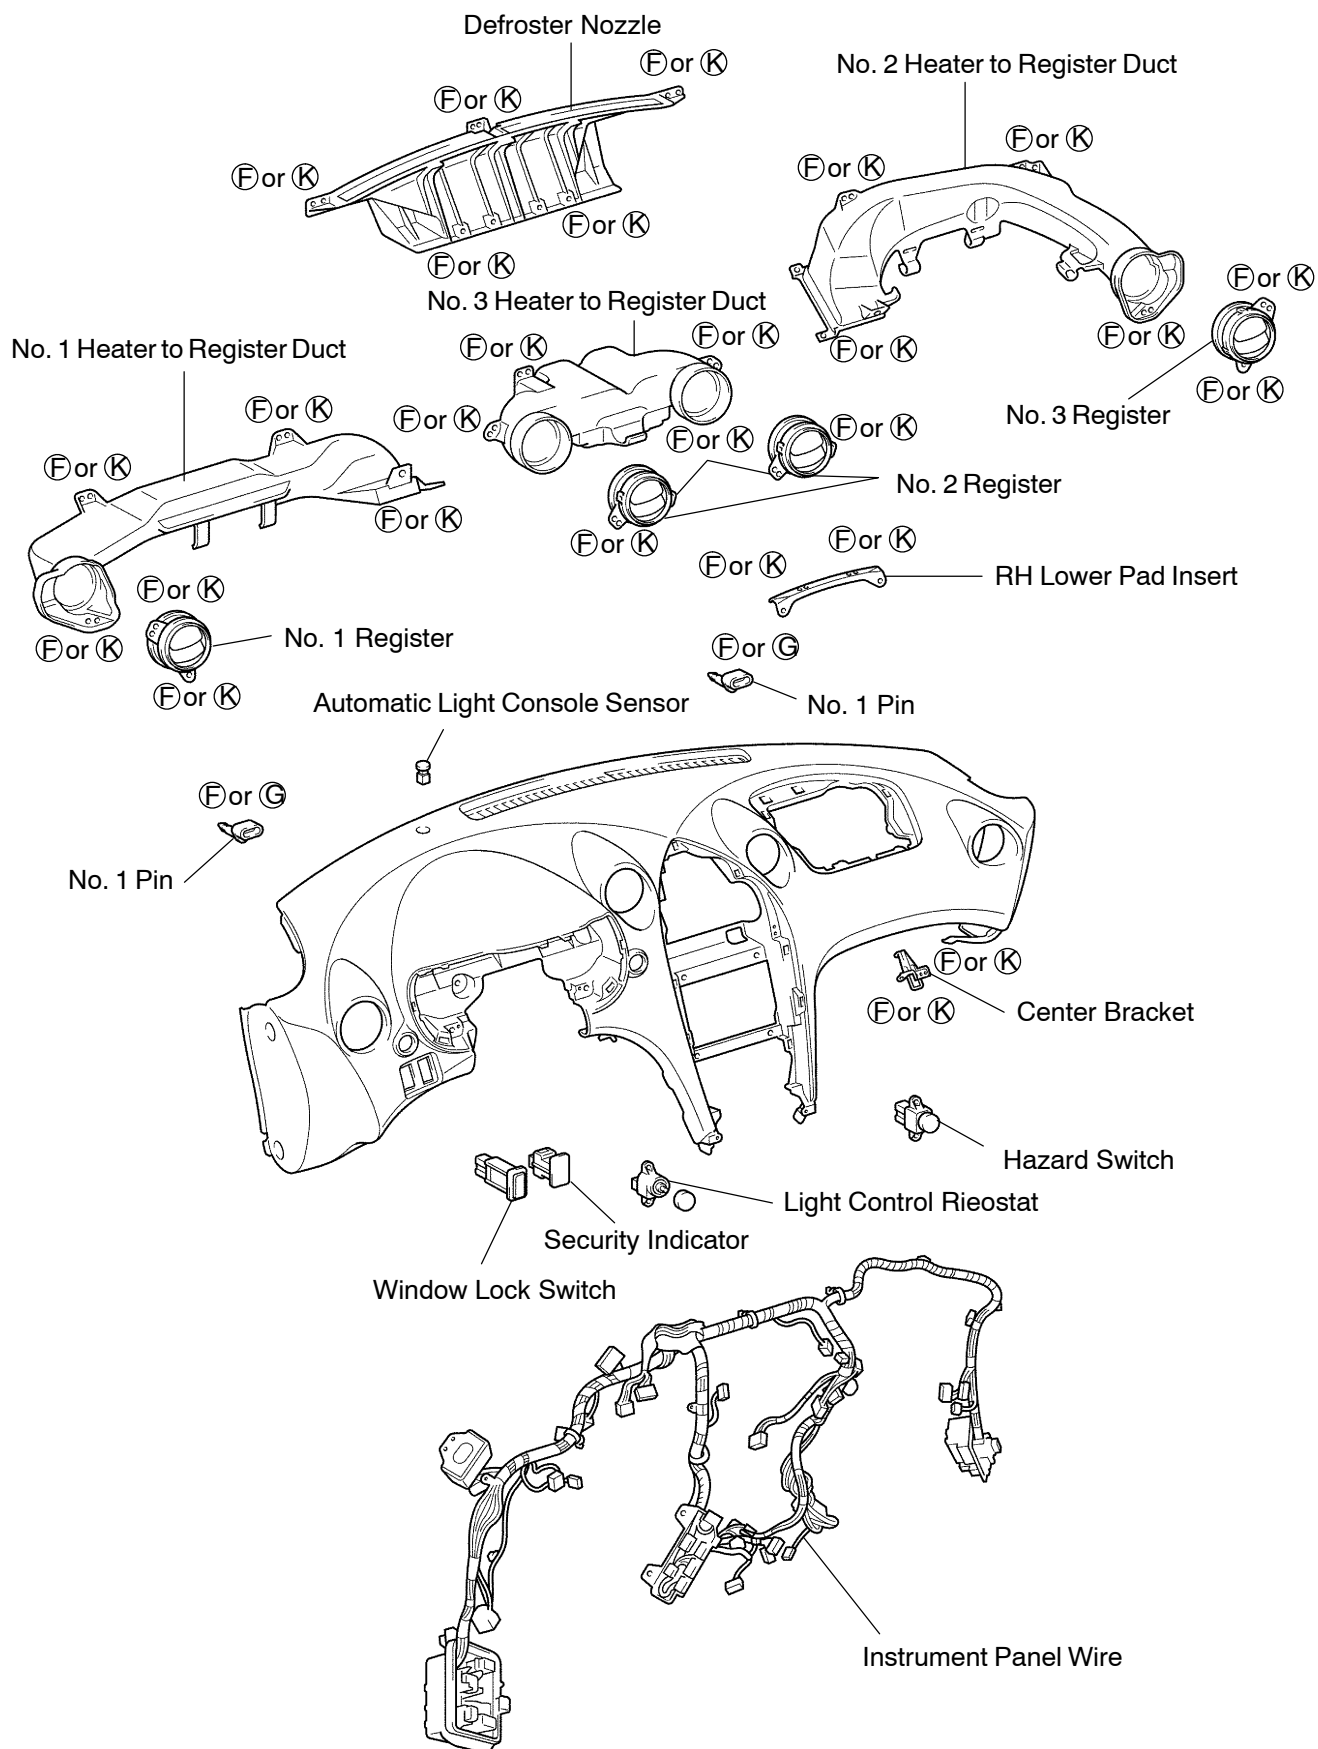


INSTRUMENT PANEL COMPONENTS

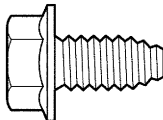
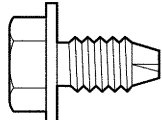
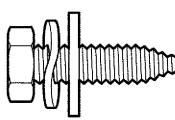
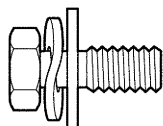
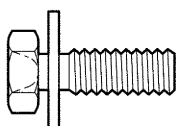
 
 
 
 
 
 
 
 
 
B02T9-01



H12684



HINT:
Screw shapes and sizes are indicated in the table below. The codes ("A" – "N") correspond to those indicated on the previous page.

mm (in.)								
	Shape	Size		Shape	Size		Shape	Size
Ⓐ		ø = 8 (0.32) L = 16 (0.63)	Ⓑ		ø = 8 (0.32) L = 15 (0.59)	Ⓒ		ø = 6 (0.24) L = 22 (0.87)
Ⓓ		ø = 6 (0.24) L = 16 (0.63)	Ⓔ		ø = 6 (0.24) L = 18 (0.71)	Ⓕ		ø = 5.22 (0.2055) L = 16 (0.63)
Ⓖ		ø = 5.22 (0.2055) L = 16 (0.63)	Ⓖ		ø = 5 (0.20) L = 18 (0.71)	Ⓖ		ø = 5 (0.20) L = 16 (0.63)
Ⓙ		ø = 5 (0.20) L = 16 (0.63)	Ⓚ		ø = 5 (0.20) L = 14 (0.55)	Ⓛ		ø = 4 (0.16) L = 16 (0.63)
Ⓜ		ø = 8 (0.32)	Ⓝ		ø = 6 (0.24)			

P

H12659