

DISASSEMBLY

1. REMOVE NO. 1 PINS
2. REMOVE INSTRUMENT PANEL WIRE
3. REMOVE DEFROSTER NOZZLE
4. REMOVE NO. 1 HEATER TO REGISTER DUCT
5. REMOVE NO. 2 HEATER TO REGISTER DUCT
6. REMOVE NO. 3 HEATER TO REGISTER DUCT
7. REMOVE AUTOMATIC LIGHT CONTROL SENSOR
8. REMOVE LIGHT CONTROL RHEOSTAT
9. REMOVE HAZARD SWITCH
10. REMOVE WINDOW LOCK SWITCH
11. REMOVE SECURITY INDICATOR
12. REMOVE NO. 1 RESISTER
13. REMOVE NO. 2 RESISTERS
14. REMOVE NO. 3 RESISTERS
15. REMOVE RH LOWER PAD INSERT
16. REMOVE CENTER BRACKET