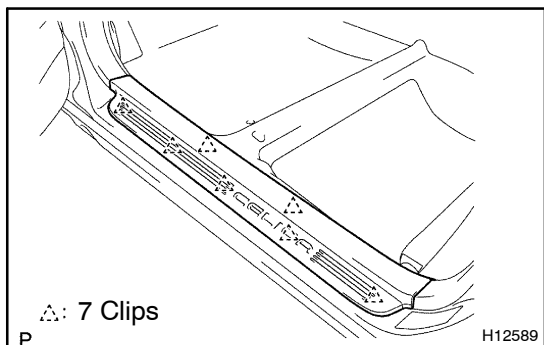




REMOVAL

1. REMOVE DOOR SCUFF PLATE

- (a) Using a screwdriver, remove the door scuff plate.

HINT:

Tape the screwdriver tip before use.

- (b) Employ the same manner described above to the other side.

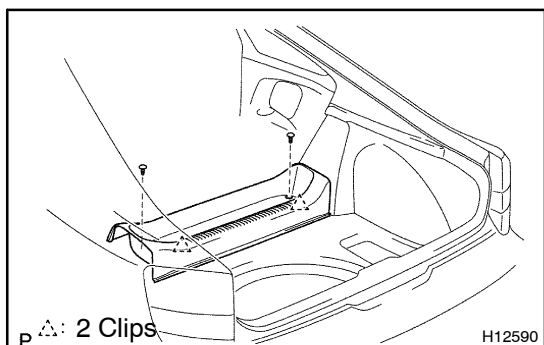
2. REMOVE PACKAGE TRAY TRIM

3. REMOVE REAR SEAT (See page BO-103)

4. REMOVE LUGGAGE COMPARTMENT MAT

5. w/ Deck floor box:

REMOVE LH AND RH DECK FLOOR BOX



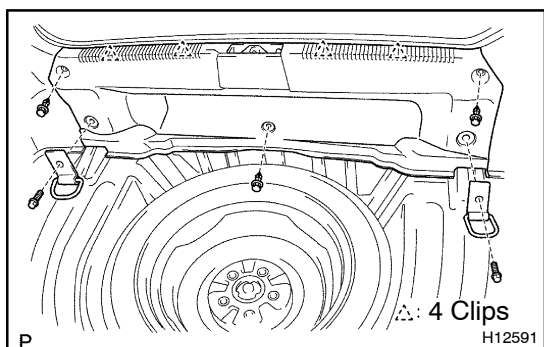
6. REMOVE LUGGAGE COMPARTMENT TRAY

- (a) Using a clip remover, remove the 2 clips.

- (b) Using a screwdriver, remove the luggage compartment tray.

HINT:

Tape the screwdriver tip before use.



7. REMOVE REAR DECK TRIM COVER

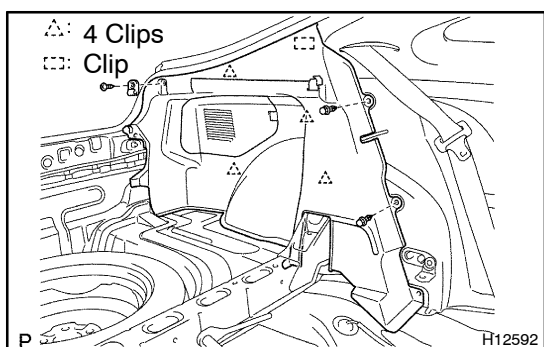
- (a) Remove the 2 bolts and 2 hooks.

- (b) Remove the 3 clips.

- (c) Using a screwdriver, remove the rear deck trim cover.

HINT:

Tape the screwdriver tip before use.



8. REMOVE DECK TRIM SIDE PANEL

- (a) Remove the screw and No. 1 luggage compartment trim hook.

- (b) RH side:

Using a screwdriver, remove the rear room light, then disconnect the connector.

HINT:

Tape the screwdriver tip before use.

- (c) Remove the 2 clips.

- (d) Using a screwdriver, remove the deck trim side panel.

HINT:

Tape the screwdriver tip before use.

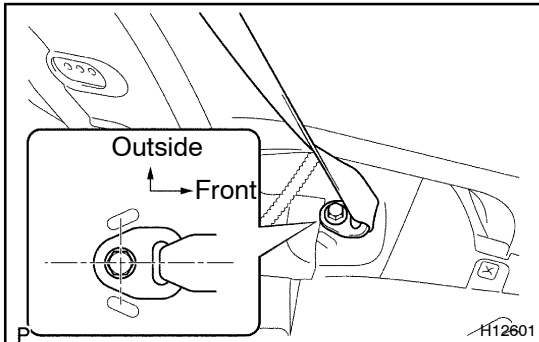
- (e) Employ the same manner described above to the other side.

9. REMOVE REAR SEATBACK HINGES

Torque: 18 N·m (185 kgf·cm, 13 ft·lbf)

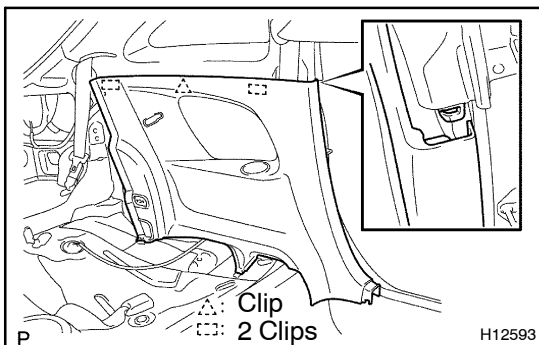
10. REMOVE REAR SEATBACK LOCK STRIKERS

Torque: 18 N·m (185 kgf·cm, 13 ft·lbf)

**11. REMOVE REAR SEAT OUTER BELT FLOOR ANCHORS****HINT:**

At the time of installation, please refer to the following item. Install the rear seat outer belt floor anchor as shown in the illustration.

Torque: 43 N·m (440 kgf·cm, 32 ft·lbf)

**12. REMOVE QUARTER TRIM PANEL**

- (a) Using a screwdriver, remove the quarter trim panel.

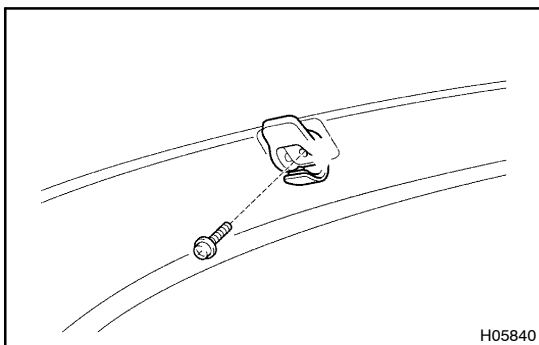
HINT:

Tape the screwdriver tip before use.

- (b) Employ the same manner described above to the other side.

13. REMOVE FRONT SEAT OUTER BELT SHOULDER ANCHOR

Torque: 43 N·m (440 kgf·cm, 32 ft·lbf)

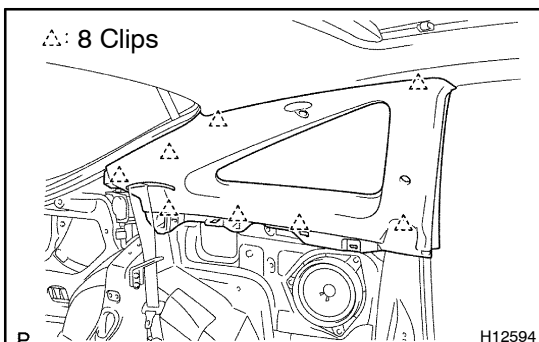
**14. REMOVE ROOF SIDE INNER GARNISH**

- (a) Using a screwdriver, open the cap of coat hook.

HINT:

Tape the screwdriver tip before use.

- (b) Remove the screw and coat hook.

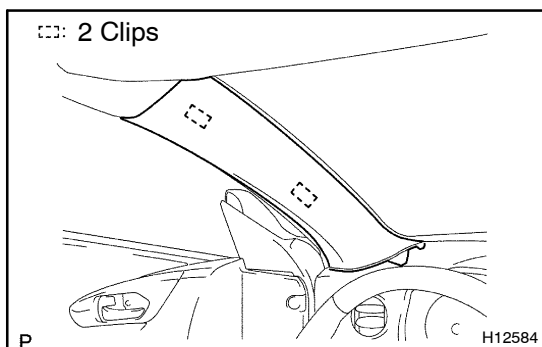


- (c) Using a screwdriver, remove the roof side inner quarter.

HINT:

Tape the screwdriver tip before use.

- (d) Employ the same manner described above to the other side.

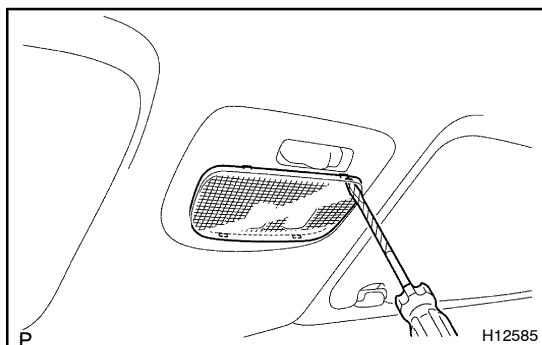
**15. REMOVE FRONT PILLAR GARNISH**

- (a) Using a screwdriver, remove the front pillar garnish.

HINT:

Tape the screwdriver tip before use.

- (b) Employ the same manner described above to the other side.

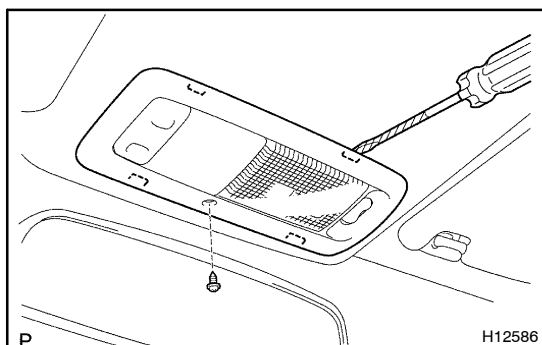
16. REMOVE COWL SIDE TRIMS**17. REMOVE FRONT DOOR OPENING TRIMS****18. w/o Sliding roof:****REMOVE MAP LIGHT ASSEMBLY**

- (a) Using a screwdriver, remove the lens.

HINT:

Tape the screwdriver tip before use.

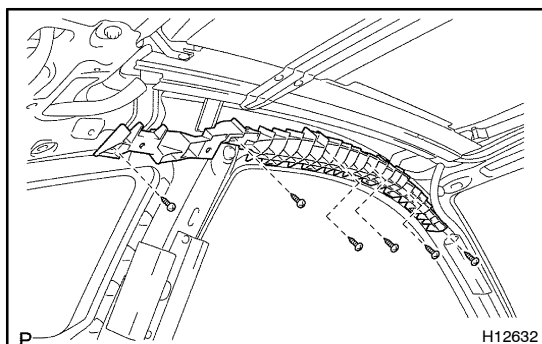
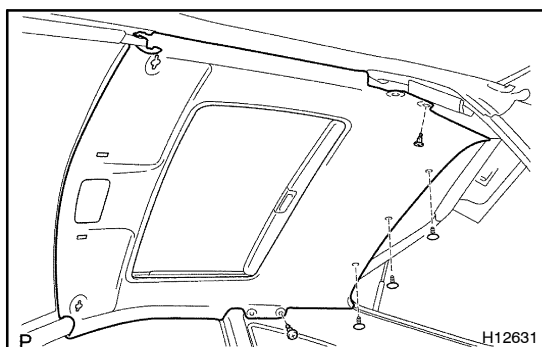
- (b) Remove the 2 screws and map light assembly, then disconnect the connector.

**19. w/ Sliding roof:****REMOVE MAP LIGHT ASSEMBLY**

- (a) Remove the screw.
 (b) Using a moulding remover, remove the cover.
 (c) Remove the screw and map light assembly, then disconnect the connector.

20. w/ Sliding roof:**REMOVE SUN ROOF OPENING TRIM MOULDING****21. REMOVE SUN VISORS****22. REMOVE SUN VISOR HOLDERS****23. REMOVE ROOF HEADLINING**

- (a) Using a clip remover, remove the 5 clips.
 (b) Remove the roof headlining.

24. REMOVE CLIP STOPPERS**25. REMOVE FRONT ROOF SIDE RAIL PAD**

- (a) Remove the 6 screws and front roof side rail pad.
 (b) Employ the same manner described above to the other side.