

REMOVAL

1. REMOVE SEATBACK ASSEMBLY LH AND RH

- (a) Release the seatback assembly LH and RH.
- (b) Remove the 4 bolts.

Torque: 18 N·m (185 kgf·cm, 13 ft·lbf)

- (c) Remove the seatback assembly LH and RH.

2. REMOVE SEAT CUSHION ASSEMBLY

3. REMOVE SIDE HINGE LH AND RH

Torque: 7.8 N·m (80 kgf·cm, 69 ft·lbf)

4. REMOVE CENTER HINGE

Torque: 18 N·m (185 kgf·cm, 13 ft·lbf)

5. REMOVE SEATBACK LOCK STRIKER (See page BO-89)

Torque: 18 N·m (185 kgf·cm, 13 ft·lbf)