

DISASSEMBLY

1. REMOVE SEATBACK LOCK KNOBS

2. REMOVE SEATBACK LOCK KNOB HOLDERS

3. REMOVE SEATBACK FRAME

- (a) Using a clip remover, remove the 5 clips.
- (b) Turn over the seatback cover, then remove the hog rings.
- (c) Remove the seatback frame from the seatback cover with pad.
- (d) Employ the same manner described above to the other side.

4. REMOVE SEATBACK LOCK

- (a) Remove the 2 bolts and seatback lock.
- (b) Employ the same manner described above to the other side.

5. REMOVE SEATBACK COVER

- (a) Remove the hog rings and seatback cover from the seatback pad.
- (b) Employ the same manner described above to the other side.

6. REMOVE SEATBACK CUSHION COVER

Remove the hog rings and seat cushion cover from the seat cushion frame with pad.