

REASSEMBLY

1. INSTALL SEAT CUSHION COVER

Install the seat cushion cover with new hog ring to the seat cushion frame with pad.

HINT:

When installing hog rings, take care to prevent wrinkles as little as possible.

2. INSTALL SEATBACK COVER

(a) Install the seatback cover with new hog ring to the seatback pad.

HINT:

When installing hog rings, take care to prevent wrinkles as little as possible.

(b) Employ the same manner described above to the other side.

3. INSTALL SEATBACK LOCKS

Torque: 21 N·m (210 kgf·cm, 15 ft·lbf)

4. INSTALL SEATBACK FRAME

(a) Install the seatback frame to the seatback cover with pad.

(b) Install new hog rings.

HINT:

When installing hog rings, take care to prevent wrinkles as little as possible.

(c) Install the 5 clips.

(d) Employ the same manner described above to the other side.

5. INSTALL SEATBACK LOCK KNOB HOLDERS

6. INSTALL SEATBACK LOCK KNOB