

SEAT BELT PRETENSIONER REMOVAL

NOTICE:

- If the wiring connector of the seat belt pretensioner is disconnected with the ignition switch at ON diagnostic trouble codes will be recorded.
- Never use seat belt pretensioner from another vehicle. When replacing parts, replace them with new parts.

1. REMOVE DOOR SCUFF PLATE

Using a screwdriver, remove the door scuff plate.

HINT:

Tape the screwdriver tip before use.

2. REMOVE PACKAGE TRAY TRIM

3. REMOVE REAR SEAT (See page BO-103)

4. REMOVE LUGGAGE COMPARTMENT TRAY

- Using a clip remover, remove the 2 clips.
- Using a screwdriver, remove the luggage compartment tray.



HINT:

Tape the screwdriver tip before use.

5. REMOVE LUGGAGE COMPARTMENT MAT

6. w/ Deck floor box:

REMOVE LH AND RH DECK FLOOR BOX

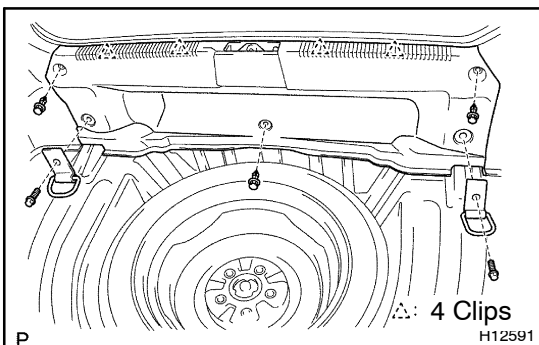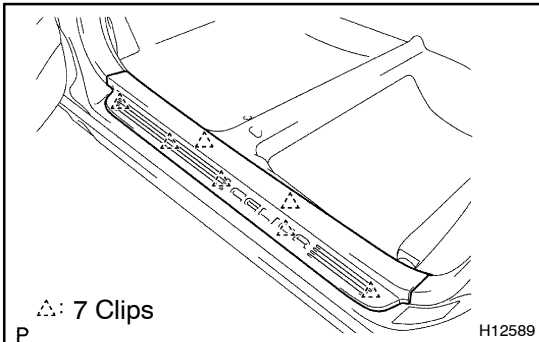


7. REMOVE REAR DECK TRIM COVER

- Remove the 2 bolts and 2 hooks.
- Remove the 3 clips.
- Using a screwdriver, remove the rear deck trim cover.

HINT:

Tape the screwdriver tip before use.

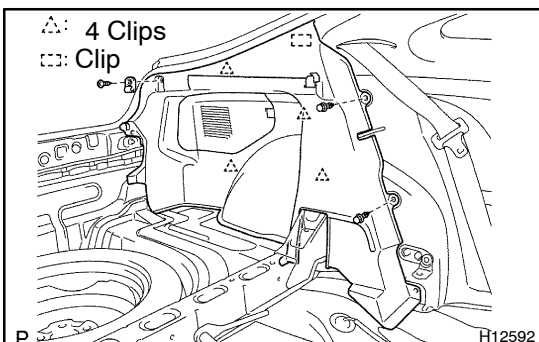

8. REMOVE DECK TRIM SIDE PANEL

- Remove the screw and No. 1 luggage compartment trim hook.
- RH side:
Using a screwdriver, remove the rear room light, then disconnect the connector.

HINT:


Tape the screwdriver tip before use.

- (c) Remove the 2 clips.
- (d) Using a screwdriver, remove the deck trim side panel.

HINT:

Tape the screwdriver tip before use.

- 9. REMOVE REAR SEATBACK HINGE**
- 10. REMOVE REAR SEATBACK LOCK STRIKER**
- 11. REMOVE REAR SEAT OUTER BELT FLOOR ANCHORS**

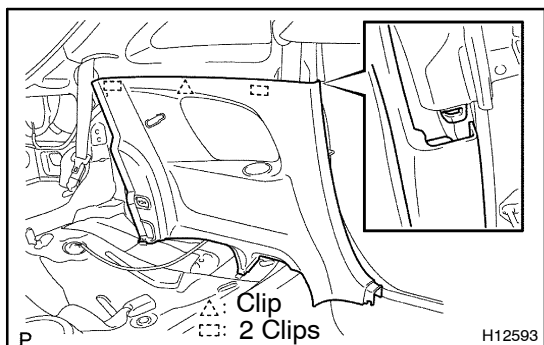

12. REMOVE QUARTER TRIM PANEL

Using a screwdriver, remove the quarter trim panel.

HINT:

Tape the screwdriver tip before use.


- 13. REMOVE FRONT SEAT OUTER BELT SHOULDER ANCHOR**
- 14. REMOVE FRONT SEAT OUTER BELT FLOOR ANCHOR**
- 15. REMOVE RETRACTOR OF FRONT SEAT OUTER BELT**

CAUTION:

Never disassemble the front seat outer belt.

NOTICE:

When removing the retractor of front seat outer belt, take care not to pull the seat belt pretensioner wire harness.

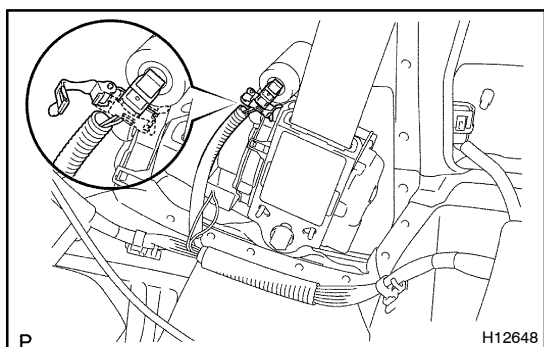

- (a) Disconnect the pretensioner connector as shown in the illustration.

CAUTION:

When removing the seat belt pretensioner, work must be started 90 seconds after the ignition switch is turned to the "LOCK" position and the negative (-) terminal cable is disconnected from the battery.

- (b) Disconnect the connector.
- (c) Remove the 2 bolts and retractor of front seat outer belt.