
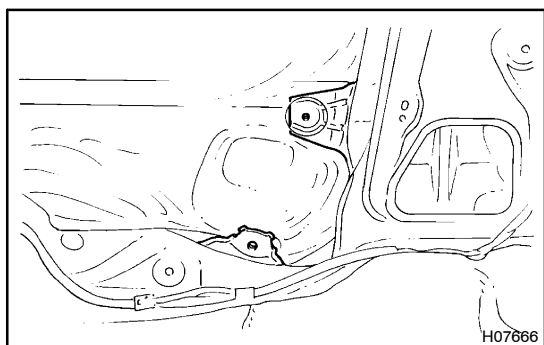
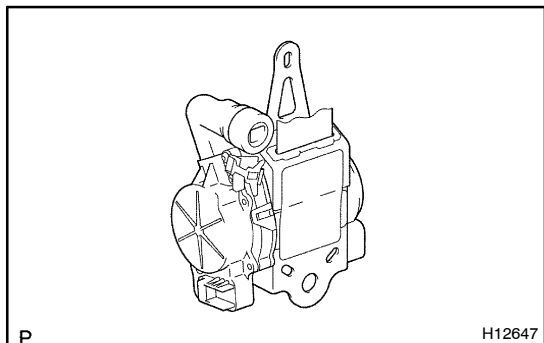


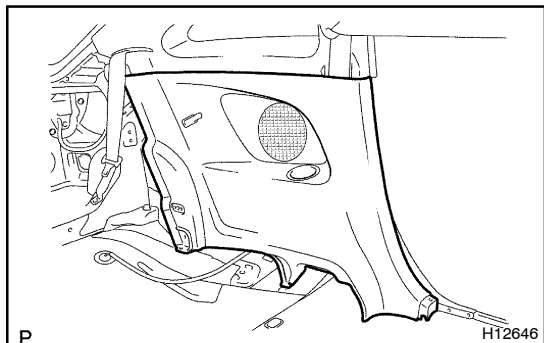

INSPECTION

1. PRETENSIONER IS NOT ACTIVATED

- (a) Perform a diagnostic system check.
(See page DI-118)
- (b) Perform a visual check which includes the following items with the front seat outer belt removed from the vehicle.
 - Check for cuts and cracks in, or marked discoloration on the quarter trim panel.
 - Check for cuts and cracks in wire harness, and for chipping in connectors.
 - Check for deformation of the quarter panel.

CAUTION:

For removal and installation of the front seat outer belt, see page BO-110 and BO-119.

2. PRETENSIONER IS ACTIVATED

- (a) Perform a diagnostic system check.
(See page DI-118)
- (b) Perform a visual check which includes the following items with the front seat outer belt removed from the vehicle.
 - Check for deformation of the quarter panel.
 - Check for damage on the connector and wire harness.