

INSTALLATION

NOTICE:

- Never use seat belt pretensioner from another vehicle. When replacing parts, replace them with new parts.
- Make sure that the front seat outer belt is installed with the specified torque.
- If the front seat outer belt has been dropped, or there are cracks, dents or other defects in the case or connector, replace the front seat outer belt with a new one.
- When installing the front seat outer belt, take care that the wiring does not interfere with other parts and is not pinched between other parts.


1. INSTALL RETRACTOR OF FRONT SEAT OUTER BELT

- (a) Install the retractor of front seat outer belt with the 2 bolts.

Torque:

Upper bolt: 7.5 N·m (76 kgf·cm, 66 in·lbf)

Lower bolt: 43 N·m (440 kgf·cm, 32 ft·lbf)

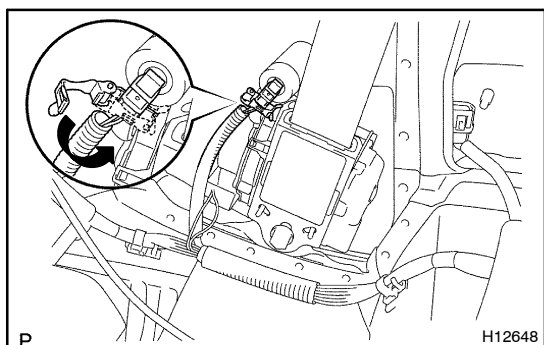

- (b) Connect the pretensioner connector as shown in the illustration.

- (c) Connect the retractor switch connector.

2. INSTALL FRONT SEAT OUTER BELT SHOULDER ANCHOR

Torque: 43 N·m (440 kgf·cm, 32 ft·lbf)

3. INSTALL FRONT SEAT OUTER BELT FLOOR ANCHOR

Torque: 43 N·m (440 kgf·cm, 32 ft·lbf)

4. INSTALL QUARTER TRIM PANEL

5. INSTALL REAR SEAT OUTER BELT FLOOR ANCHOR

Torque: 43 N·m (440 kgf·cm, 32 ft·lbf)

6. INSTALL REAR SEATBACK LOCK STRIKER

7. INSTALL REAR SEATBACK HINGE

8. INSTALL DECK TRIM SIDE PANEL

9. INSTALL REAR DECK TRIM COVER

10. w/ Deck floor box:

INSTALL LH AND RH DECK FLOOR BOX

11. INSTALL LUGGAGE COMPARTMENT MAT

12. INSTALL LUGGAGE COMPARTMENT TRAY

13. □ INSTALL REAR SEAT (See page BO-106)

14. INSTALL PACKAGE TRAY TRIM

15. INSTALL DOOR SCUFF PLATE