


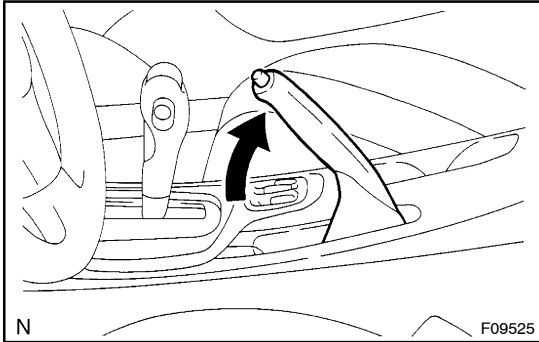

PARKING BRAKE LEVER ON-VEHICLE INSPECTION


BR15H-01

1. CHECK PARKING BRAKE LEVER TRAVEL

Pull the parking brake lever all the way up, and count the number of clicks.

**Parking brake lever travel at 196 N (20 kgf, 44.1 lbf):
7 - 8 clicks**

If incorrect, adjust the parking brake.

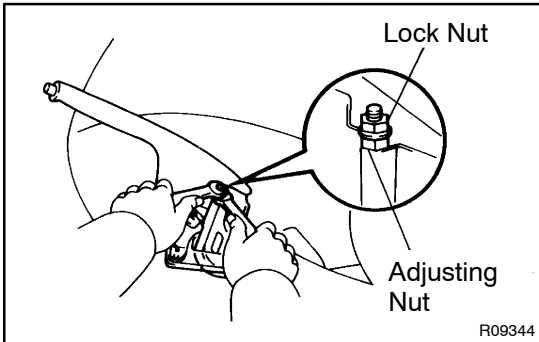

2. IF NECESSARY, ADJUST PARKING BRAKE

HINT:

Before adjusting the parking brake, make sure that the rear brake shoe clearance has been adjusted. For shoe clearance adjustment, see step 1 on [page BR-47](#).

- Remove the console box.
- Loosen the lock nut and turn the adjusting nut until the lever travel is correct.
- Tighten the lock nut.

Torque: 5.4 N·m (55 kgf·cm, 48 in.·lbf)

- Install the console box.