



REMOVAL

1. **REMOVE FRONT LH WHEEL**
Torque: 103 N·m (1,050 kgf·cm, 76 ft·lbf)
2. **REMOVE MASTER CYLINDER** (See page BR-11)
3. **DISCONNECT VACUUM HOSE FROM BRAKE BOOSTER**
4. **w/ ABS:**
REMOVE ABS ACTUATOR ASSEMBLY
(See page BR-55)

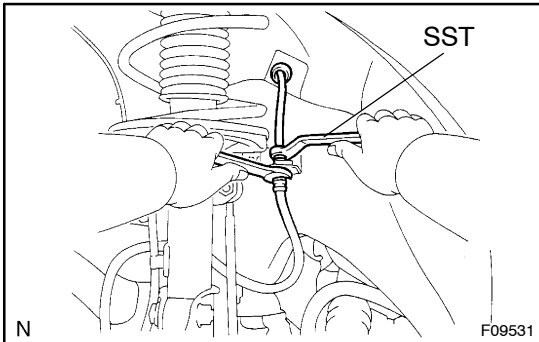

5. **REMOVE FRONT LH BRAKE LINE**
 - (a) Using SST and spanner, disconnect the brake line from the flexible hose of front LH brake.
SST 09751-36011
 - (b) Pull out the brake line with the grommet from the body.
6. **REMOVE BRAKE BOOSTER**
 - (a) Remove the lower No. 1 panel.
 - (b) Remove the return spring, clip and clevis pin.

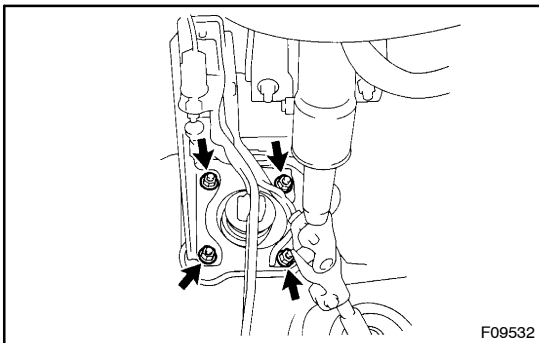

- (c) Remove the clevis and 4 nuts.
- (d) Pull out the brake booster and gasket.