



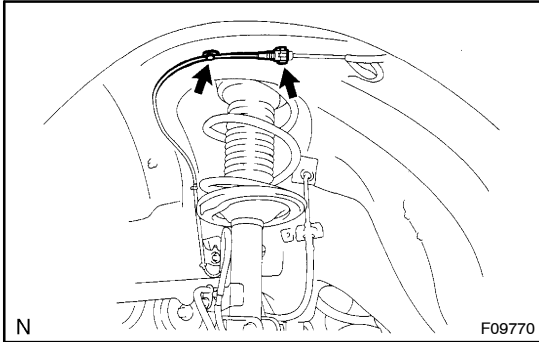

REMOVAL


1. DISCONNECT SPEED SENSOR CONNECTOR

- (a) Remove the front wheel.
Torque: 103 N·m (1,050 kgf·cm, 76 ft·lbf)
- (b) Remove the fender liner.
- (c) Disconnect the speed sensor connector and resin clip.

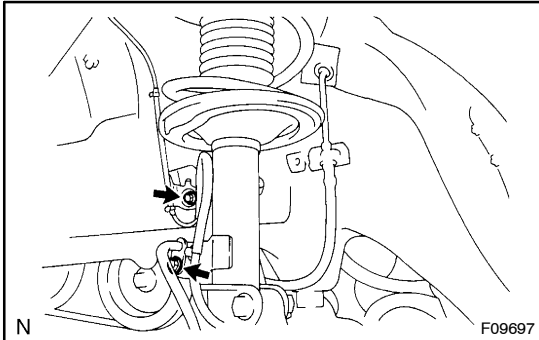

2. REMOVE SPEED SENSOR

- (a) Remove the 2 clamp bolts holding the sensor harness from the body and shock absorber.
Torque: 8.0 N·m (82 kgf·cm, 71 in·lbf)

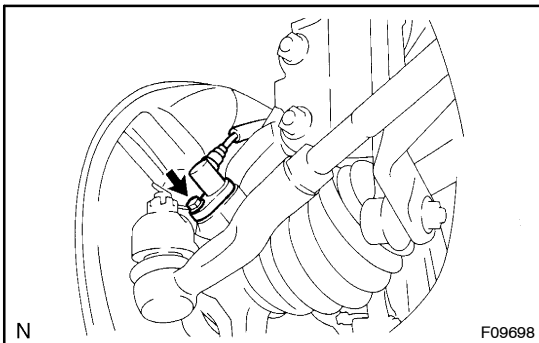

- (b) Remove the speed sensor installation bolt from the steering knuckle.

Torque: 8.0 N·m (82 kgf·cm, 71 in·lbf)

NOTICE:

At the time of installation, please refer to the following item.

- There are no foreign objects on the sensor or the part of the knuckle to which the sensor is to be installed.
- The sensor is installed flat against the knuckle when you tighten the bolt.