



REMOVAL

1. LHD:
REMOVE BRAKE BOOSTER (See page BR-15)

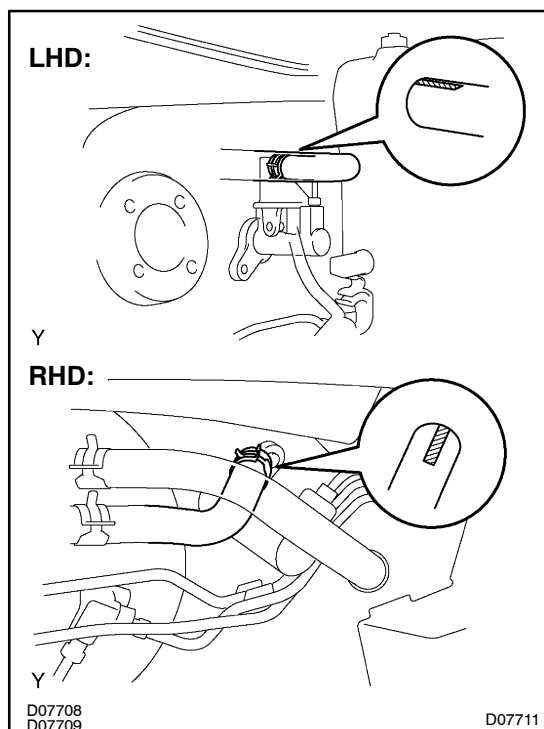

2. **DISCONNECT RESERVOIR HOSE**
 - (a) Using pliers, disconnect the clip.
 - (b) Disconnect the reservoir hose from the inlet union.
 - (c) Use a container to catch the fluid.

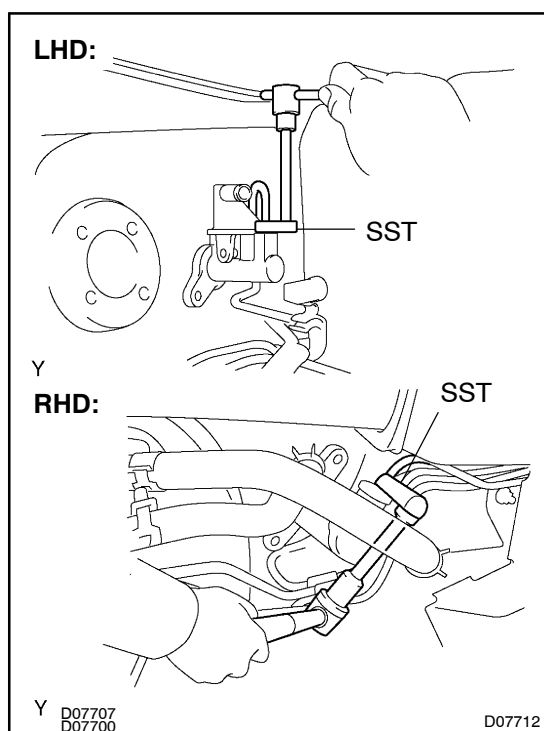

3. **DISCONNECT CLUTCH LINE**
 - (a) Using SST, disconnect the clutch line.
SST 09023-00100
 - (b) Use a container to catch the fluid.
4. **REMOVE CLIP AND PIN**
Using needle-nose pliers, remove the clip and pin.
5. **REMOVE 2 MOUNTING NUTS AND PULL OUT MASTER CYLINDER**