


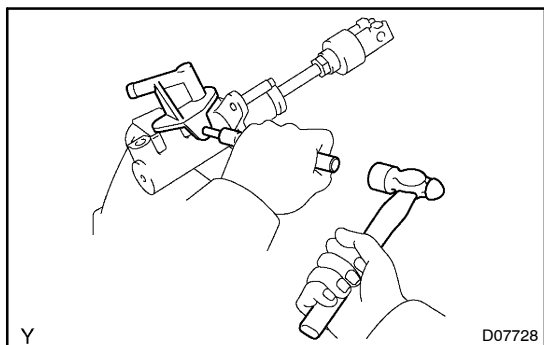


DISASSEMBLY

1. LHD:

REMOVE INLET UNION

- (a) Using a pin punch (3 mm) and hammer, drive out the slotted spring pin.
- (b) Remove the inlet union.
- (c) Remove the grommet.

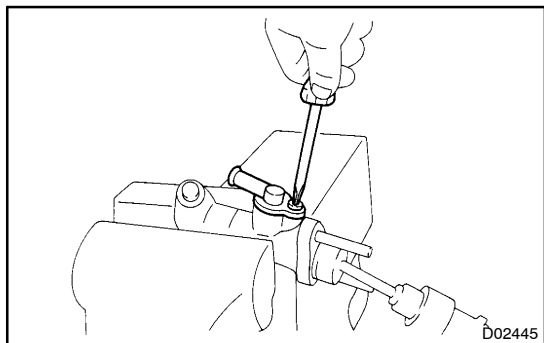

2. RHD:


REMOVE INLET UNION

- (a) Remove the screw and inlet union.
- (b) Remove the O-ring.

3. REMOVE CLEVIS

Loosen the lock nut to remove the clevis and remove the lock nut.

4. REMOVE BOOT FROM CYLINDER

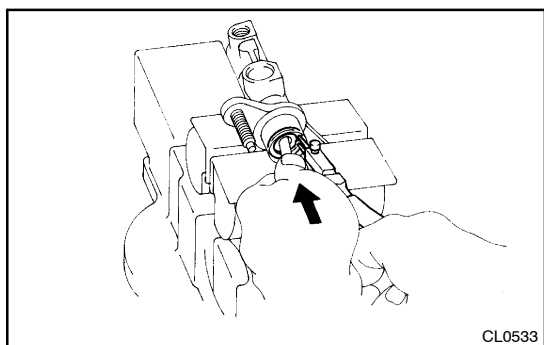

5. REMOVE PUSH ROD

- (a) While pushing the push rod, using snap ring pliers, remove the snap ring.
- (b) Pull out the push rod and washer.

6. REMOVE PISTON WITH SPRING FROM CYLINDER