



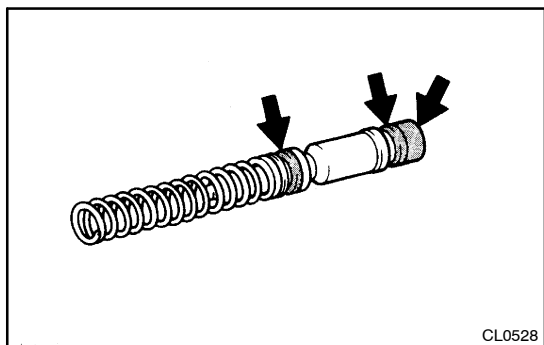


REASSEMBLY


1. COAT PARTS WITH LITHIUM SOAP BASE GLYCOL GREASE, AS SHOWN IN ILLUSTRATION
2. INSERT PISTON WITH SPRING INTO CYLINDER

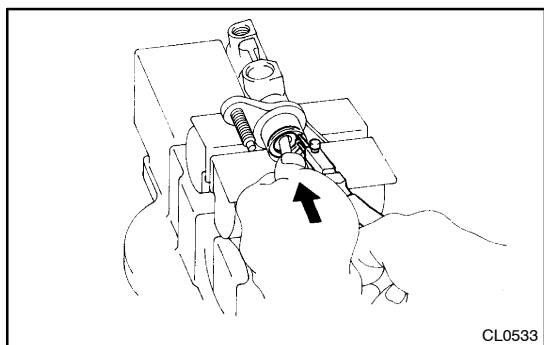

3. **INSTALL PUSH ROD**
 - (a) Install the washer to the push rod.
 - (b) Push the push rod into the piston, using snap ring pliers, install the snap ring.
4. **INSTALL BOOT TO CYLINDER**
5. **TEMPORARILY INSTALL LOCK NUT AND CLEVIS**

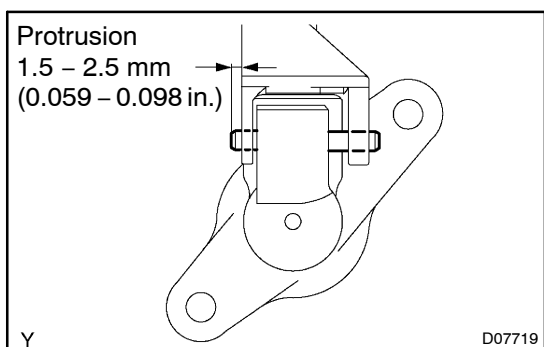

6. **LHD:**
INSTALL INLET UNION
 - (a) Install a new grommet.
 - (b) Install the inlet union.
 - (c) Using a pin punch (3 mm) and hammer, drive in the slotted spring pin.

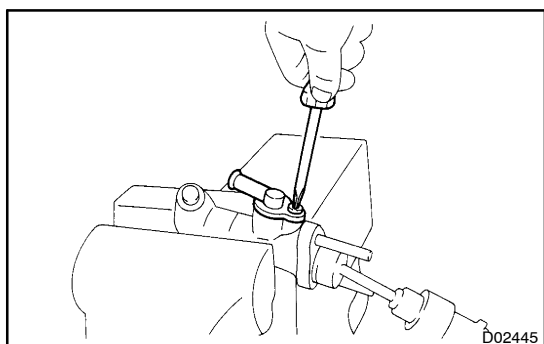

7. **RHD:**
INSTALL INLET UNION
 - (a) Install a new O-ring.
 - (b) Install the inlet union with the screw.