

REMOVAL


1. DISCONNECT CLUTCH LINE

- (a) Raise the vehicle.

CAUTION:

Make sure that the vehicle is securely supported.

- (b) Remove the LH and RH engine under covers.

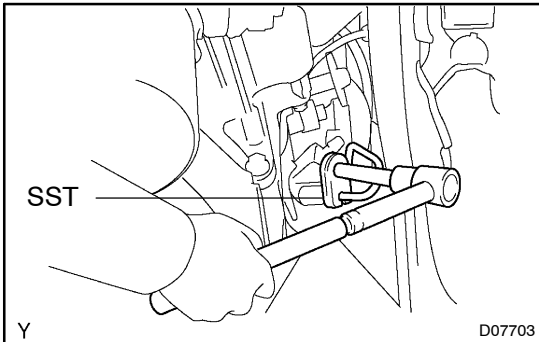


- (c) Using SST, disconnect the clutch line.

SST 09023-00100

- (d) Use a container to catch the fluid.

- (e) Lower the vehicle.

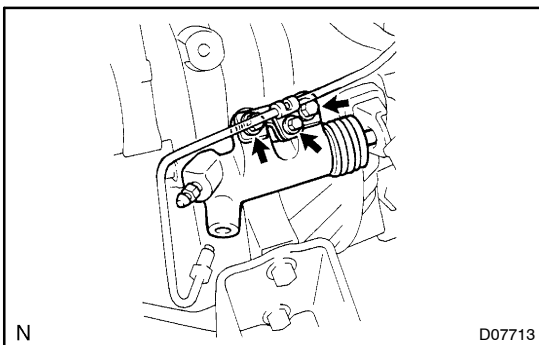

2. REMOVE RELEASE CYLINDER

- (a) Remove the air cleaner case assembly with the air hose.

- (b) Remove the clutch line clamp set bolt.

- (c) Remove the 2 bolts, clutch line bracket and release cylinder.