


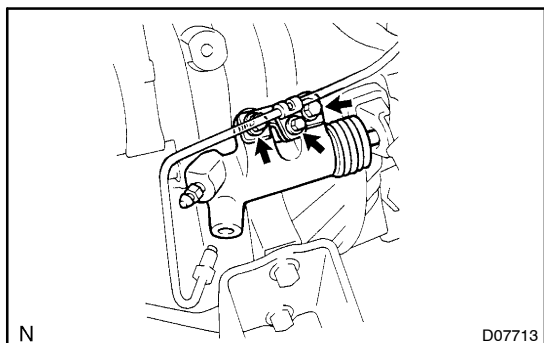

INSTALLATION

1. INSTALL RELEASE CYLINDER


- (a) Install the release cylinder and clutch line bracket with the 2 bolts.

Torque: 12 N·m (120 kgf·cm, 9 ft·lbf)

- (b) Install the clutch line clamp to the clutch line bracket with the bolt.

Torque: 4.9 N·m (50 kgf·cm, 43 in·lbf)

- (c) Install the air cleaner case assembly with the air hose.

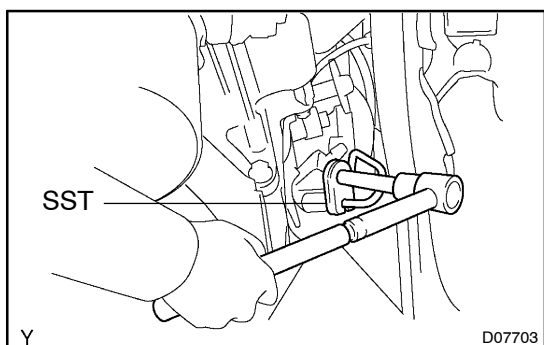

2. CONNECT CLUTCH LINE AND BLEED CLUTCH SYSTEM

- (a) Raise the vehicle.

CAUTION:

Make sure that the vehicle is securely supported.

- (b) Using SST, connect the clutch line.

SST 09023-00100

Torque: 15 N·m (155 kgf·cm, 11 ft·lbf)

- (c) Fill the brake reservoir tank with brake fluid and bleed clutch system.
- (d) Check for the leaks.
- (e) Install the LH and RH engine under covers.
- (f) Lower the vehicle.