


DTC	C1251/51	ABS Pump Motor Lock
-----	----------	---------------------

CIRCUIT DESCRIPTION

DTC No.	DTC Detecting Condition	Trouble Area
C1251/51	ABS actuator pump motor is not operating normally.	ABS pump motor


WIRING DIAGRAM

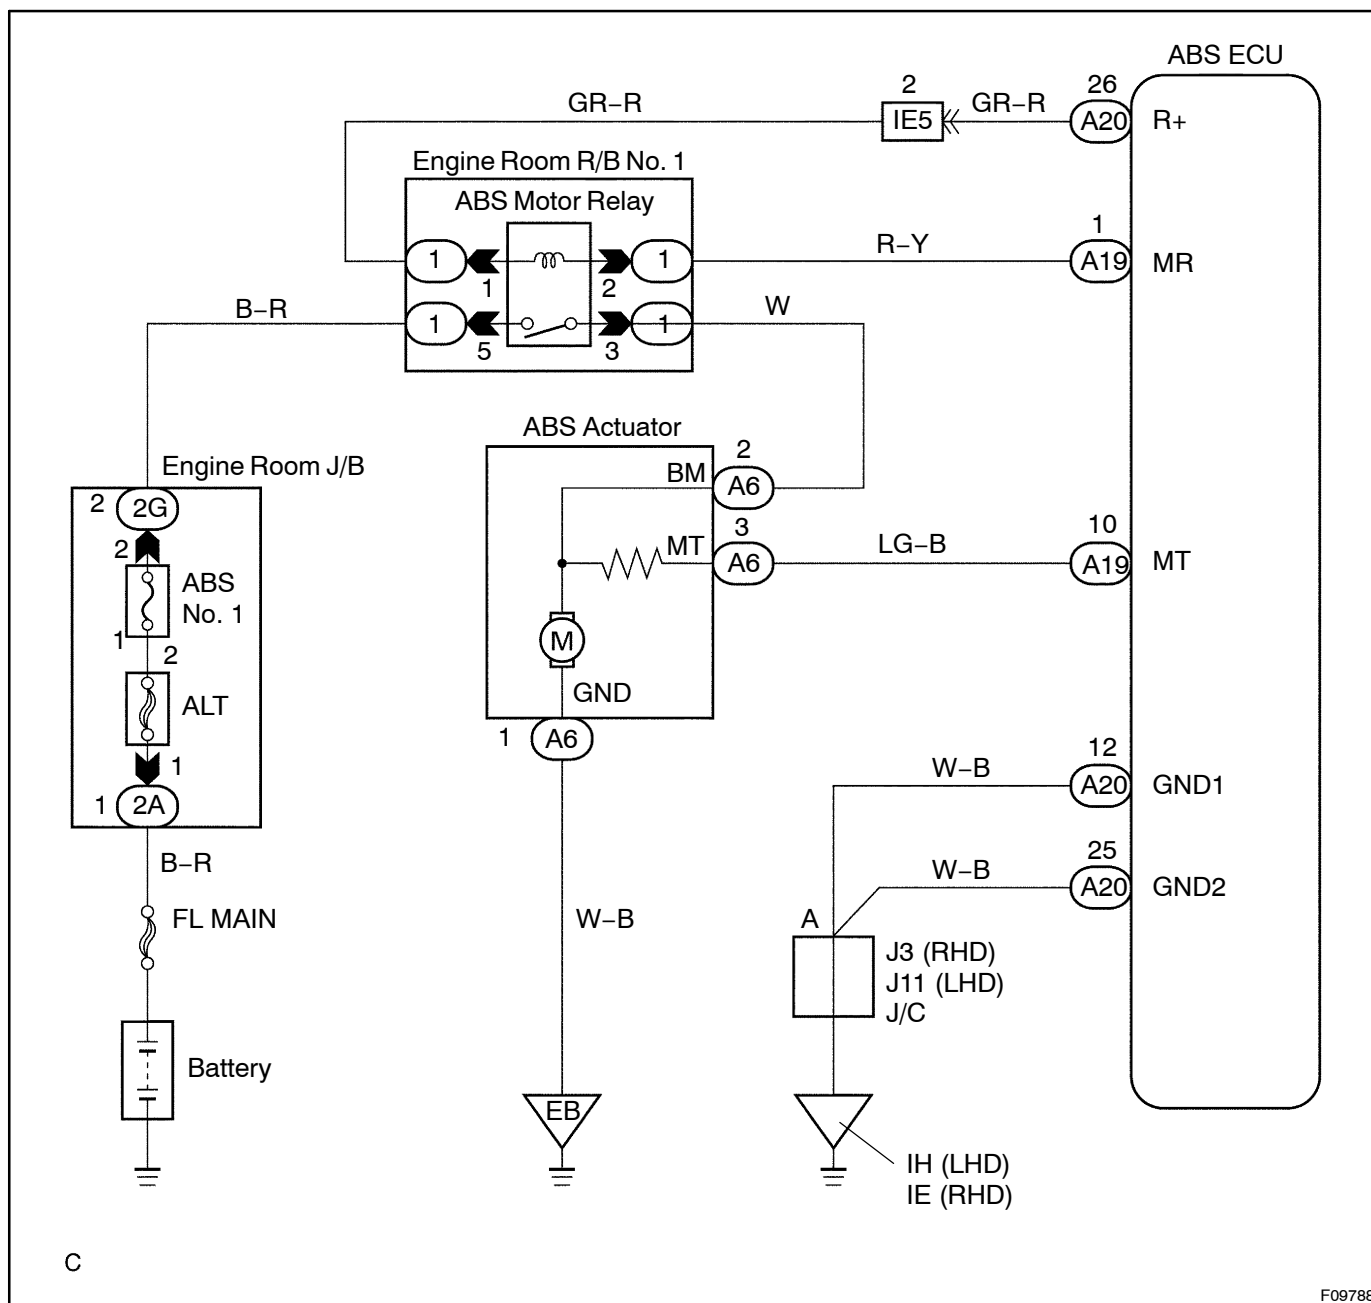

F09788

INSPECTION PROCEDURE

1 Check operation of ABS pump motor.

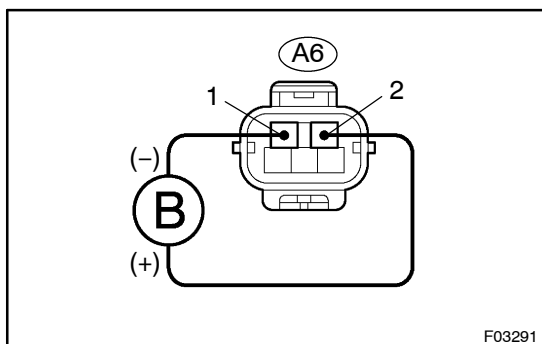

PREPARATION:

Disconnect the ABS actuator connector.

CHECK:

Connect positive $\oplus$ lead to terminal BM (A6 – 2) and negative $\ominus$ lead to terminal GND (A6 – 1) of the ABS actuator connector, check that the pump motor is operates.

OK:

The running sound of the pump motor should be heard.

OK

Check for open circuit in harness and connector between ABS motor relay, ABS actuator and ABS ECU (See page IN-30).

NG

Replace ABS actuator.