

DTC	Always ON	ABS ECU Malfunction
------------	------------------	----------------------------

CIRCUIT DESCRIPTION

DTC No.	DTC Detecting Condition	Trouble Area
Always ON	ABS ECU internal malfunction is detected.	• Combination meter • Combination meter circuit • Battery • ABS ECU

INSPECTION PROCEDURE

1	Is DTC output?
----------	-----------------------

Check DTC on [page DI-68](#).

YES

Repair circuit indicated by the code output.

NO

2	Is normal code displayed?
----------	----------------------------------

YES

Check and replace ABS ECU.

NO

3	Is ABS warning light go off?
----------	-------------------------------------

YES

Check and replace ABS ECU.

NO

4 Check battery voltage.**CHECK:**

Check the battery voltage.

OK:

10 – 14 V

NG**Check and repair the charging system.****OK****5 Check ABS warning light.****PREPARATION:**

- (a) Disconnect the connector from the ABS ECU.
- (b) Connect the terminal WA (A20 – 11) of wire harness and the terminal GND (A20 – 12, 25) of wire harness.
- (c) Turn the ignition switch ON.

CHECK:

Check the ABS warning light goes off.

OK**Check and replace ABS ECU.****NG**

Check for short circuit in harness and connector between ABS warning light, combination meter and ABS ECU (See page IN-30).