


## BRAKE Warning Light Circuit

### CIRCUIT DESCRIPTION

The BRAKE warning light lights up when the brake fluid is insufficient, the parking brake is applied or the EBD is defective.

### WIRING DIAGRAM

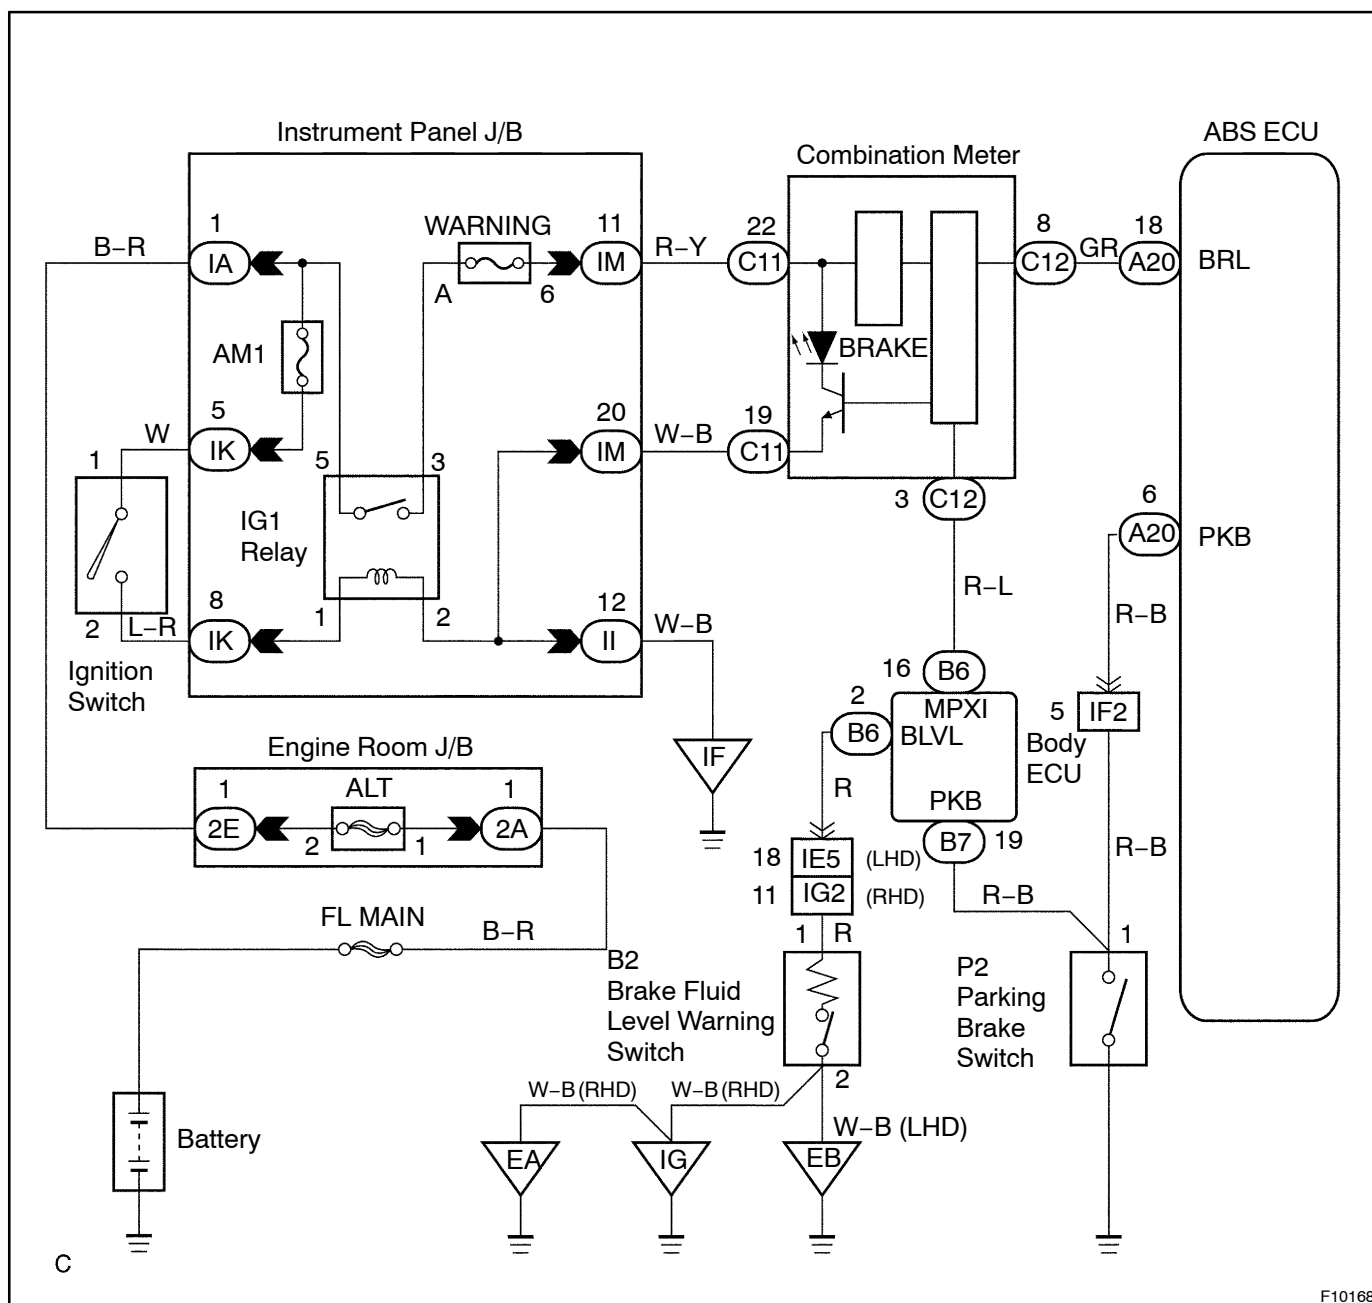

F10168

**INSPECTION PROCEDURE**

**1** Check parking brake switch circuit ([See page BE-2](#)).

NG

Repair or replace parking brake switch circuit.

OK

**2** Check brake fluid level warning switch circuit ([See page BE-2](#)).

NG

Repair or replace brake fluid level warning switch circuit.

OK

**3** Is DTC output for ABS?

Check DTC on [page DI-68](#).

Yes

Repair circuit indicated by the output code.

No

**4** Check BRAKE warning light.

See combination meter troubleshooting on [page BE-2](#).

NG

Repair or replace combination meter.

OK

Check and replace ABS ECU.