


Tc Terminal Circuit

CIRCUIT DESCRIPTION


Connecting between terminals Tc and CG of the DLC3 causes the ECU to display the DTC by flashing the ABS warning light.

WIRING DIAGRAM

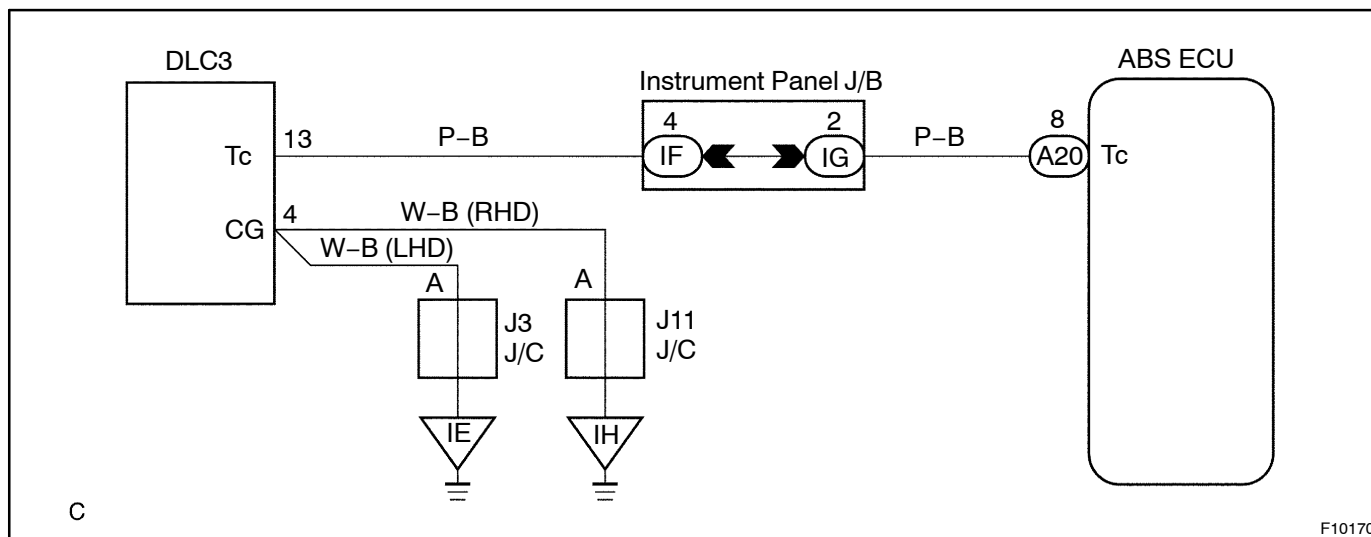

INSPECTION PROCEDURE

- 1 Check voltage between terminals Tc and CG of DLC3.

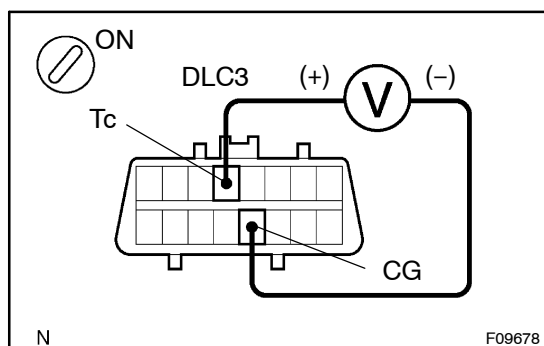

CHECK:

- Turn the ignition switch ON.
- Measure voltage between terminals Tc and CG of DLC3.

OK:

Voltage: 10 – 14 V

OK

If ABS warning light does not blink even after Tc and CG are connected, the ECU may be defective.

NG

2**Check for open and short circuit in harness and connector between ABS ECU and DLC3, DLC3 and body ground ([See page IN-30](#)).****NG****Repair or replace harness or connector.****OK****Check and replace ABS ECU.**