

PROBLEM SYMPTOMS TABLE

Proceed with troubleshooting of each circuit in the table below.

Symptom	Suspect Area	See page
• With the ignition switch in ON position, the SRS warning light sometimes lights up after approx. 6 seconds have elapsed. • SRS warning light is always lit up even when ignition switch is in the LOCK position. • With the ignition switch in ON position, the SRS warning light does not light up.	• SRS warning light circuit	DI-266
• DTC is not displayed. • SRS warning light is always lit up at the time of DTC check procedure. • DTC is displayed without Tc and E1 terminal connection.	• Tc terminal circuit	DI-271