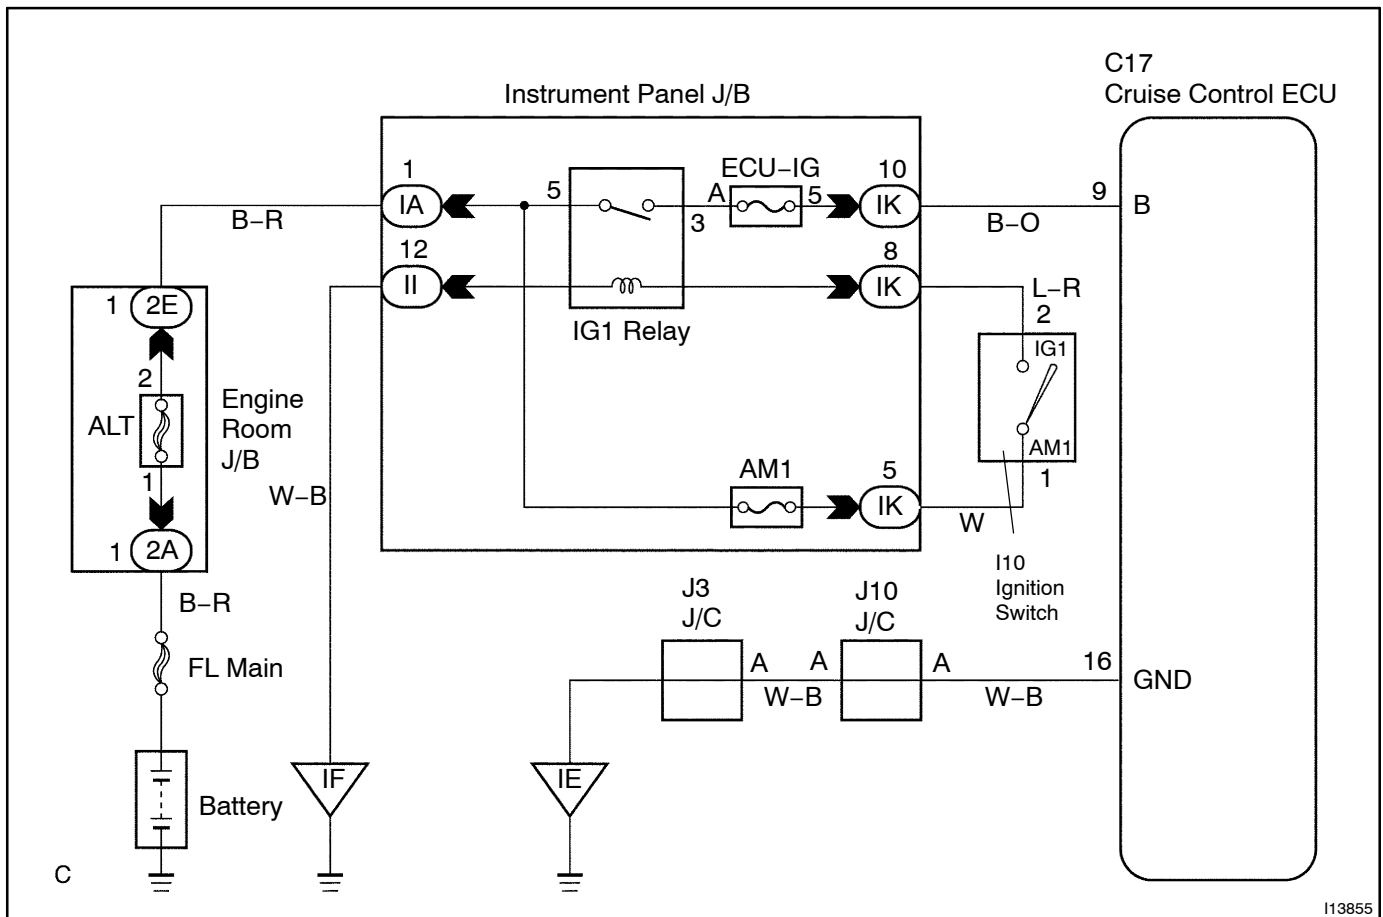


ECU Power Source Circuit

CIRCUIT DESCRIPTION

The ECU power source supplies power to the actuator and sensors, etc, when terminal GND and the cruise control ECU case are grounded.

WIRING DIAGRAM

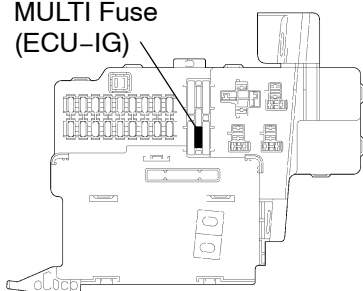


I13855

INSPECTION PROCEDURE

1 Check ECU-IG fuse.

MULTI Fuse
(ECU-IG)

**PREPARATION:**

Remove the ECU-IG fuse from instrument panel junction block.

CHECK:

Check continuity of ECU-IG fuse.

OK:

Continuity

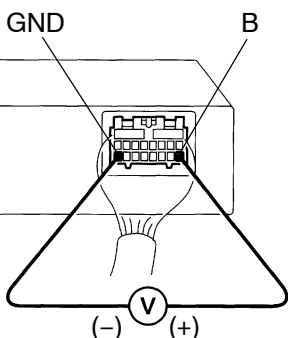
NG

Check for short in all the harness and components connected to ECU-IG fuse.

OK

2 Check voltage between terminals B and GND of cruise control ECU connector.

ON

**PREPARATION:**

- (a) Remove the ECU with connector still connected.
- (b) Turn ignition switch ON.

CHECK:

Measure voltage between terminals B and GND of ECU connector.

OK:

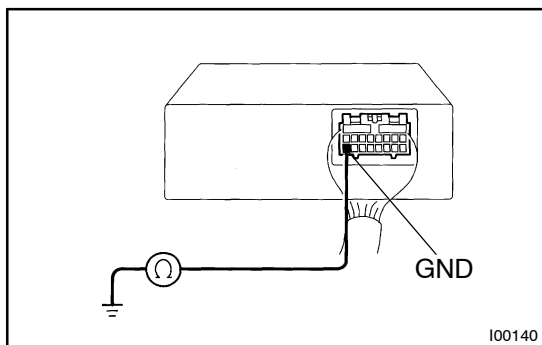
Voltage: 10 - 14 V

OK

Proceed to next circuit inspection shown in problem symptom table ([See page DI-286](#)).

NG

- 3** Check resistance between terminal GND of cruise control ECU connector and body ground.

**CHECK:**

Measure resistance between terminal GND of ECU connector and body ground.

OK:

Resistance: Below 1 Ω

NG

Repair or replace harness or connector.

OK

Check and repair harness and connector between cruise control ECU and battery (See [page IN-30](#)).