



TERMINALS OF ECU

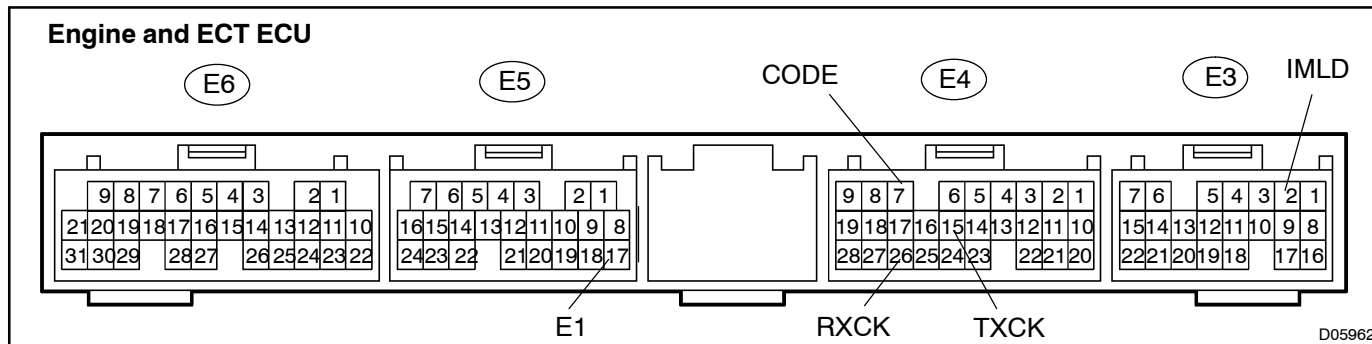

Symbols (Terminals No.)	Wiring Color	Condition	STD Voltage (V)
CODE ↔ E1 (E4 - 7 ↔ E5 - 17)	GR ↔ BR	Ignition Switch ON	10 - 14
TXCK ↔ E1 (E4 - 15 ↔ E5 - 17)	GR-L ↔ BR	Ignition Switch ON	10 - 14
IMLD ↔ E1 (E3 - 2 ↔ E5 - 17)	R ↔ BR	Engine Immobilizer System Setting	10 - 14
RXCK ↔ E1 (E4 - 26 ↔ E5 - 17)	GR-R ↔ BR	Ignition Switch ON	10 - 14

T2 Transponder Key Amplifier

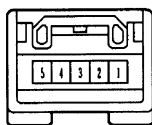

I10180

Symbols (Terminals No.)	Wiring Color	Condition	STD Voltage (V)
GND ↔ Body ground (T2 - 3 ↔ Body ground)	W-B ↔ Body ground	Constant	Below 1 V
RXCK ↔ GND (T2 - 4 ↔ T2 - 3)	GR-R ↔ W-B	Amplifier signal (Serial data link)	-
TXCK ↔ GND (T2 - 1 ↔ T2 - 3)	GR-L ↔ W-B	Amplifier signal (Serial data link)	-
+B ↔ GND (T2 - 5 ↔ T2 - 3)	B-R ↔ W-B	Constant	10 - 14
CODE ↔ GND (T2 - 2 ↔ T2 - 3)	GR ↔ W-B	Amplifier signal (Serial data link)	-