


CIRCUIT INSPECTION

Power source circuit

CIRCUIT DESCRIPTION

This circuit provides power to operate the Body ECU.

WIRING DIAGRAM

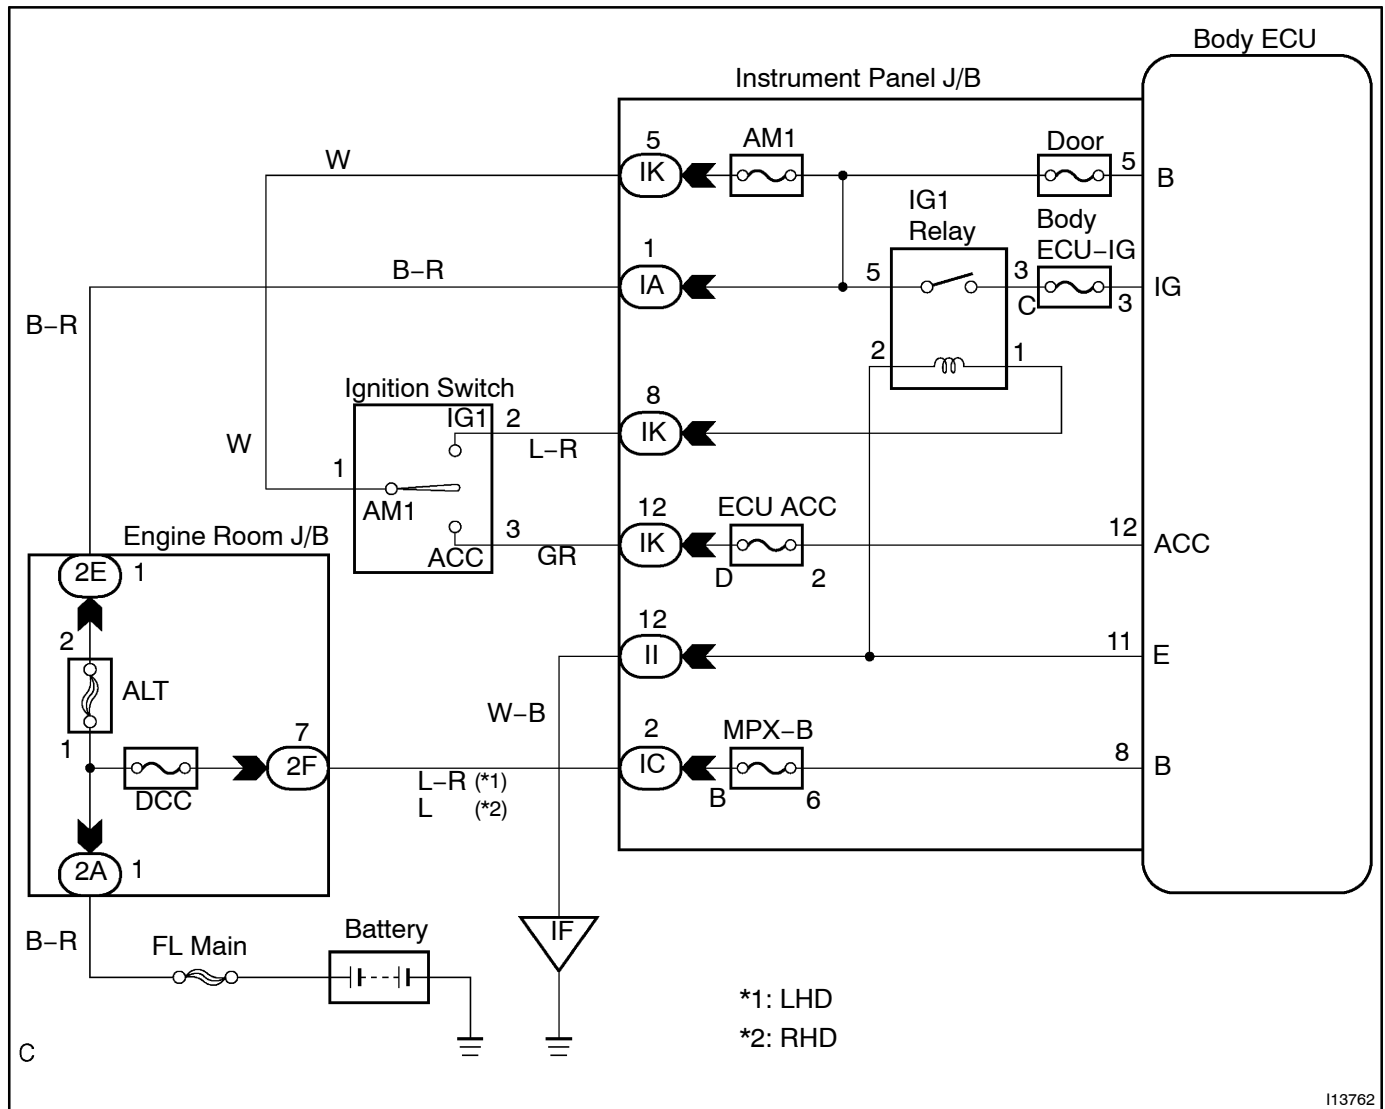

I13762

INSPECTION PROCEDURE

1	Check MPX-B, DCC, AM1 and DOOR fuse.
---	---

CHECK:

Check continuity of MPX-B, DCC, AM1 and DOOR fuse.

OK:

Continuity

NG	Replace the failure fuse.

OK

2	Check voltage between terminals B, B and E of Body ECU connector.
---	--

PREPARATION:

- (a) Turn ignition switch OFF.
- (b) Disconnect the Body ECU connector.

CHECK:

Measure voltage between terminals B, B and E.

OK:

Voltage: 10 – 14V

OK	Proceed to next circuit inspection shown on problem symptoms table. (See page DI-355)

NG

3	Check wireharness and connector between Body ECU and body ground. (See page IN-30)
---	--

NG	Repair or replace wireharness or connector.

OK

Check and repair wireharness and connector between Body ECU and battery.
