


Taillight relay circuit

CIRCUIT DESCRIPTION

Taillight relay will be "ON" by operating the taillight switch. The transistor which activates the tail light relay has two sorts: one activates by the tail light switch for fail safe and the other activates by CPU.

WIRING DIAGRAM

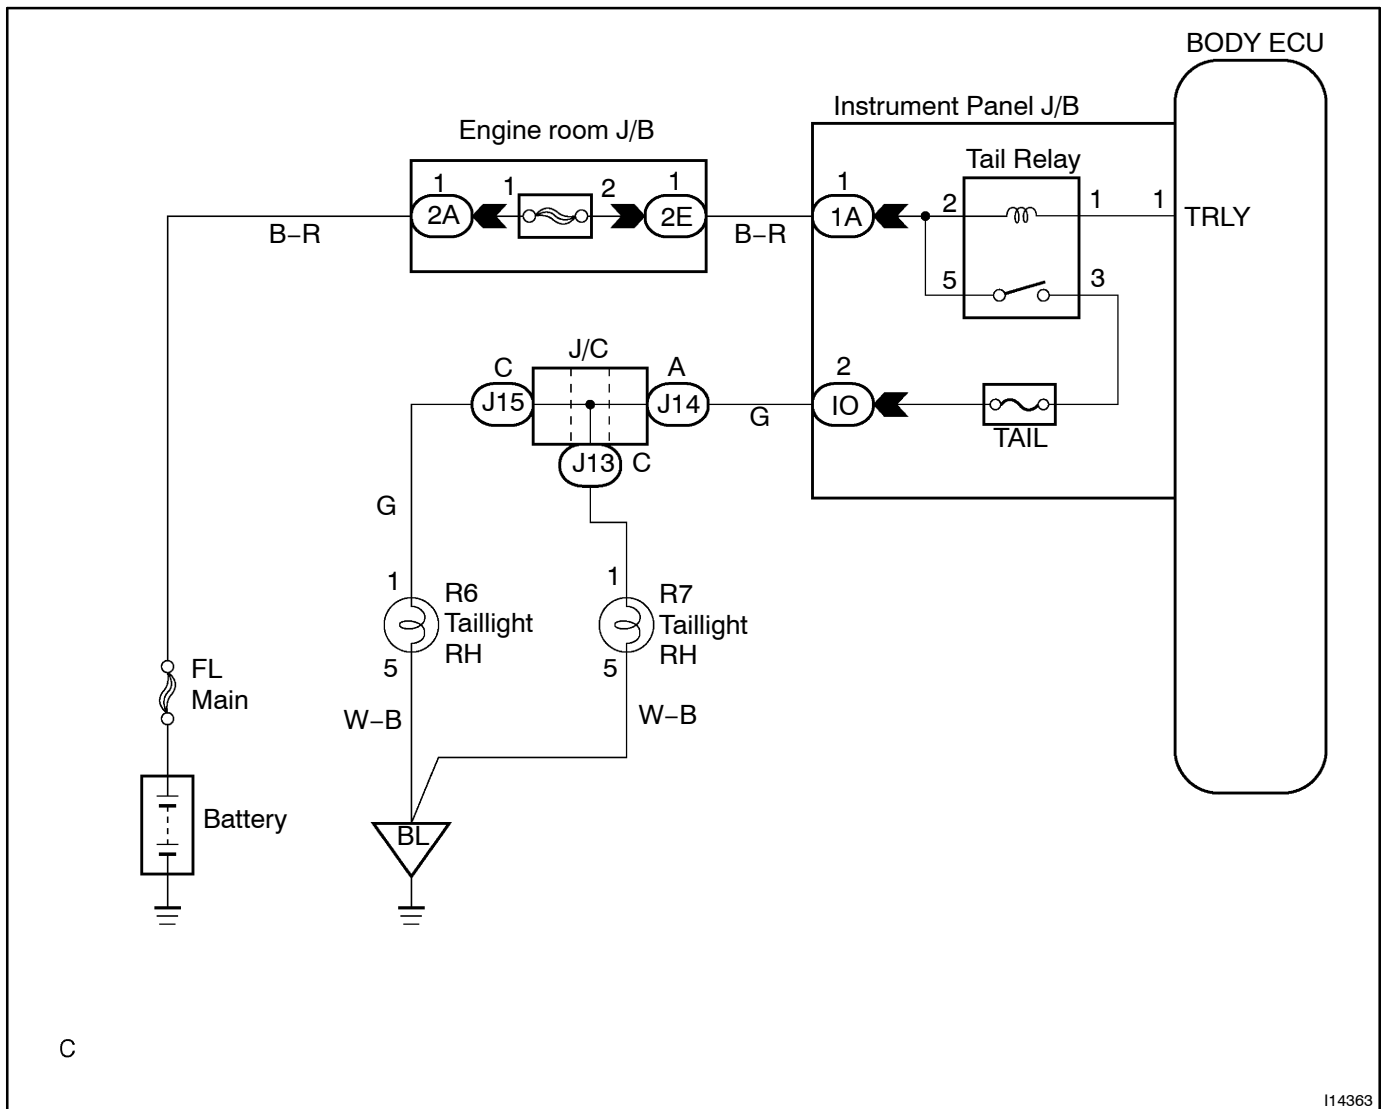

INSPECTION PROCEDURE

1 Check taillight relay ([See page BE-18](#)).

NG

Replace the taillight relay.

OK

2 Check wireharness and connector between taillight relay and Body ECU, battery and taillight relay. ([See page IN-30](#))

NG

Repair or replace wireharness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table ([See page DI-355](#)).