


Headlight dimmer relay circuit

CIRCUIT DESCRIPTION


Dimmer relay will be "ON" by operating the headlight dimmer switch. The transistor which activates the dimmer relay has two sorts: one activates by the dimmer switch for fail safe and the other activates by CPU.

WIRING DIAGRAM

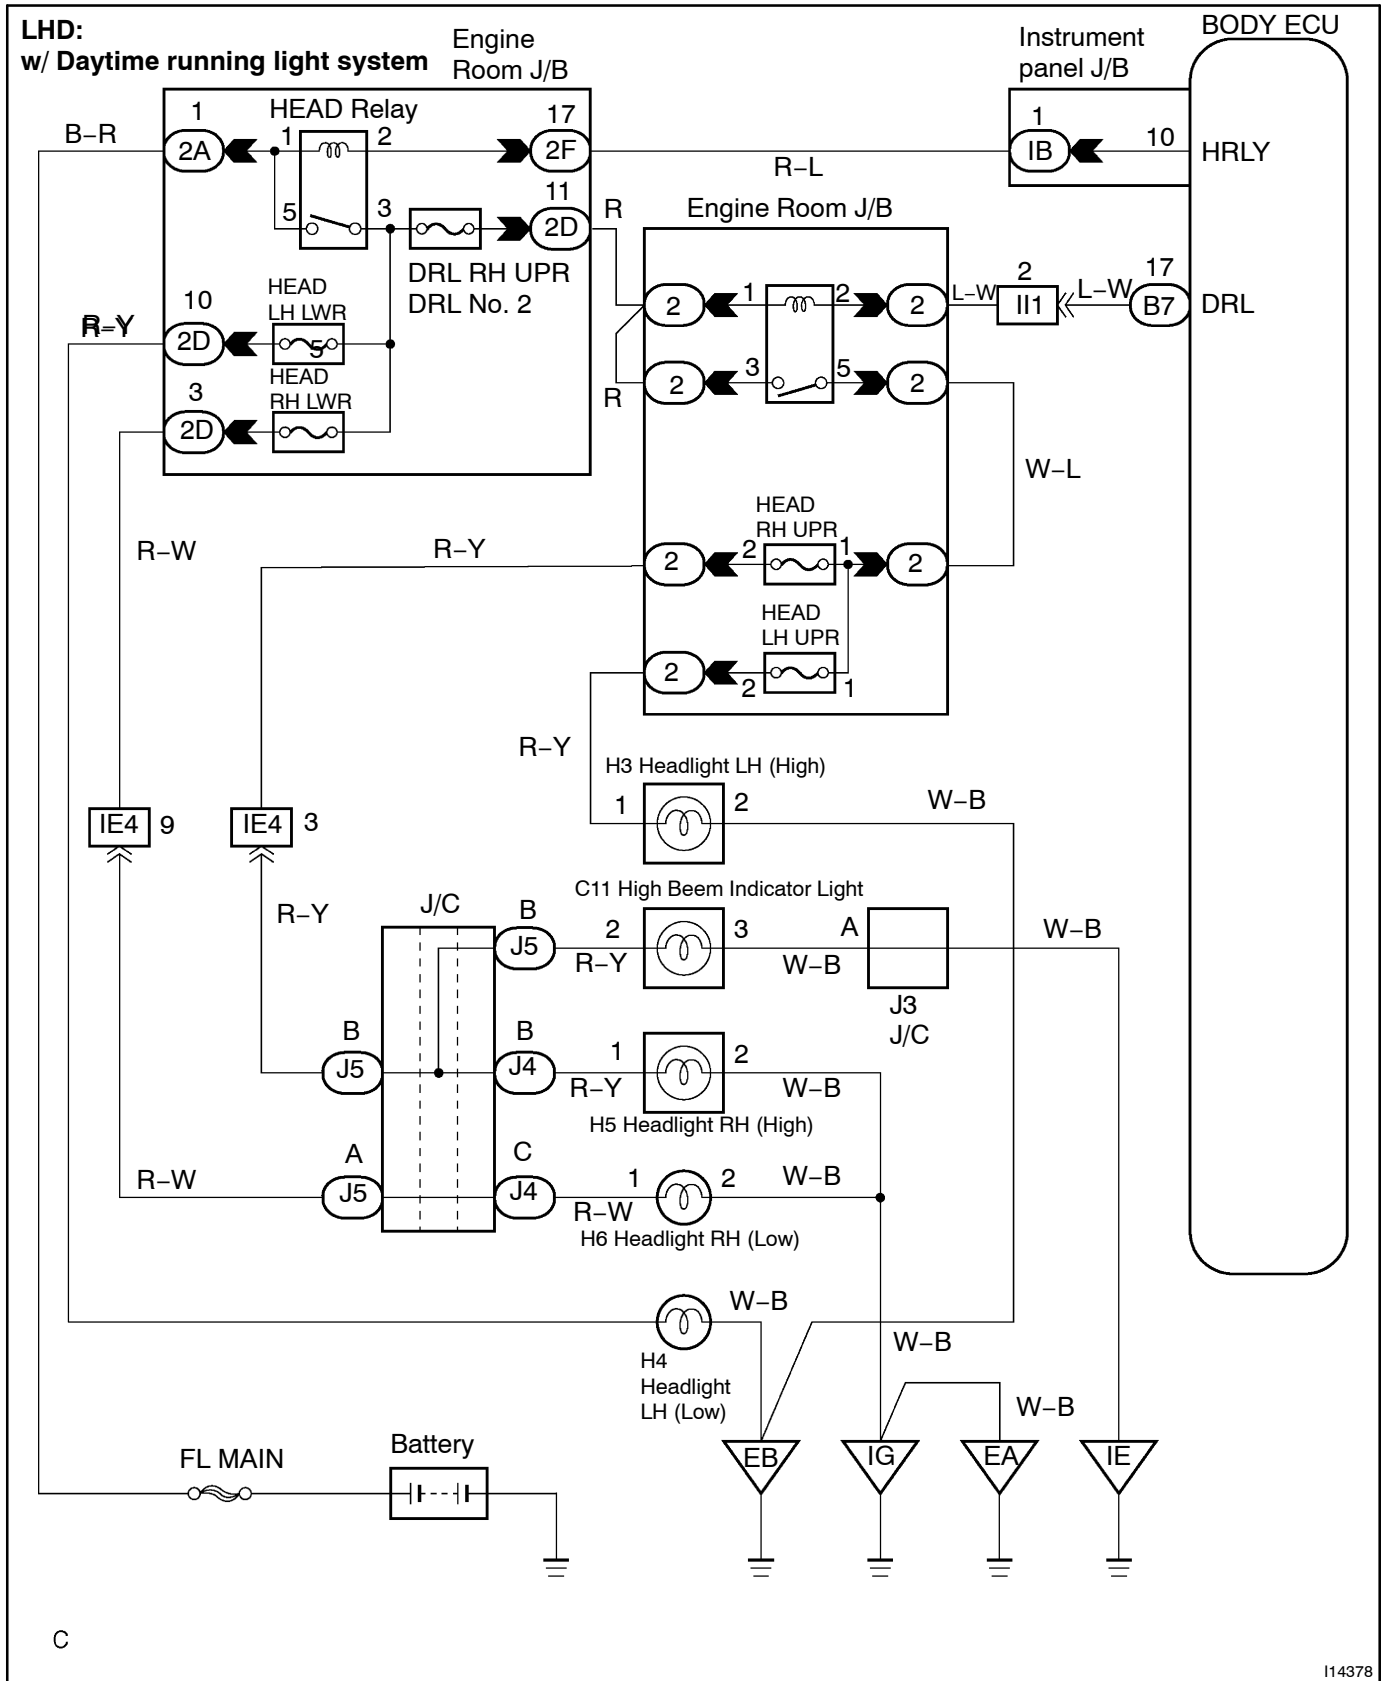

w/o Daytime running light system:

BODY ECU

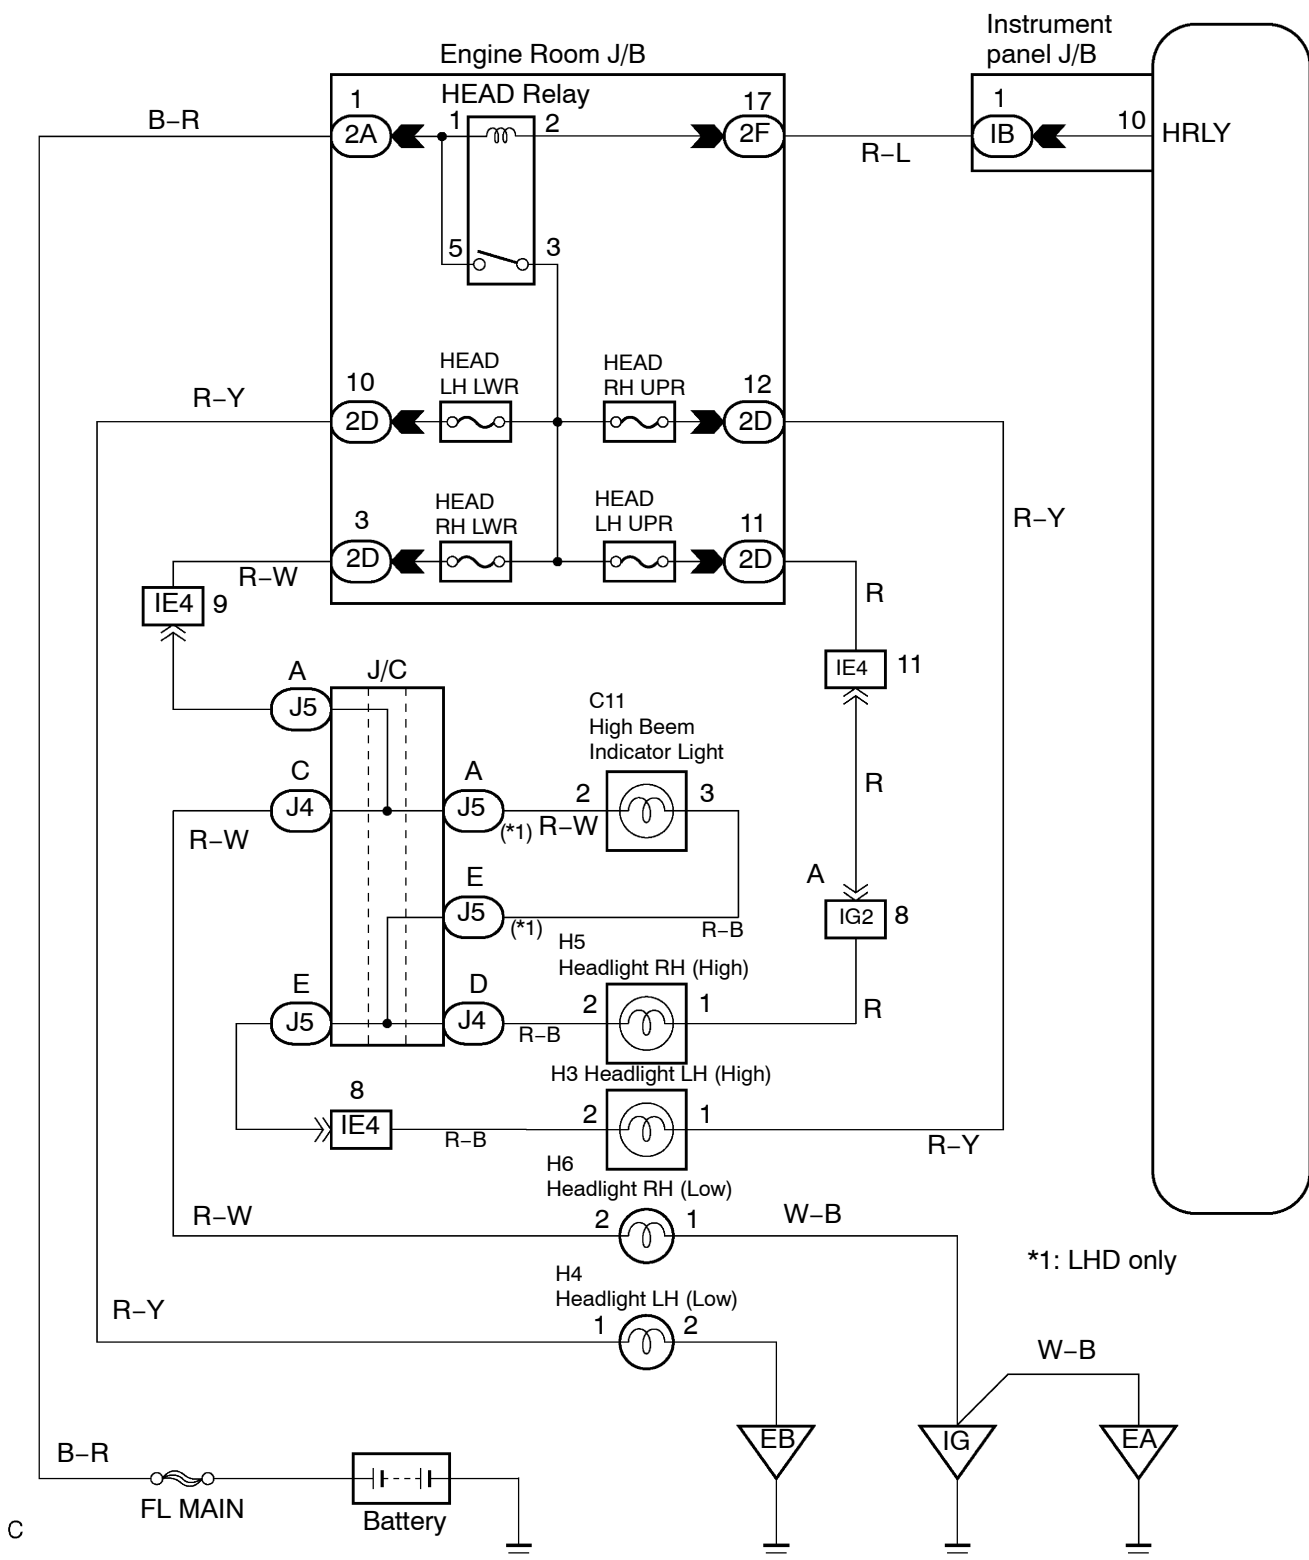

I14379

INSPECTION PROCEDURE

- | | |
|---|--|
| 1 | Check headlight dimmer relay (See page BE-18). |
|---|--|

NG

Replace the headlight dimmer relay.

OK

- | | |
|---|--|
| 2 | Check wireharness and connector between headlight dimmer relay and Body ECU, battery and headlight dimmer relay (See page DI-367). |
|---|--|

NG

Repair or replace wireharness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table (See page DI-355).
