


Light control switch circuit

CIRCUIT DESCRIPTION

This circuit defects the state of the light control switch.

WIRING DIAGRAM

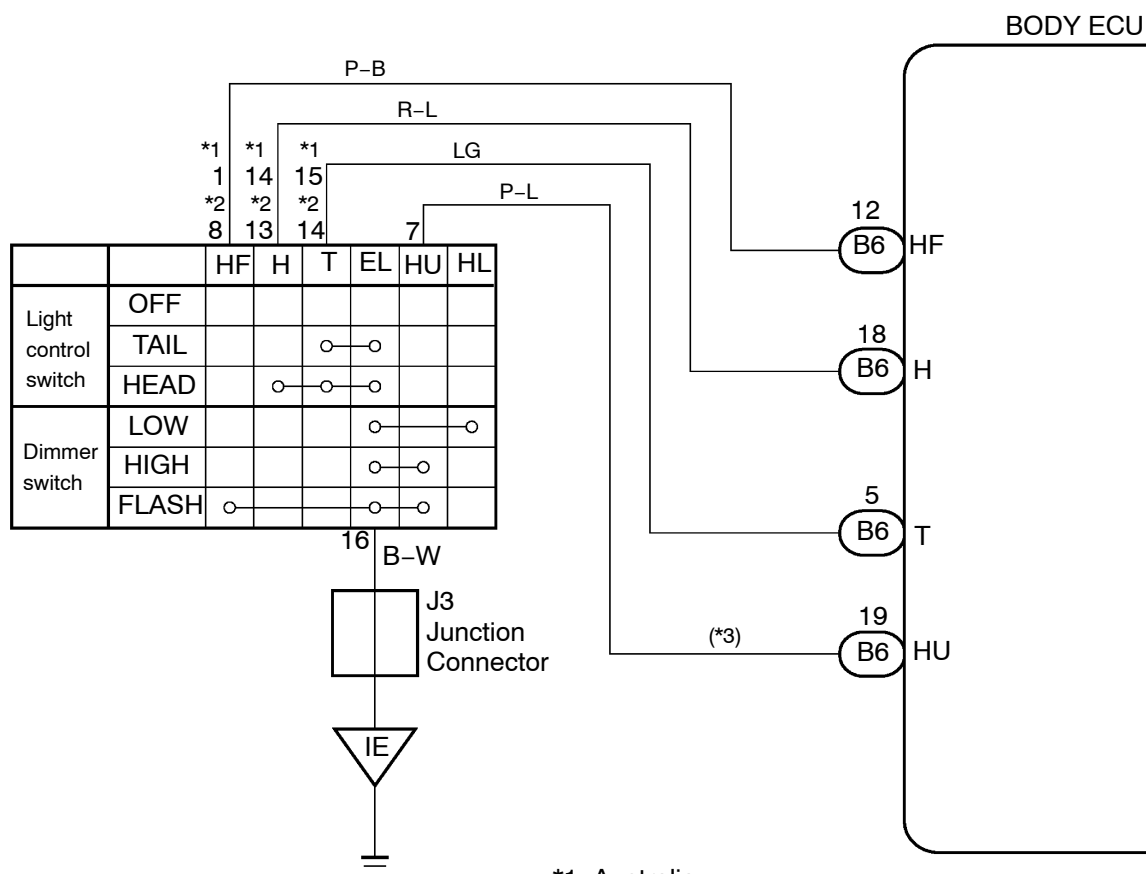

*1: Australia

*2: Except Australia

*3: LHD, w/ Daytime running light system

I13764

INSPECTION PROCEDURE

1 Check light control switch ([See page BE-18](#)).

NG

Replace the light control switch.

OK

2 Check wireharness and connector between light control switch and Body ECU ([See page IN-30](#)).

NG

Repair or replace wireharness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table ([See page DI-355](#)).