


Headlight dimmer switch circuit

CIRCUIT DESCRIPTION

This circuit defects the state of the headlight dimmer switch.

WIRING DIAGRAM

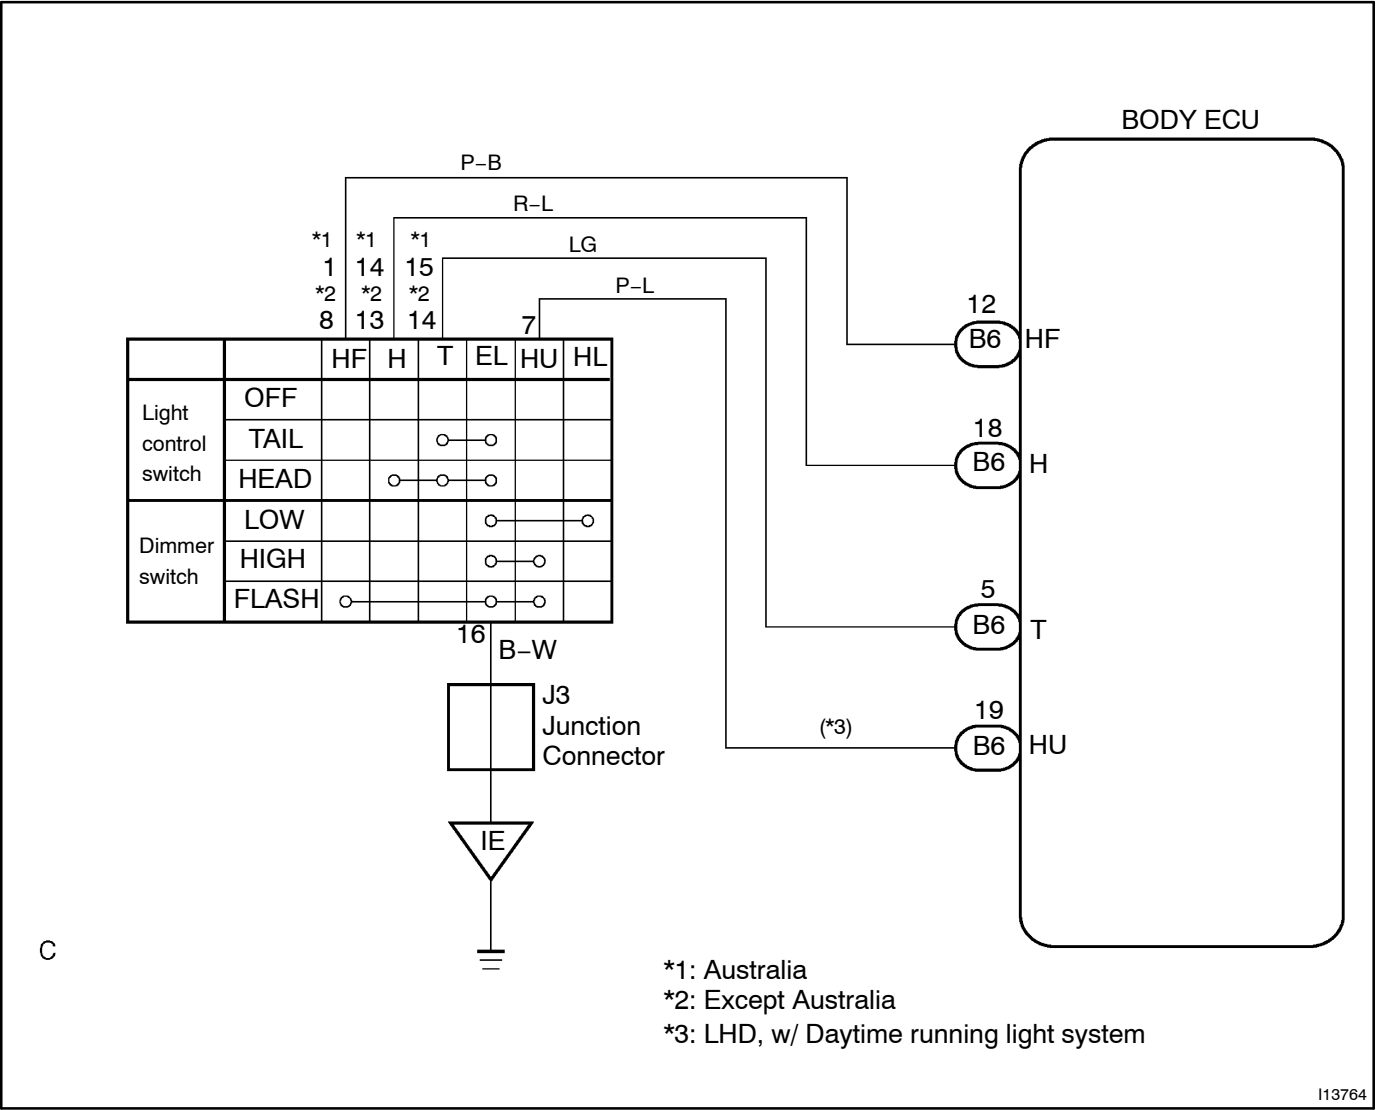

INSPECTION PROCEDURE

1 Check headlight dimmer switch ([See page BE-18](#)).

NG

Replace the headlight dimmer switch.

OK

2 Check wireharness and connector between headlight dimmer switch and Body ECU ([See page IN-30](#)).

NG

Repair or replace wireharness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table ([See page DI-355](#)).