


Front fog light relay circuit

WIRING DIAGRAM

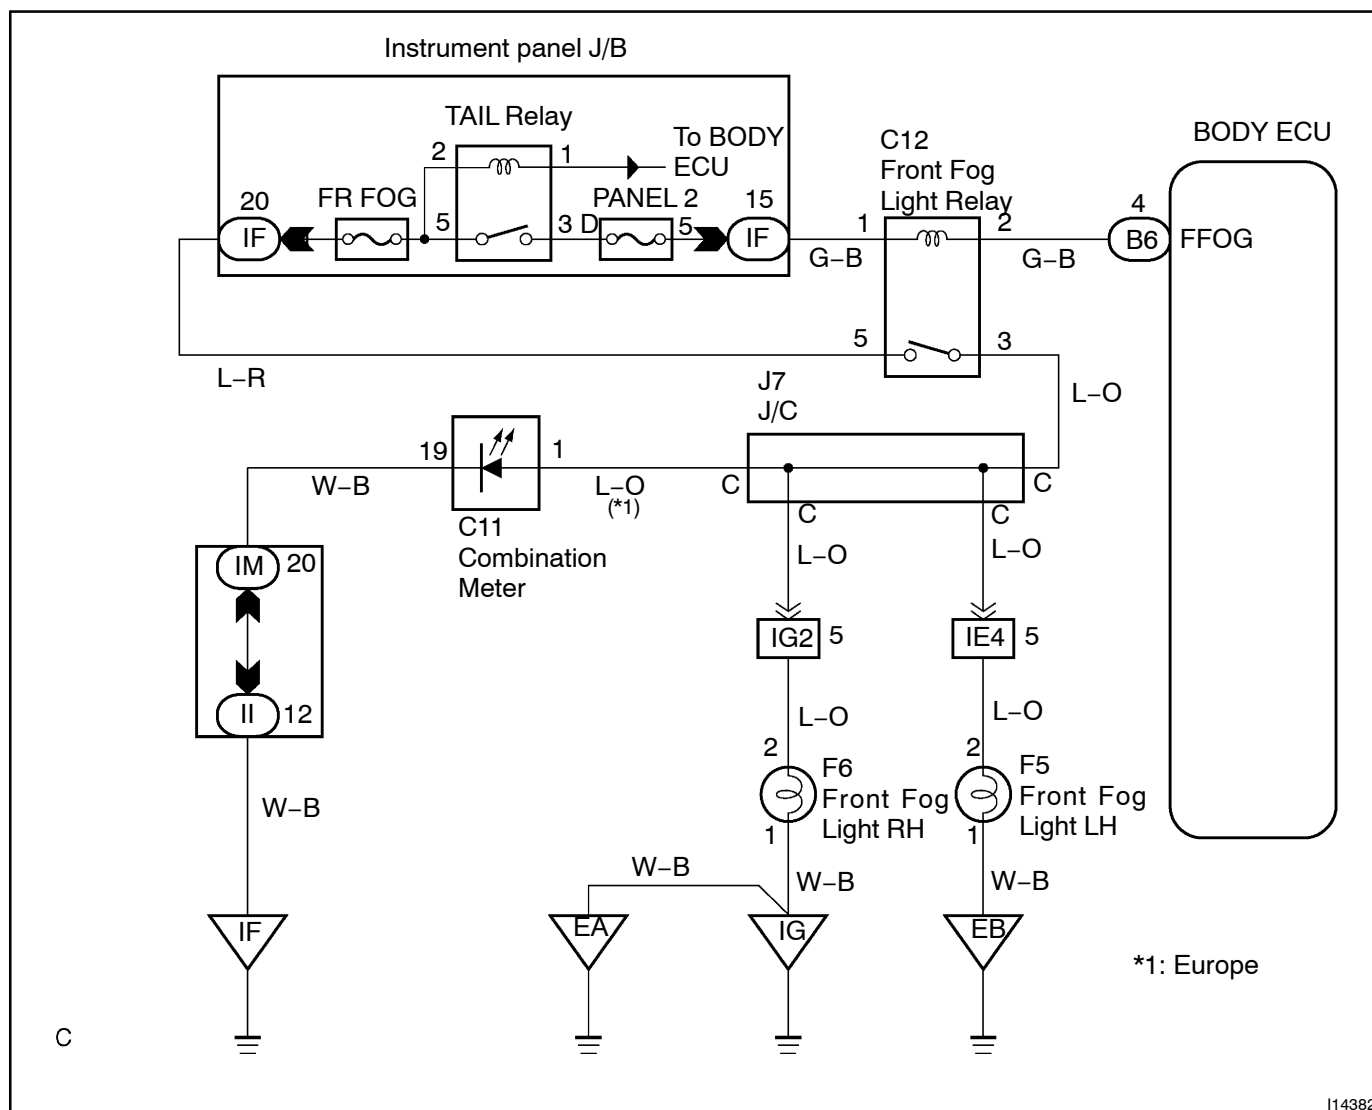

I14382

INSPECTION PROCEDURE

1 Check front fog light relay ([See page BE-25](#)).

NG

Replace the front fog light relay.

OK

2 Check wire harness and connector between front fog light relay and Body ECU ([See page DI-367](#)).

NG

Repair or replace wire harness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table ([See page DI-355](#)).