


Rear fog light switch circuit

WIRING DIAGRAM

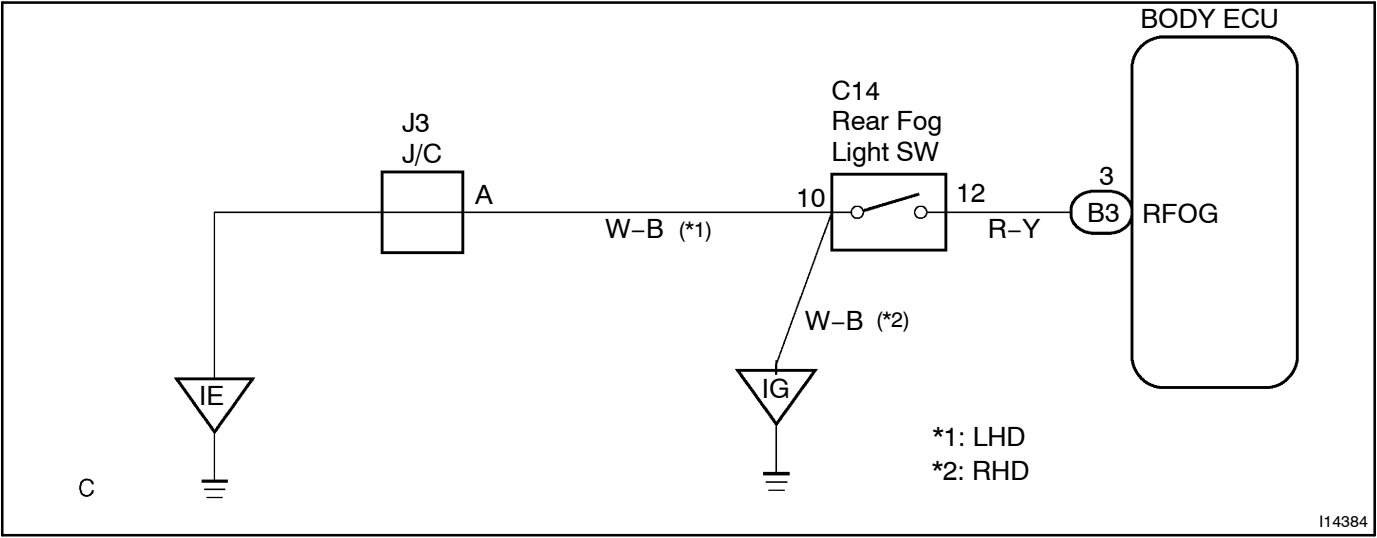

INSPECTION PROCEDURE

1	Check rear fog light switch (See page BE-25).
---	---

OK

NG

Replace the rear fog light switch.

2	Check wire harness and connector between rear fog light switch and Body ECU (See page IN-30).
---	---

OK

NG

Repair or replace wire harness or connector.

Proceed to next circuit inspection shown on problem symptoms table.
([See page DI-355](#))