


Rear fog light relay circuit

WIRING DIAGRAM

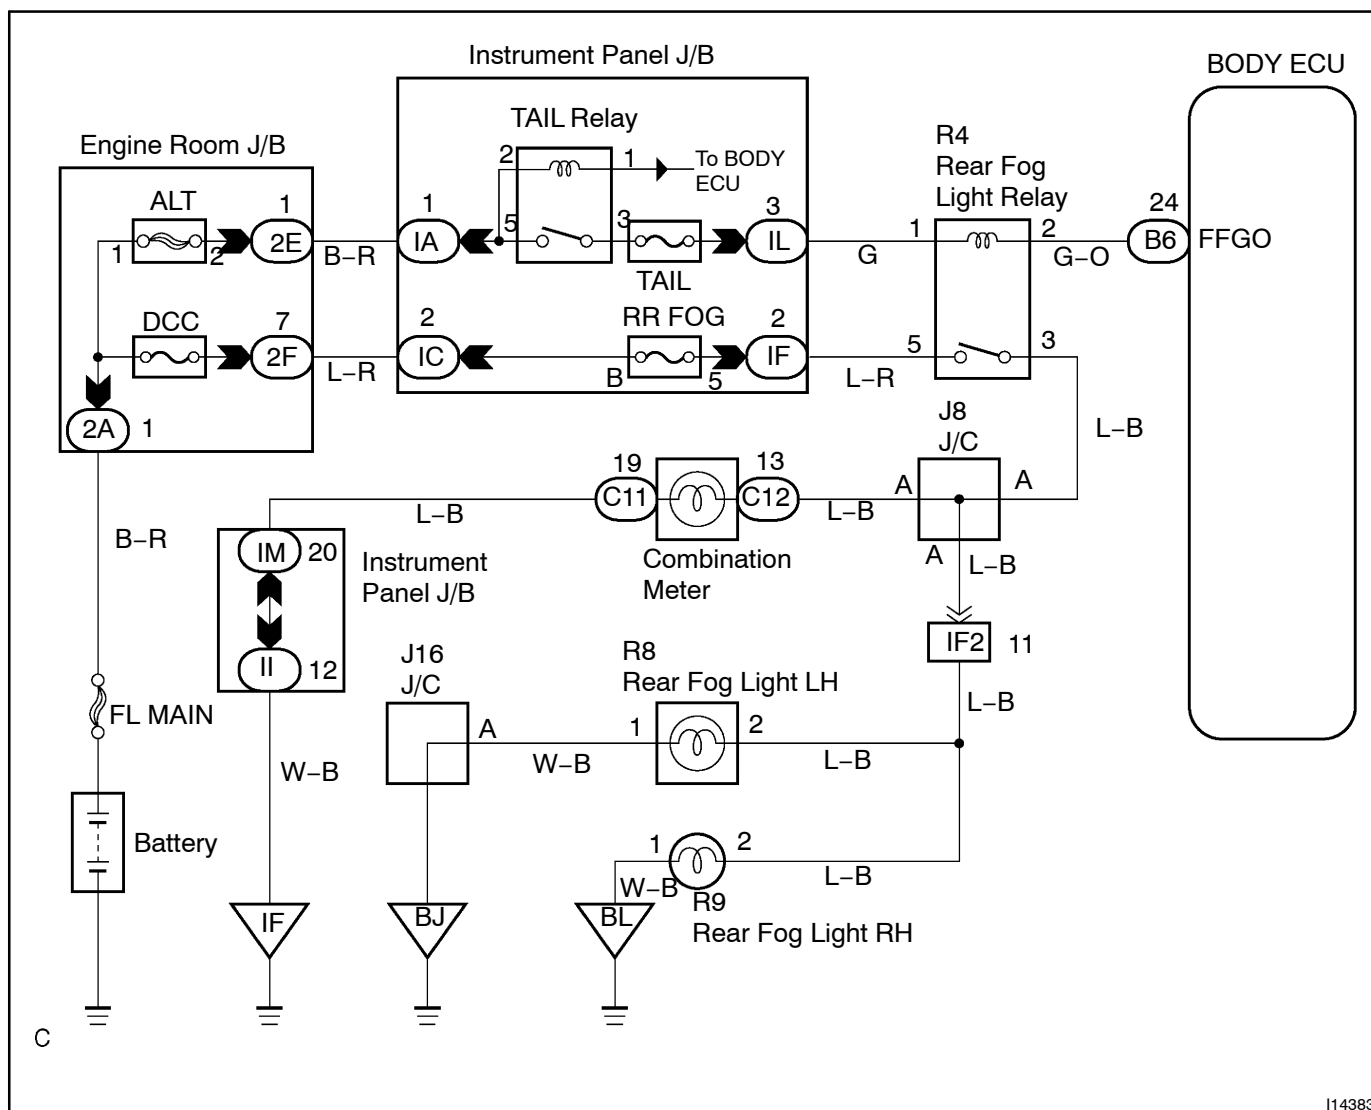

INSPECTION PROCEDURE

1 Check rear fog light relay ([See page BE-25](#)).

NG

Replace the rear fog light relay.

OK

2 Check wire harness and connector between rear fog light relay and Body ECU ([See page IN-30](#)).

NG

Repair or replace wire harness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table.
([See page DI-355](#))