


Turn signal flasher relay (Exept Australia) circuit

WIRING DIAGRAM

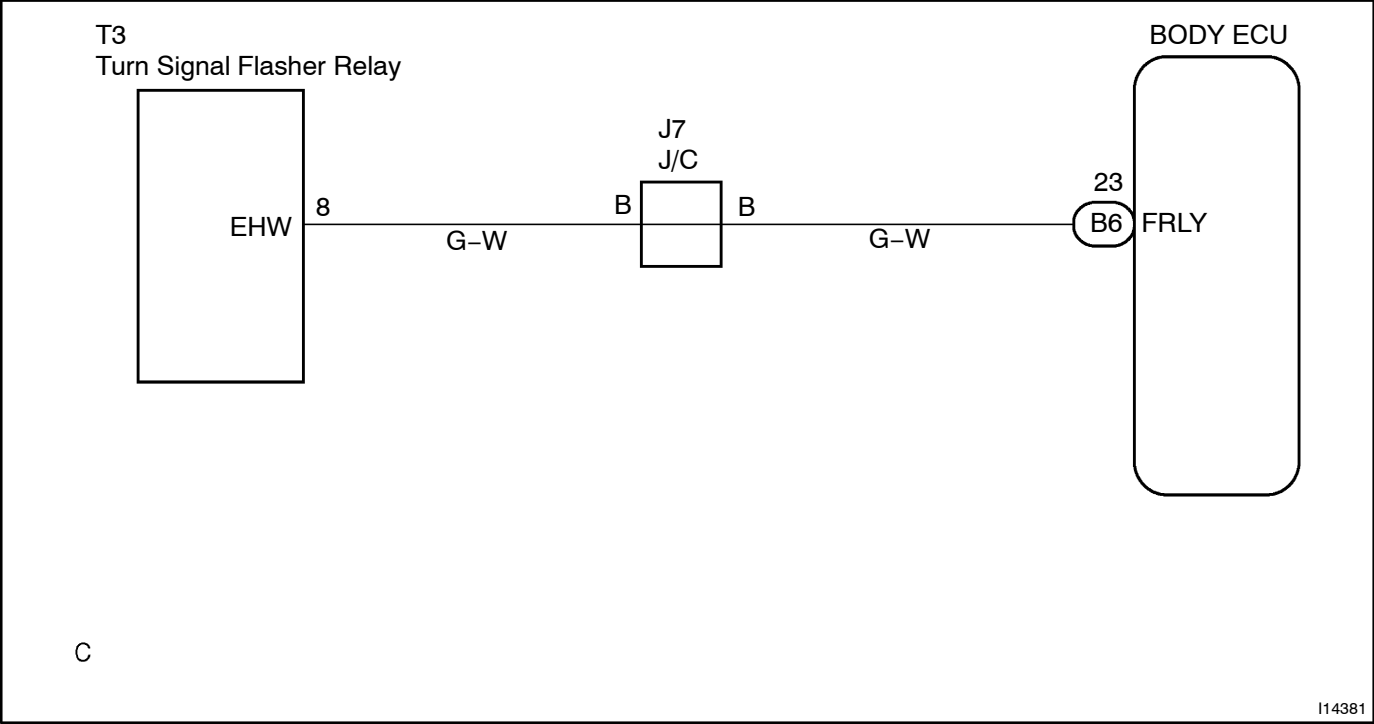

INSPECTION PROCEDURE

1 Check turn signal flasher relay ([See page BE-28](#)).

NG

Replace the turn signal flasher relay.

OK

2 Check wire harness and connector between turn signal flasher relay and Body ECU ([See page DI-367](#)).

NG

Repair or replace wire harness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table.
([See page DI-355](#))