


Illumination circuit


CIRCUIT DESCRIPTION

Receiving the courtesy signal from the Body ECU will make the interior light, ignition light, and courtesy light come on.

WIRING DIAGRAM

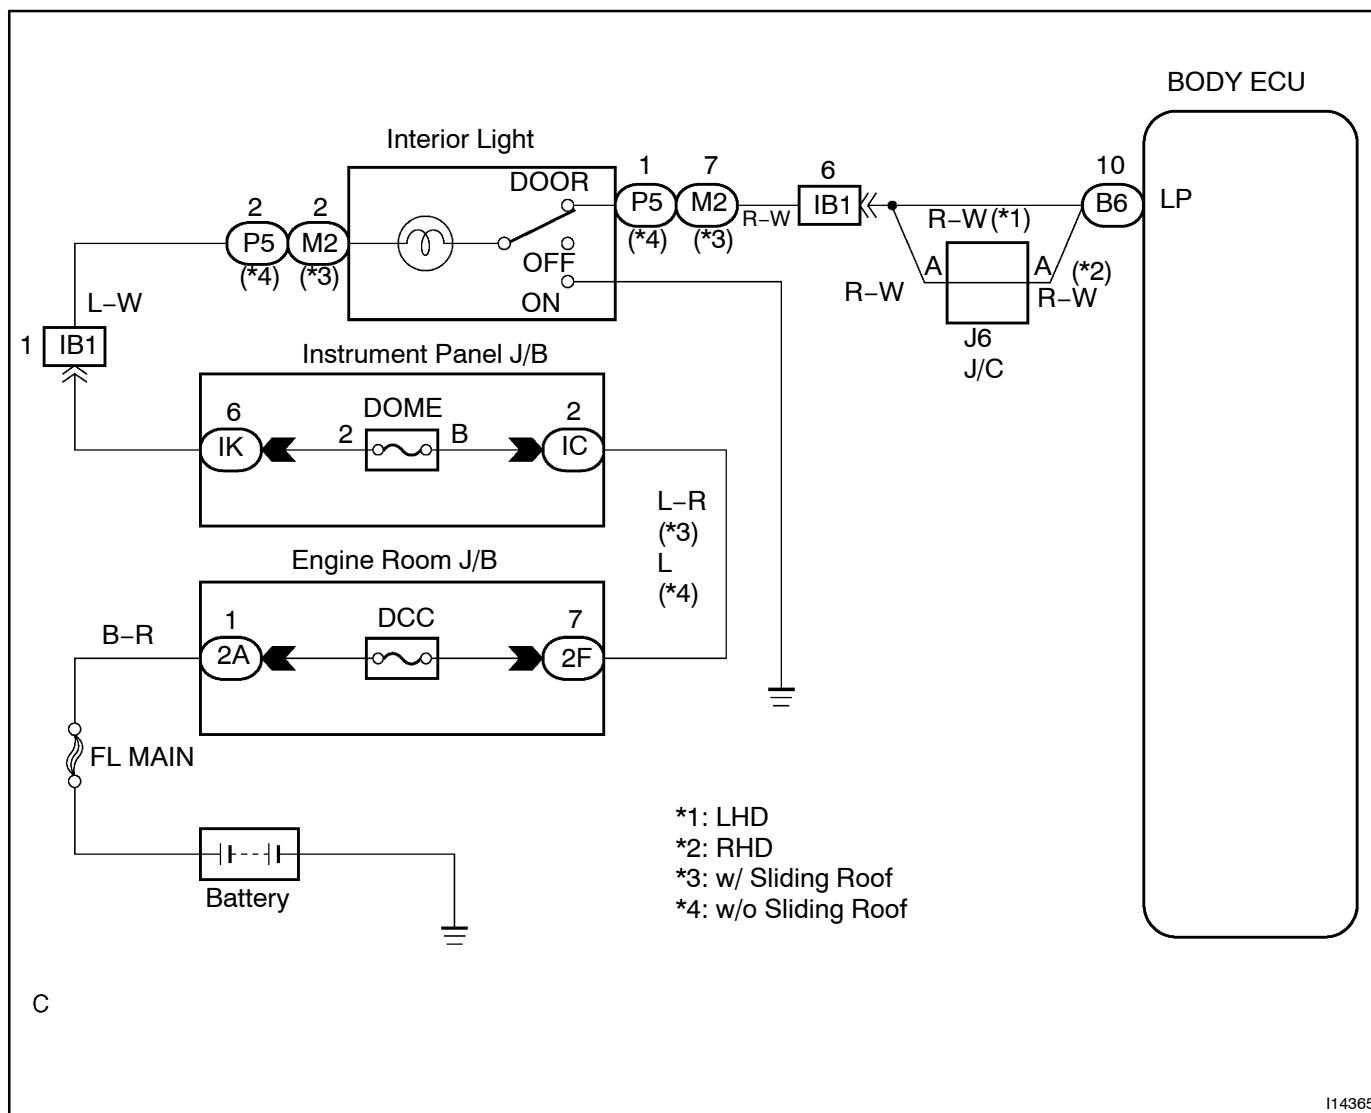

I14365

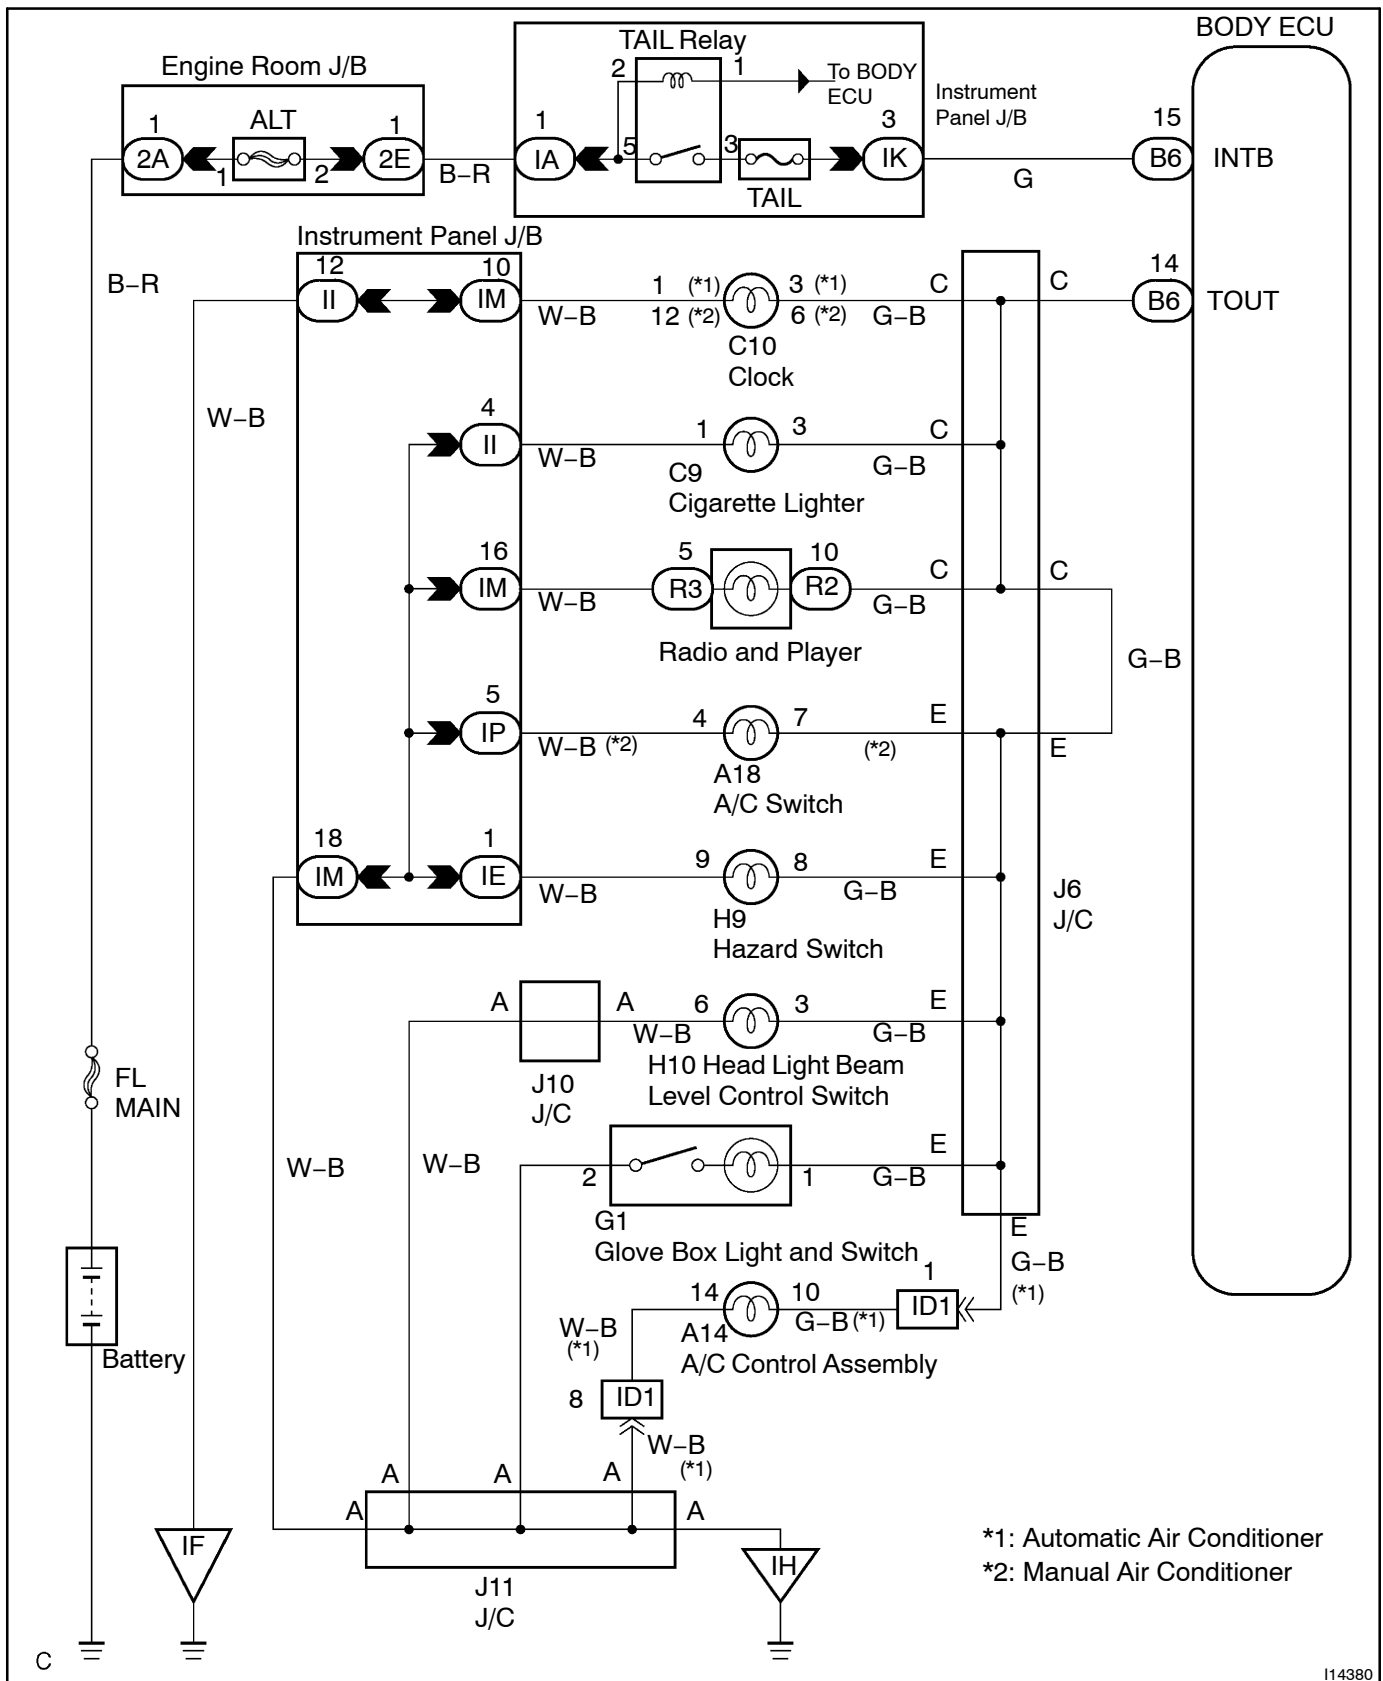

I14380

INSPECTION PROCEDURE**1 Check DOME fuse.****NG****Replace the fuse.****OK****2 Check illumination light.****NG****Replace the failure light.****OK****3 Check wireharness and connector between each illumination light and Body ECU, battery and each illumination light . ([See page IN-30](#))****NG****Repair or replace wireharness or connector.****OK****Proceed to next circuit inspection shown on problem symptoms table ([See page DI-355](#)).**