


Buckle switch circuit

CIRCUIT DESCRIPTION

When the buckle switch of the driver's seat is ON with the ignition switch ON, the body ECU sends a signal to make the seat belt warning light for the driver's seat light up and to sound a buzzer.

When the buckle switch of the passenger seat is ON and the passenger seat belt occupant detecting sensor is ON with the ignition switch ON, the body ECU sends a signal to make the seat belt warning light for the passenger seat light up.

WIRING DIAGRAM

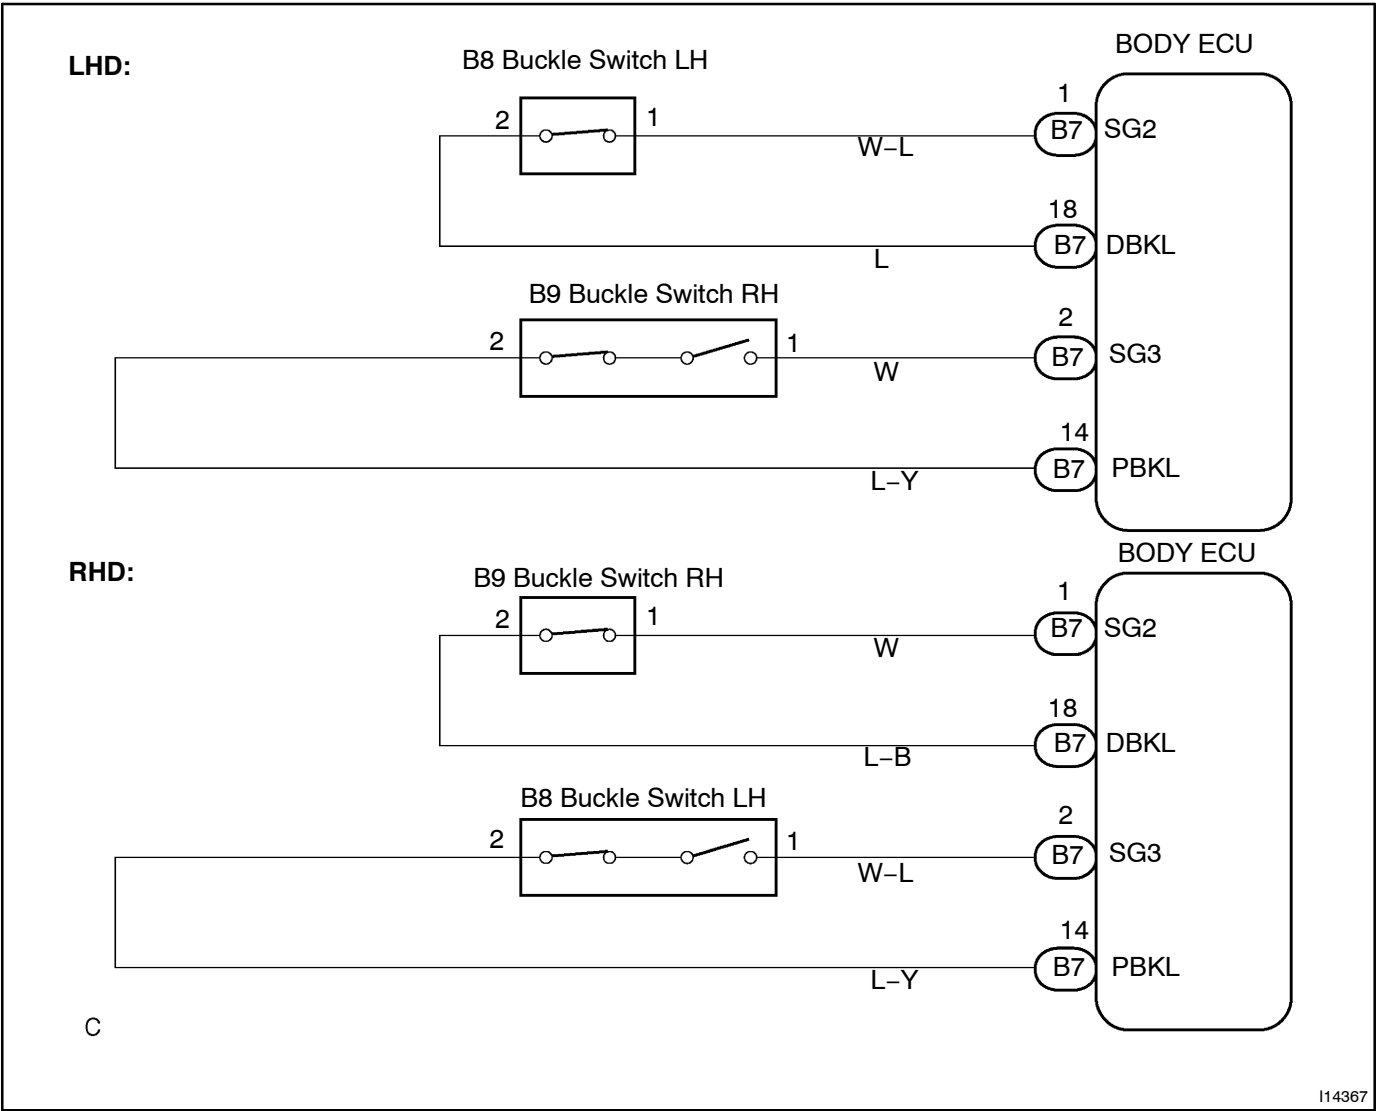

INSPECTION PROCEDURE

1 Check buckle switch. ([See page BE-52](#))

NG

Replace the buckle switch.

OK

2 Check wire harness and connector between buckle switch and body ground.
([See page IN-30](#))

NG

Repair or replace wire harness or connector.

OK

Proceed to next circuit inspection shown on
problem symptoms table.
([See page DI-355](#))