


PWS circuit

CIRCUIT DESCRIPTION

When the ignition switch is ON, or during the time from when the ignition switch is turned OFF till 43 sec. has elapsed or till the closed door is opened, the body ECU permits the operation of the power window and sliding roof.

WIRING DIAGRAM

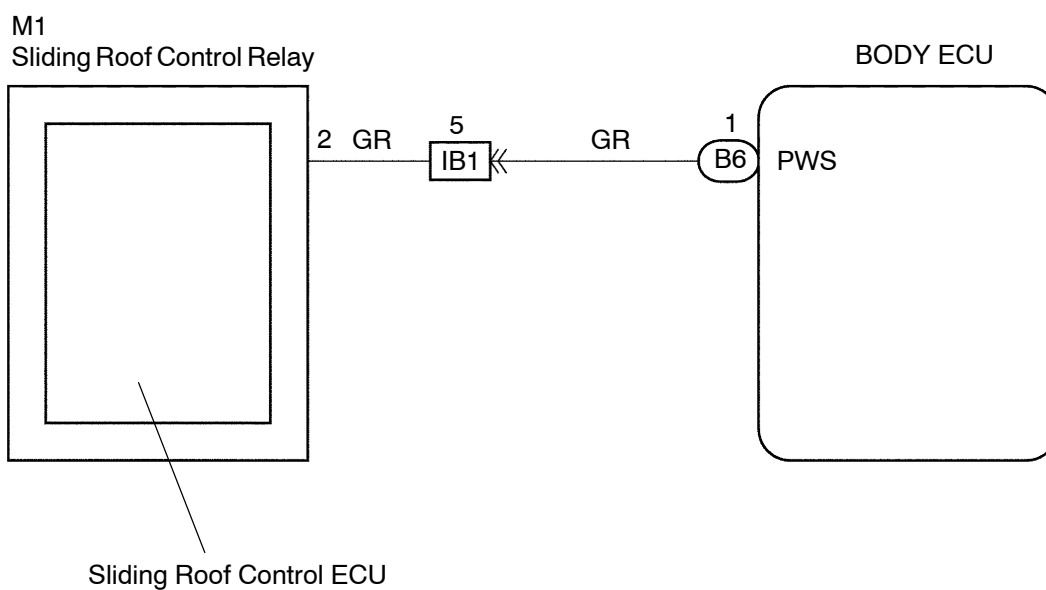

C

I13778

INSPECTION PROCEDURE

1	Check wireharness and connector between sliding roof control assembly and Body ECU (See page IN-30).
---	--

NG

Repair or replace wireharness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table ([See page DI-355](#)).