



## Power window master switch circuit

### CIRCUIT DESCRIPTION

This circuit detects the state of the power window master switch.
 
## WIRING DIAGRAM

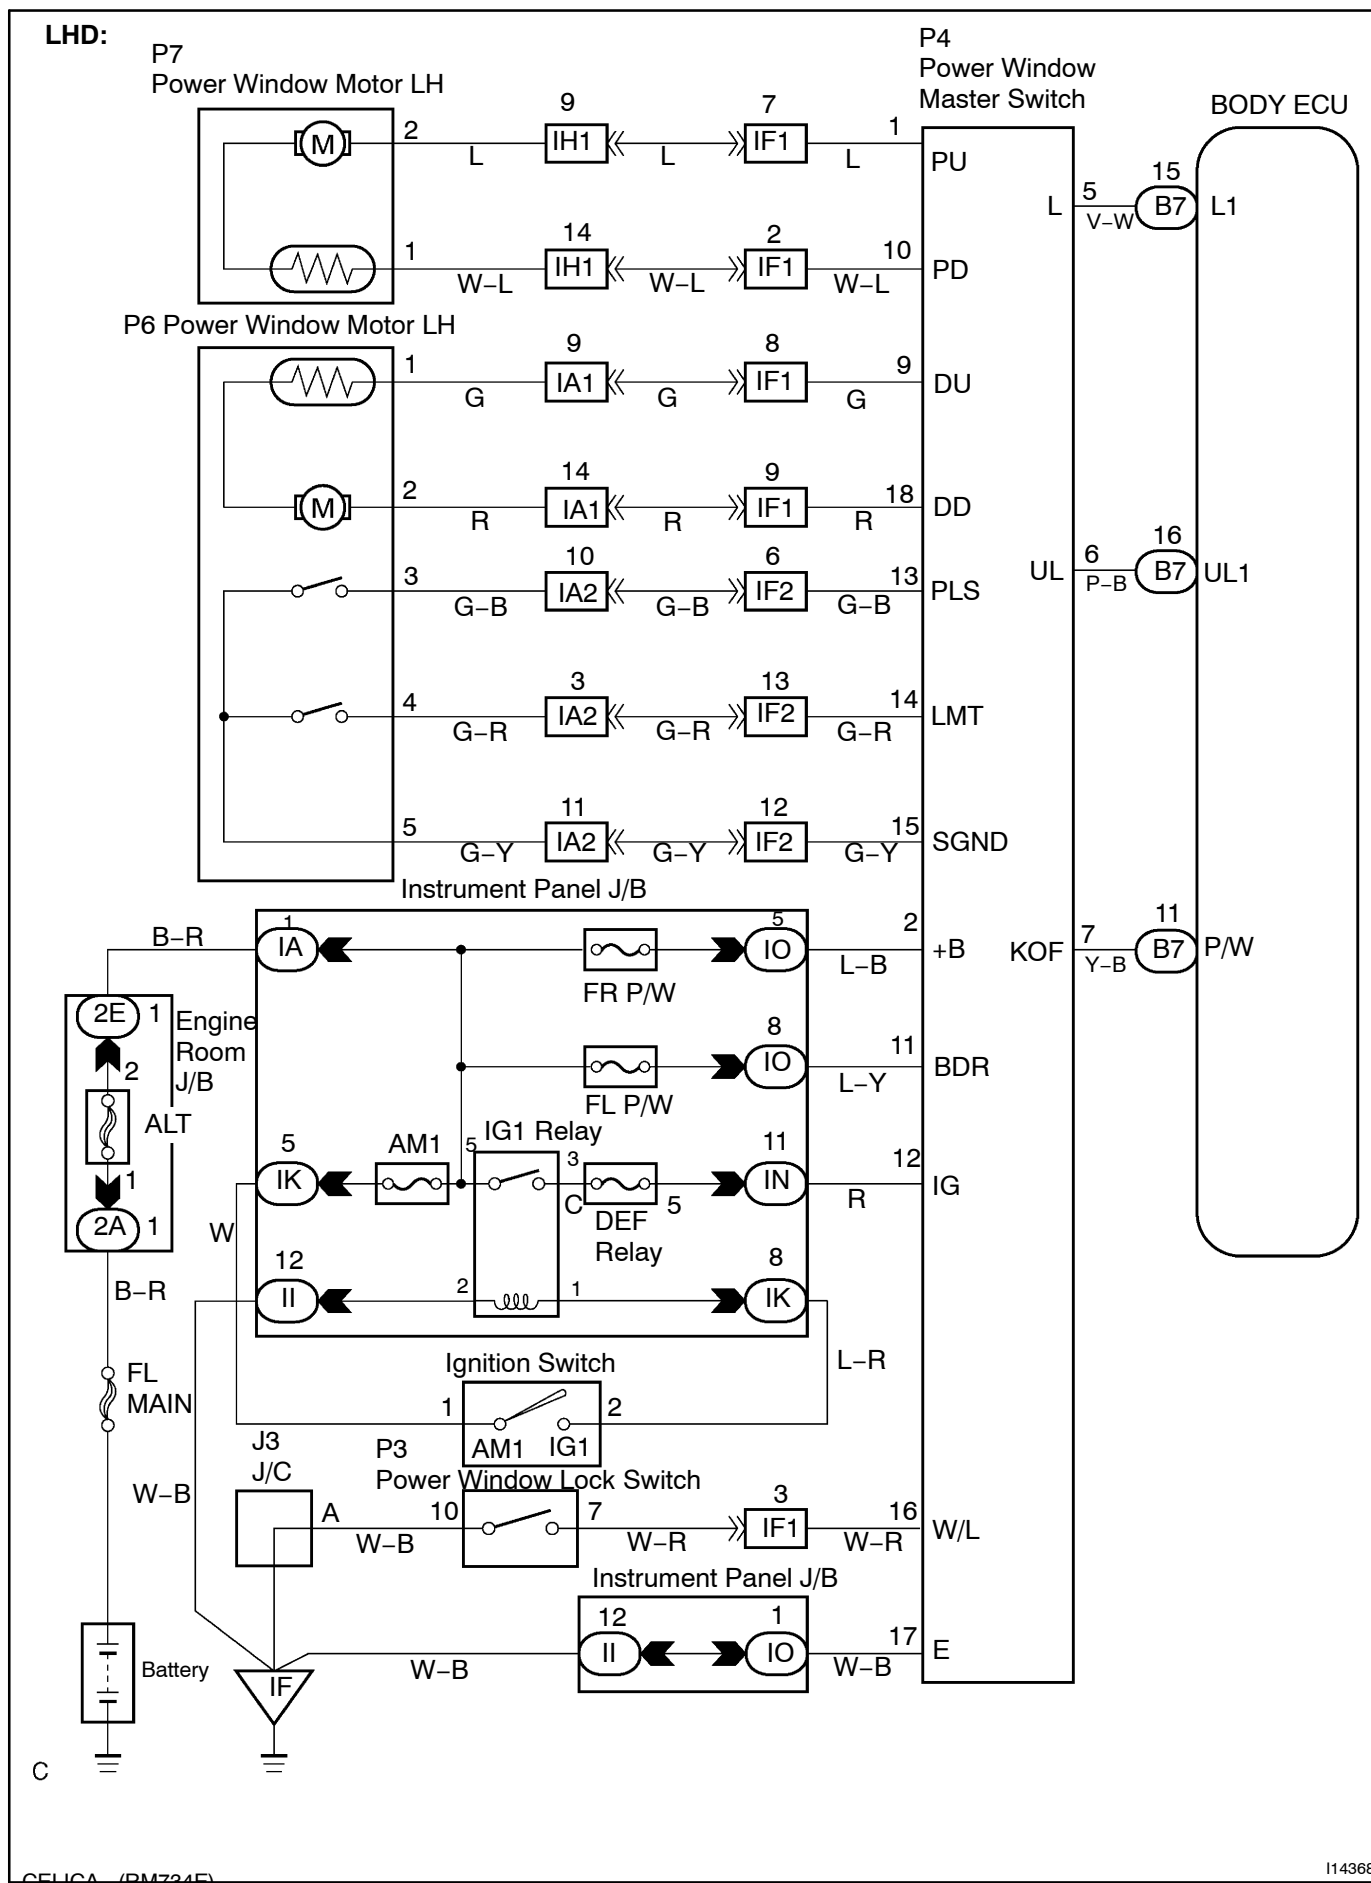



**INSPECTION PROCEDURE**

- |   |                                                                          |
|---|--------------------------------------------------------------------------|
| 1 | Check the power window master switch. ( <a href="#">See page BE-68</a> ) |
|---|--------------------------------------------------------------------------|

|    |
|----|
| NG |
|----|

|                                         |
|-----------------------------------------|
| Replace the power window master switch. |
|-----------------------------------------|

|    |
|----|
| OK |
|----|

- |   |                                                                                                                     |
|---|---------------------------------------------------------------------------------------------------------------------|
| 2 | Check wireharness and connector between power window master switch and body ECU. ( <a href="#">See page IN-30</a> ) |
|---|---------------------------------------------------------------------------------------------------------------------|

|    |
|----|
| NG |
|----|

|                                             |
|---------------------------------------------|
| Repair or replace wireharness or connector. |
|---------------------------------------------|

|    |
|----|
| OK |
|----|

|                                                                                                        |
|--------------------------------------------------------------------------------------------------------|
| Proceed to next circuit inspection shown on problem symptom table ( <a href="#">See page DI-355</a> ). |
|--------------------------------------------------------------------------------------------------------|