


Door lock motor circuit

CIRCUIT DESCRIPTION

When the door switch is set to LOCK, the body ECU outputs a signal to lock all of the doors.

WIRING DIAGRAM

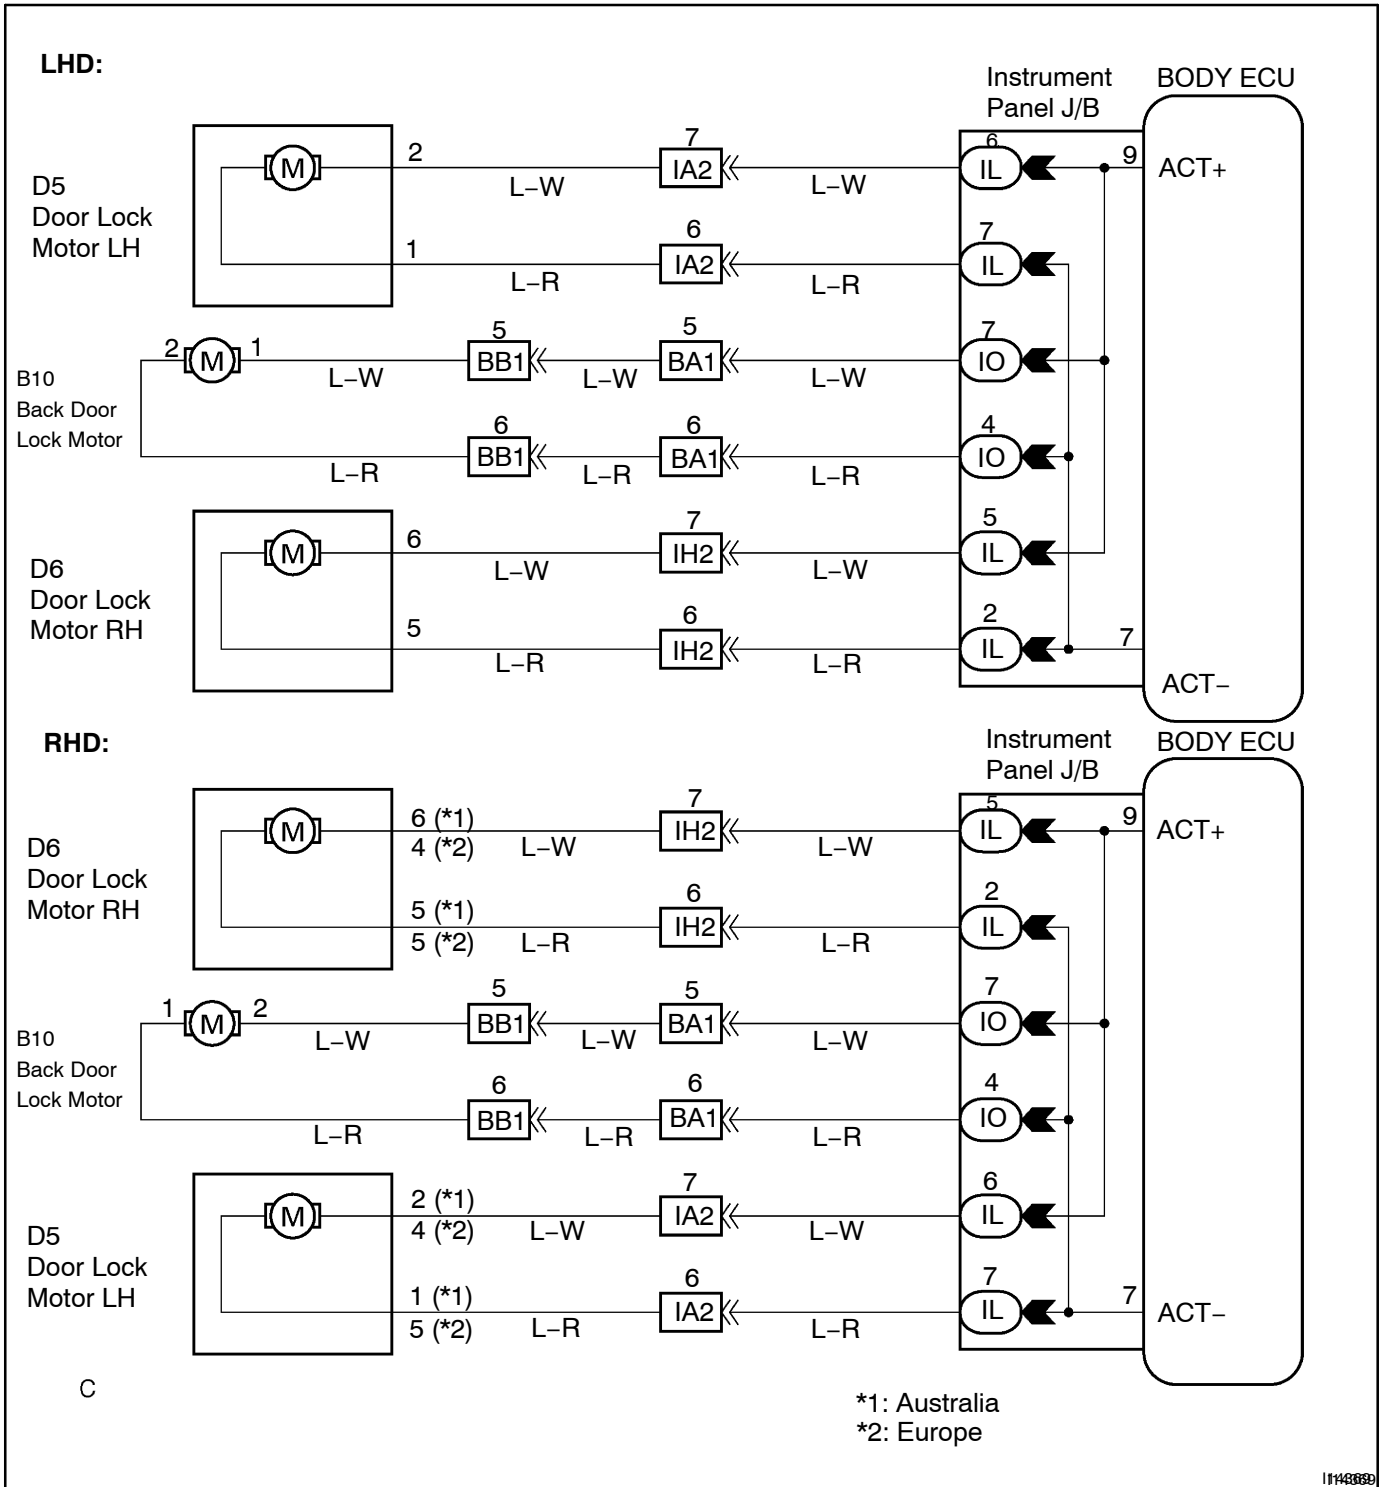

INSPECTION PROCEDURE

1 Check door lock motor ([See page BE-63](#)).

NG

Replace the door lock motor.

OK

2 Check wireharness and connector between door lock motor and body ECU ([See page IN-30](#)).

NG

Repair or replace wireharness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table ([See page DI-355](#)).