


Double lock motor circuit (Europe RHD)

WIRING DIAGRAM

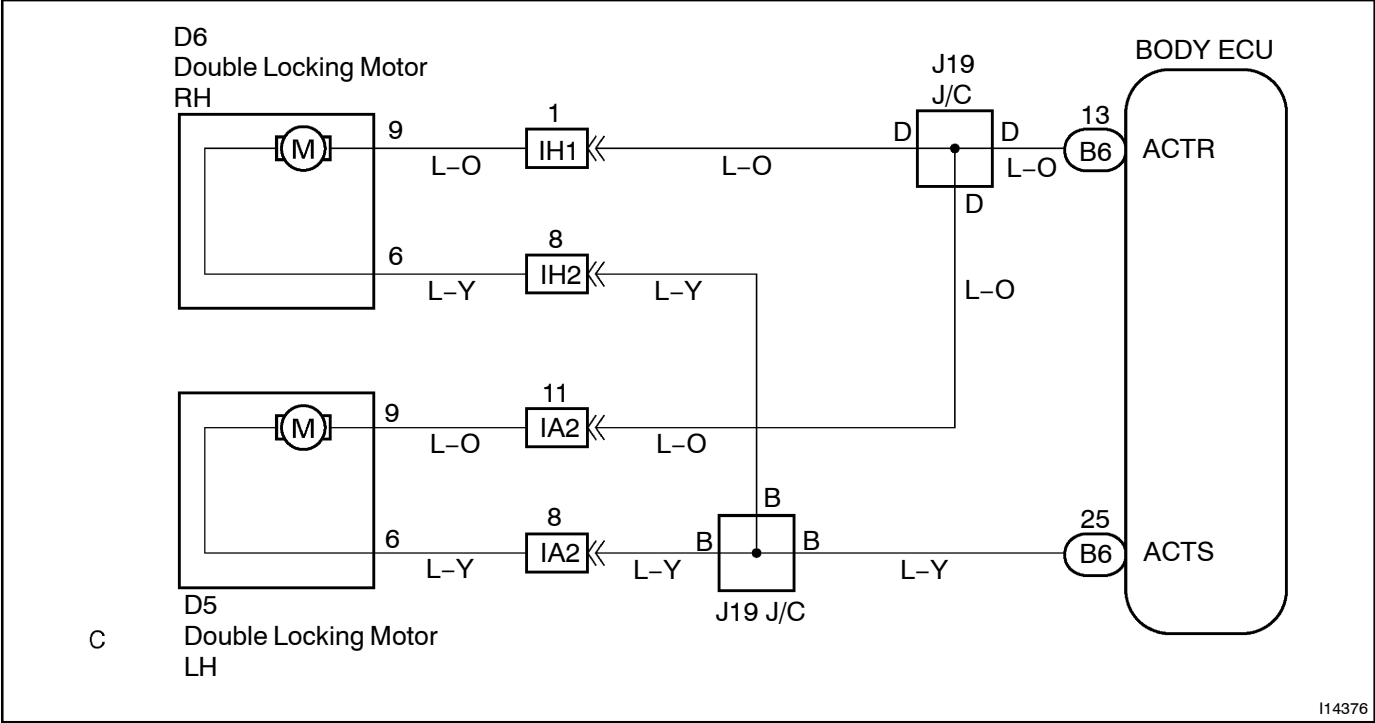

INSPECTION PROCEDURE

- | | |
|---|---|
| 1 | Check double lock motor (See page BE-82). |
|---|---|

NG

Replace the double lock motor.

OK

- | | |
|---|---|
| 2 | Check wireharness and connector between double lock motor and body ECU (See page DI-367). |
|---|---|

NG

Repair or replace wireharness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table (See page DI-355).
