


Door courtesy switch circuit

CIRCUIT DESCRIPTION

The door courtesy switch goes on when the door is opened and goes off when door is closed.

WIRING DIAGRAM

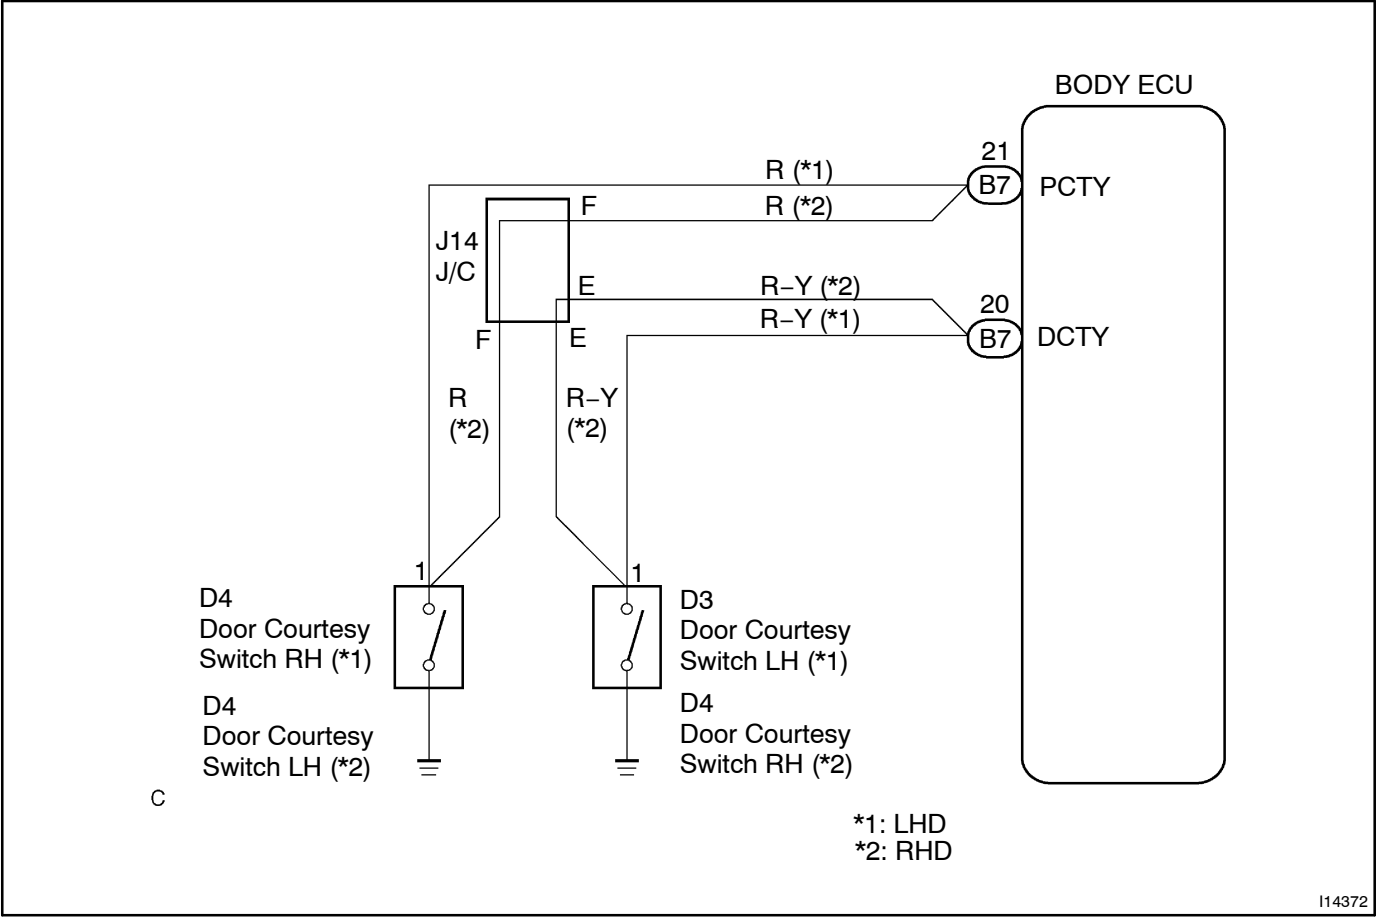

INSPECTION PROCEDURE

1 Check courtesy switch ([See page BE-31](#)).

NG

Replace the courtesy switch.

OK

2 Check that there is a grounding malfunction caused by looseness of the tighten screw.

NG

Install screw.

OK

3 Check wireharness and connector between courtesy light and body ECU, courtesy switch and body ECU. ([See page IN-30](#))

NG

Repair or replace wireharness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table ([See page DI-355](#)).