


CIRCUIT DESCRIPTION

WIRING DIAGRAM

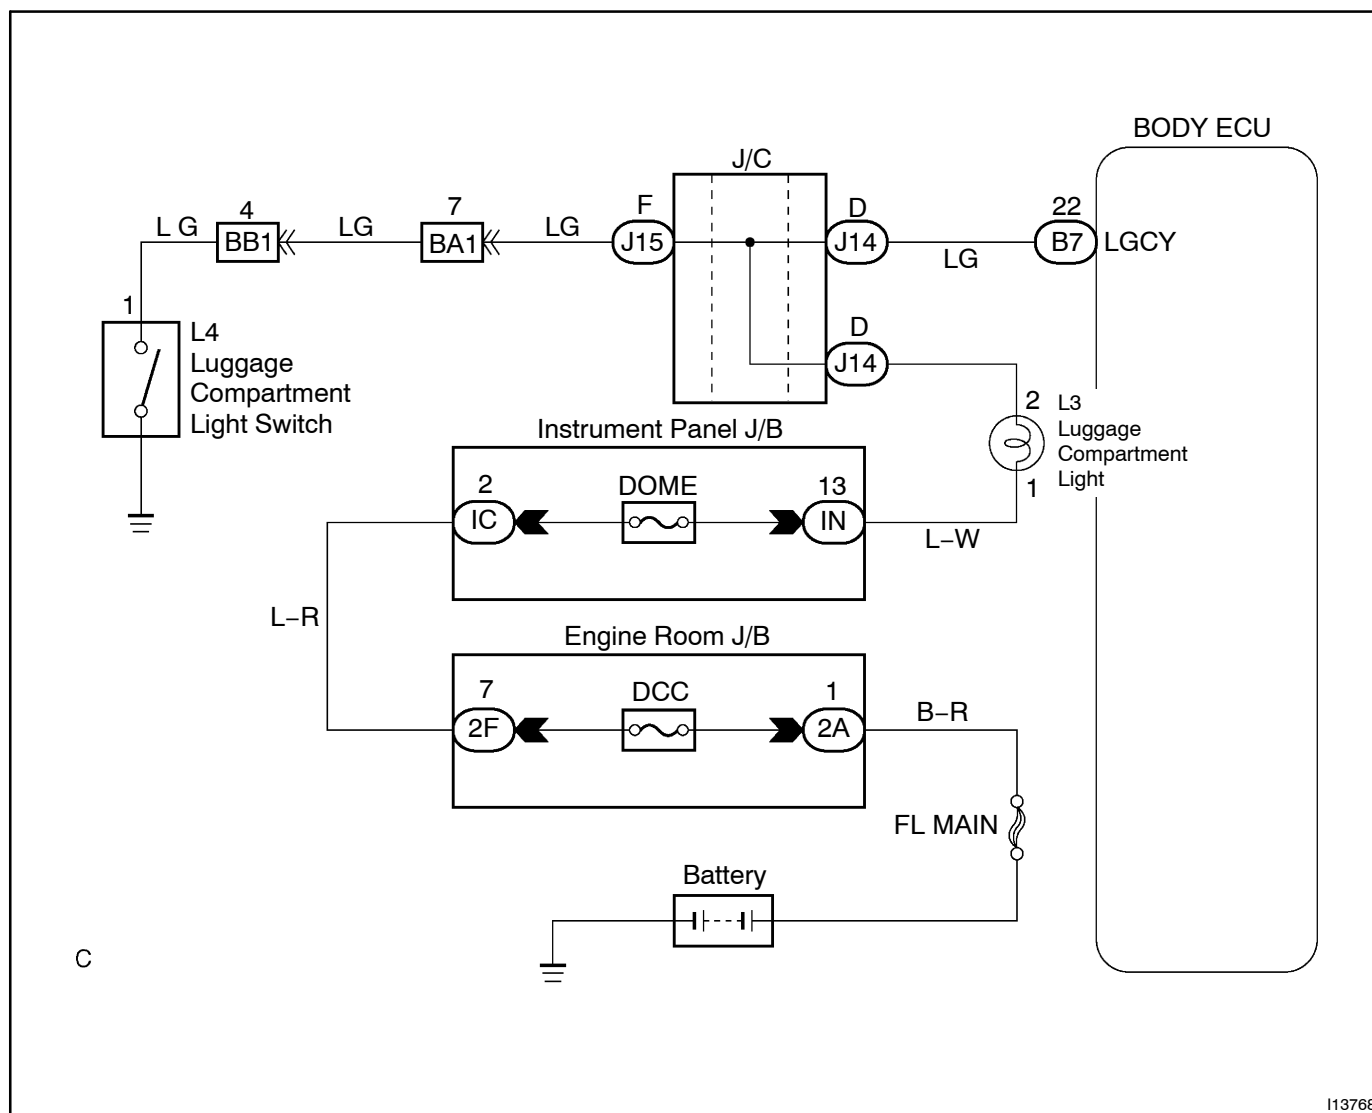

INSPECTION PROCEDURE

1 Check luggage courtesy switch ([See page BE-31](#)).

NG

Replace the luggage courtesy switch.

OK

2 Check wire harness and connector between luggage courtesy switch and Body ECU. ([See page IN-30](#))

NG

Repair or replace wire harness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table.
([See page DI-355](#))